

零件手册

Parts Manual

591

电脑自动剪线罗拉车

Computer automatic thread cutting roller


目录

Content

第二部分零件部分 Parts list


1. 机身部分 Housing sections	22
2. 机头部分(1) Needle head parts(1)	24
3. 机头零件(2) Needle head parts(2)	28
4. 机头零件(3) Needle head parts(3)	30
5. 机头零件(4) Needle head parts(4)	32
6. 机头零件(5) Needle head parts(5)	34
7. 机臂部分(1) Arm part(1)	36
8. 机臂部分(2) Arm part(2)	38
9. 机臂部分(3) Arm part(3)	40
10. 机臂部分(4) Arm part(4)	42
11. 底板部分(1) Bedplate parts(1)	44
12. 底板部分(2) Bedplate parts(2)	46
13. 底板部分(3) Bedplate parts(3)	48
14. 底板部分(4) Bedplate parts(4)	50
15. 左旋梭座(1) Hook post, left(1)	52
16. 左旋梭座(2) Hook post, left(2)	56
17. 右旋梭座(1) Hook post, right(1)	58
18. 右旋梭座(2) Hook post, right(2)	60
19. 送料轮座 Feed wheel post	64
20. 送料轮托板 Feed wheel mounting plate	68
21. 倒缝装置 Backtacking mechanism	70
22. 倒缝装置 Backtacking mechanism	72
23. 剪线结构 Thread timmer	74
24. 剪线结构 Thread timmer	76
25. 自动拍压脚 Automatic presser foot lifter	78
26. 电控 Elecetric control	80
27. 附件(1) Accessories components. (1)	82
28. 附件(2) Accessories components. (2)	84
29. 步进款专用件 Stepper motor parts	86

1. 机身部件 Housing sections

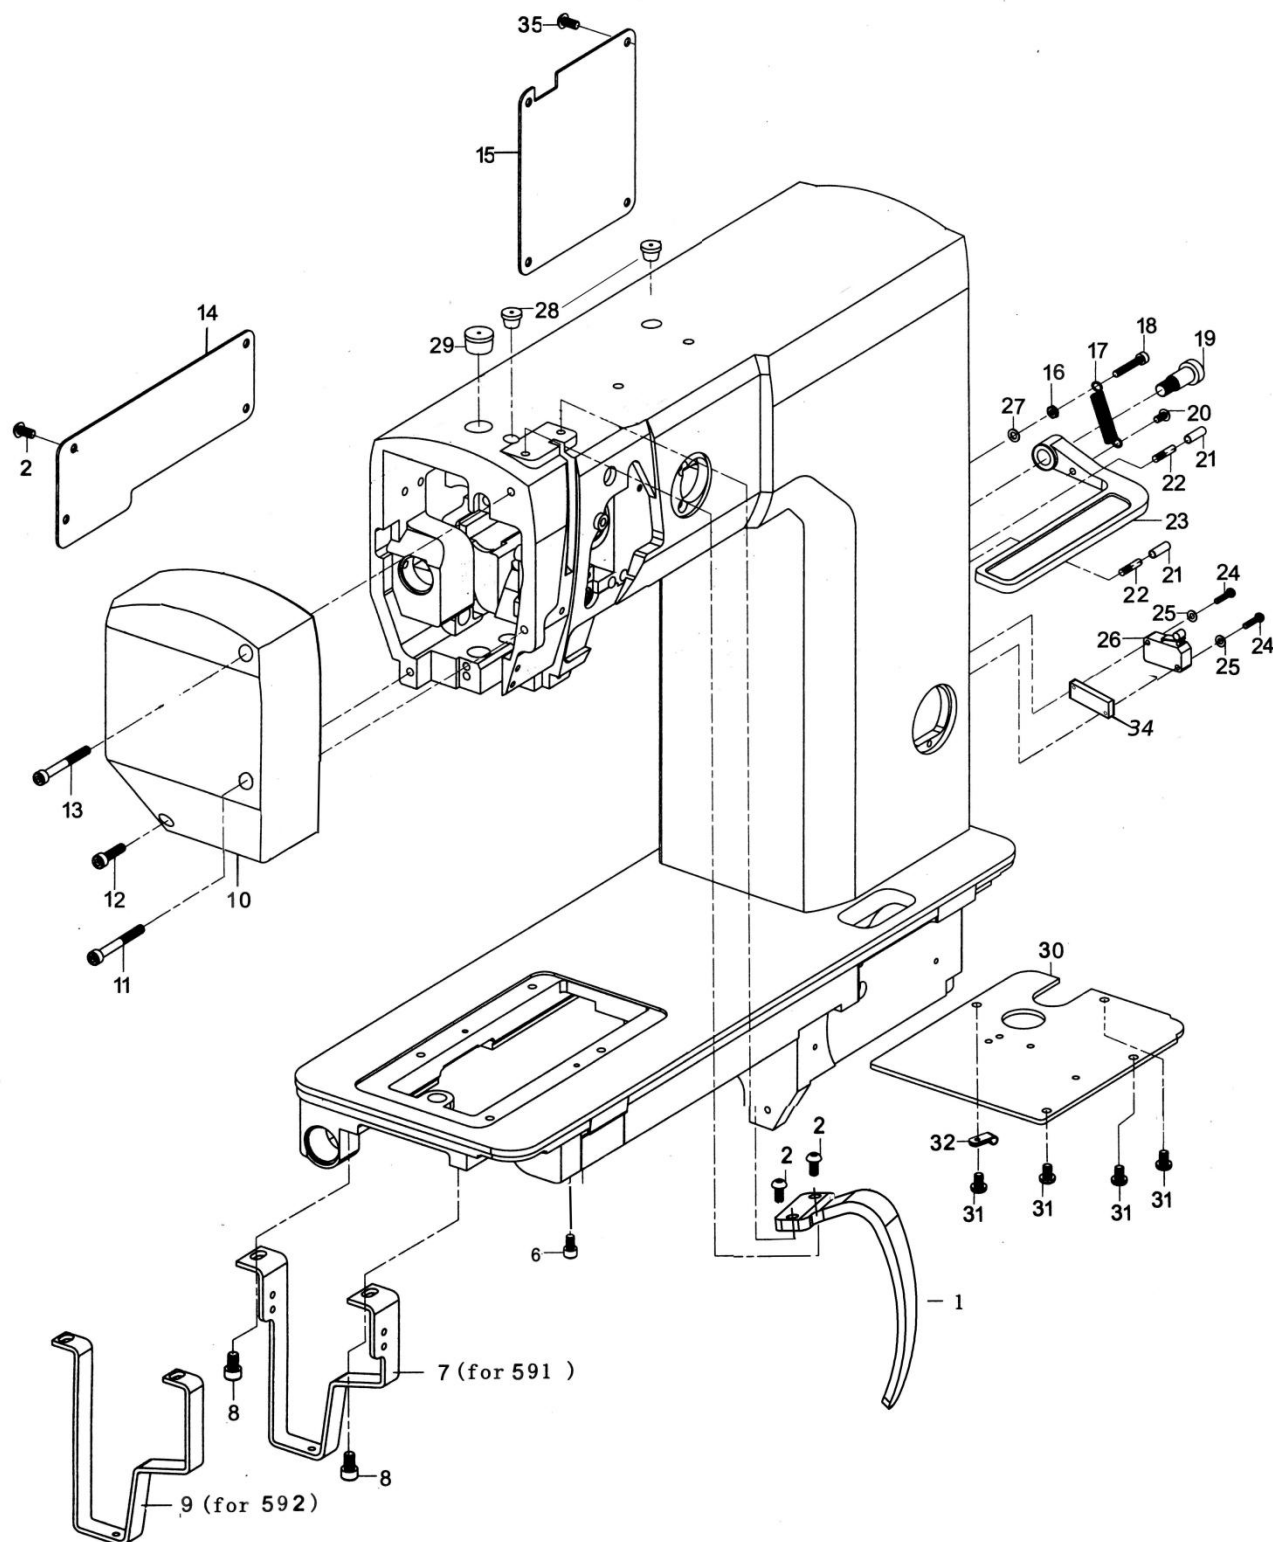


Per. No	Part No	名称	Description	Qty
01	PFNA0101	防护罩	protecting mask	1
02	PFNA0102	螺钉 M5x10	Screw M5x10	8
05	PFNA0105	支板	Trestle board	1
06	PFNA0106	螺钉 M6x10	Screw M6x 10	1
07	PFNA0107	支脚（591 专用）	Bracket (For 591)	1
08	PFNA0106	螺钉 M6x10	Screw M6x 10	2
09	PFNB0109	支脚（592 专用）	Bracket (For 592)	1
10	PFNA011001	一体机面板	Panel	1
11	PFNA0111	螺钉 M5x60	Screw M5x60	1
12	PFNA0112	螺钉 M5x25	Screw M5x25	1
13	PFNA0113	螺钉 M5x70	Screw M5x78	1
14	PFNA0114	后盖前板	Back cover board painting	1
15	PFNA0115	后盖板	Back cover board	1
16	PFNA0116	螺母 M4	NUT M4	1
17	PFNA0117	脚杆动轴曲柄拉簧	Spring	1
18	PFNA0118	螺钉 M4x25	Screw M4x25	1
19	PFNA0119	轴位螺钉（特殊）	Screw M5x12	1
20	PFNA0120	螺钉 M4x6	Screw M4x6	1
21	PFNA0121	油管 $\Phi 3 \times \Phi 5$	Oil pipe $\Phi 3 \times \Phi 5$	2
22	PFNA0122	限位螺钉 M4x8（特殊）	Screw M4x8	2
23	PFNA012301	倒缝扳手	Spanner of reversal stitch	1
24	PFNA0124	螺钉 M3x20	Screw M3x14	2
25	PFNA0125	垫圈 $\Phi 3$	Washer	2
26	PFNA0126	倒缝点动开关	Power switch	1
27	PFNA0127	垫圈 $\Phi 4$	Washer $\Phi 4$	1
28	PFNA0128	油塞	Oil dam	4
29	PFNA0129	油塞	Oil dam	1
30	PFNA0130	板	plate	1
31	PFNA0131	螺钉 M5X10	Screw M5X8	3
32	SCJ5033	SN-3A 夹头	Clamp	1
33	035NA0133B	机壳	Enclosure	1
34	PFNA0134	电动开关垫块	Electric switch pad	1
35	PFNA0135	螺钉 M5x16	Screw M5x 16	2

2. 机头零件(1) Needle head parts (1)

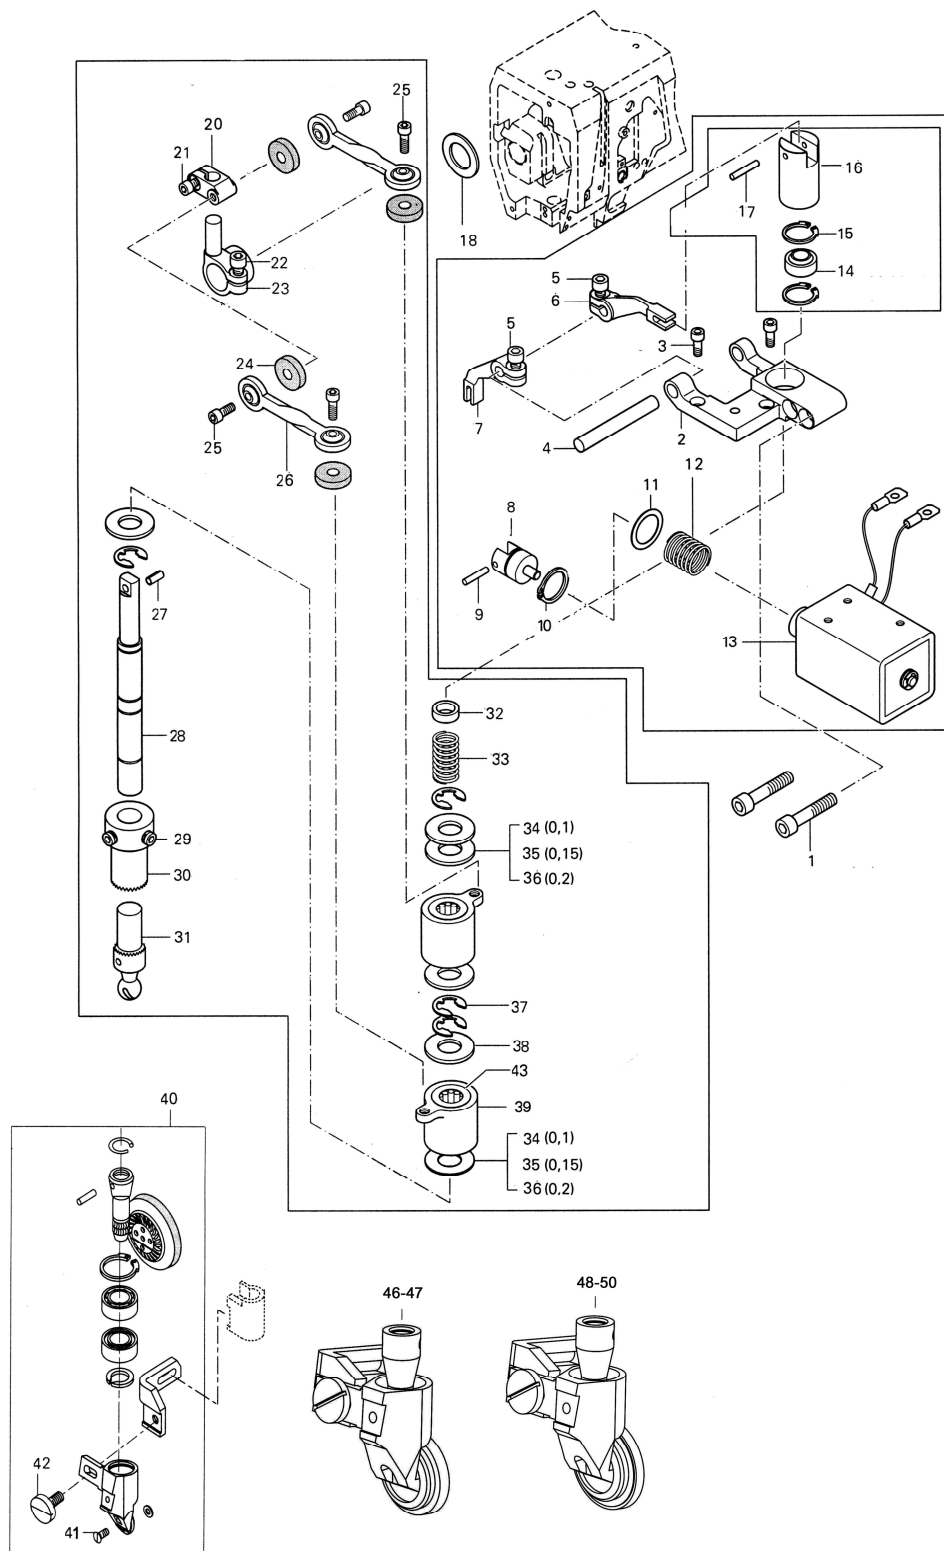

Per. No	Part No	名称	Description	Qty
01	PFNA0201	螺钉 M6X30	Screw	2
02	PFNA0202	电磁铁安装板	Electromagnet plate	1
03	PFNA0325	螺钉 M4x10	Screw M4x10	2
04	PFNA0204	平头滚针	Needle roller	1
05	PFNA0131	螺钉 M5x10	Screw M5x10	2
06	PFNA0206	杠杆 1	HEBEL	1
07	PFNA0207	杠杆 2	HEBEL	1
08	PFNA0208	U 形夹	Gabelkopf	1
09	PFNA0209	连杆轴销 4x18	Pin 4x18	1
10	PFNA0210	卡圈 C16	Collar	1
11	PFNA0211	垫圈	Washer	1
12	PFNA0212	缓冲弹簧	Pressure spring	1
13	PFNA0213	一体机滚轮联接电磁铁	Bobbin join electromagnet	1
14	PFNA0214	宛形曲柄轴承	Crank bearing	1
15	PFNA0215	挡圈	Retaining ring	2
16	PFNA0216	衬套	BUSHING	1
17	PFNA0217	销轴	Pin	1
18	PFNA0218	垫片 15.1x24.5x1.5	Washer 15.1x24.5x1.5	1
20	PFNA0220	万向联接座	Base frame	1
21	PFNA0203	螺钉 M4x10	Screw M4x 10	1
22	PFNA0131	螺钉 M5x10	Screw M5x 10	1
23	PFNA0223	万向联接头	Union	1
24	PFNA0224	油毡垫片	Felt	4
25	PFNA0325	螺钉 M4x10	Screw M4X10	4
26	PFNA0226	球连杆组件	Ball connecting rod	2
27	SCJ4020	销 3x10	Pin 3x10	1
28	PFNA0228	滚轮联接上节轴	Roller wheel coupling spindle	1
29	PFNA0229	螺钉 M6x0.75x5	Screw M6X5	2
30	PFNA0230	连接轴上节齿轮	Wheel Gear	1
31	PFNA0231	滚轮下节轴组件	Lower segement	1
32	PFNA0232	垫圈	WASHER	1
33	PFNA0233	滚轮联接轴压簧	Pressure spring	1
34	PFNA0234	调整垫片 A	Adjusting washer A	4
35	PFNA0235	调整垫片 B	Adjusting washer B	4
36	PFNA0236	调整垫片 C	Adjusting washer C	4
37	SCJ1013	卡圈 E8	Collar	4
38	PFNA0238	轴承座垫片	washer	4
39	PFNA0239	轴承座组件	bearing seat asm	2
40	PFNA0240	Φ 28 滚轮压脚组件	Φ 30 Idler wheel foot asm	1


2. 机头零件(1) Needle head parts (1)

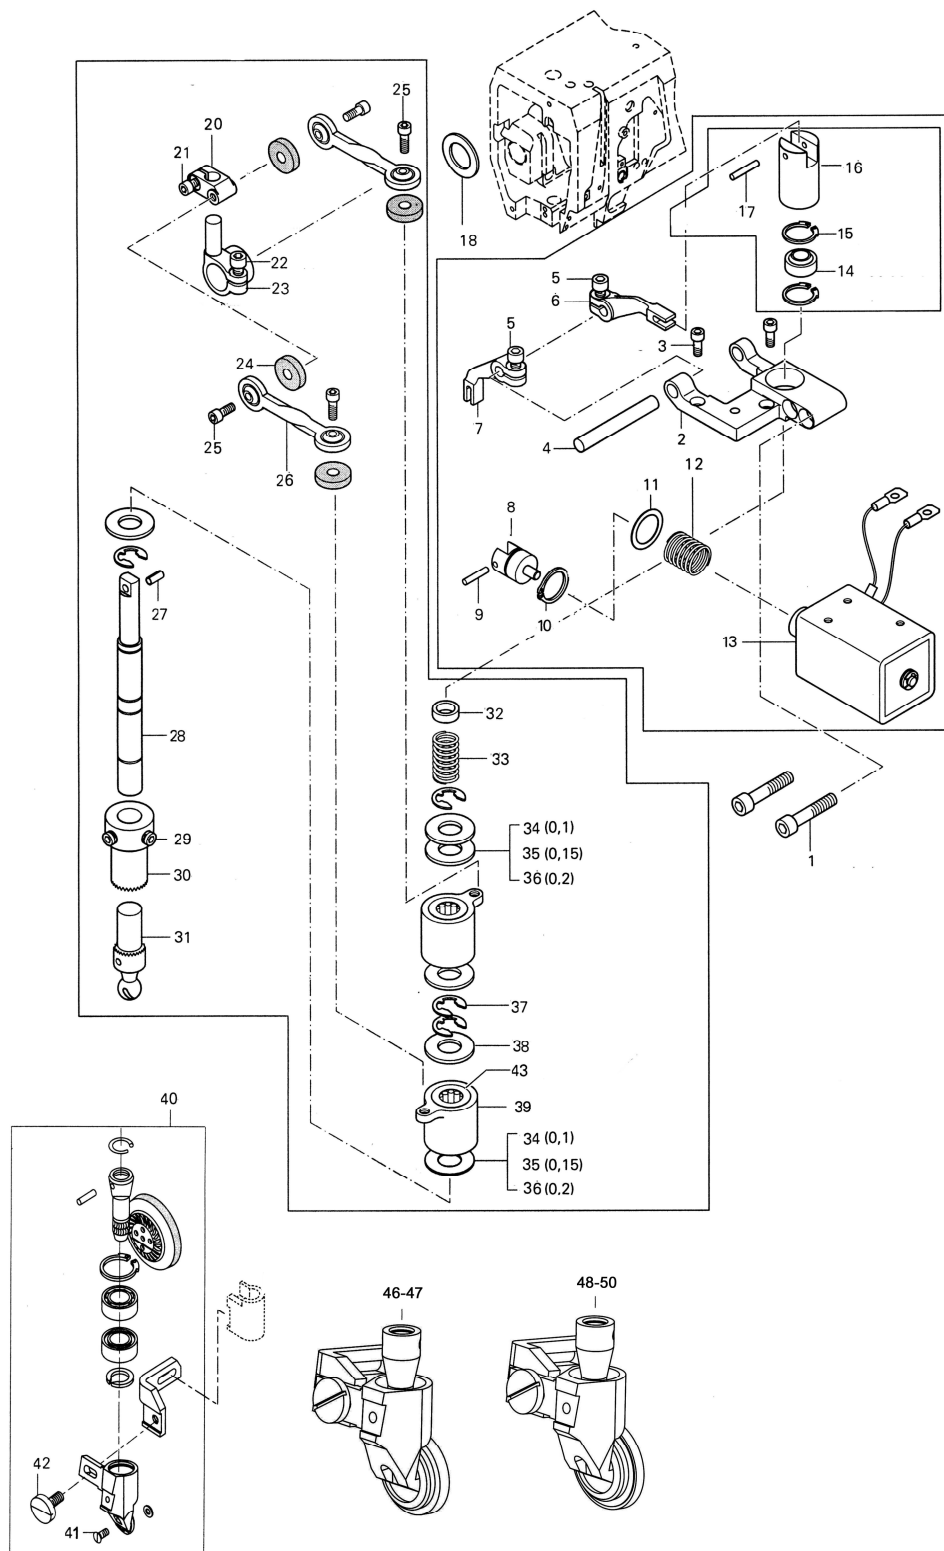

Per. No	Part No	名称	Description	Qty
41	PFNA0241	螺钉 M4x8	Screw M4x8	1
42	PFNA0242	螺钉 M2. 5x6	Screw M2. 5x6	1
43	PFNA0243	单向轴承	One way bearing	4
46	PFNA0246	Φ 30 滚轮压脚组件	Φ 30 Idler wheel foot asm	1
47	PFNA0247	Φ 26 滚轮压脚组件	Φ 26 Idler wheel foot asm	1
48	PFNA0248	Φ 26 滚轮压脚组件(橡胶款)	Φ 26 Idler wheel foot asm(rubber type)	1
49	PFNA0249	Φ 28 滚轮压脚组件(橡胶款)	Φ 28 Idler wheel foot asm(rubber type)	1
50	PFNA0250	Φ 30 滚轮压脚组件(橡胶款)	Φ 30 Idler wheel foot asm(rubber type)	1


3. 机头零件(2)

Needle head parts (2)

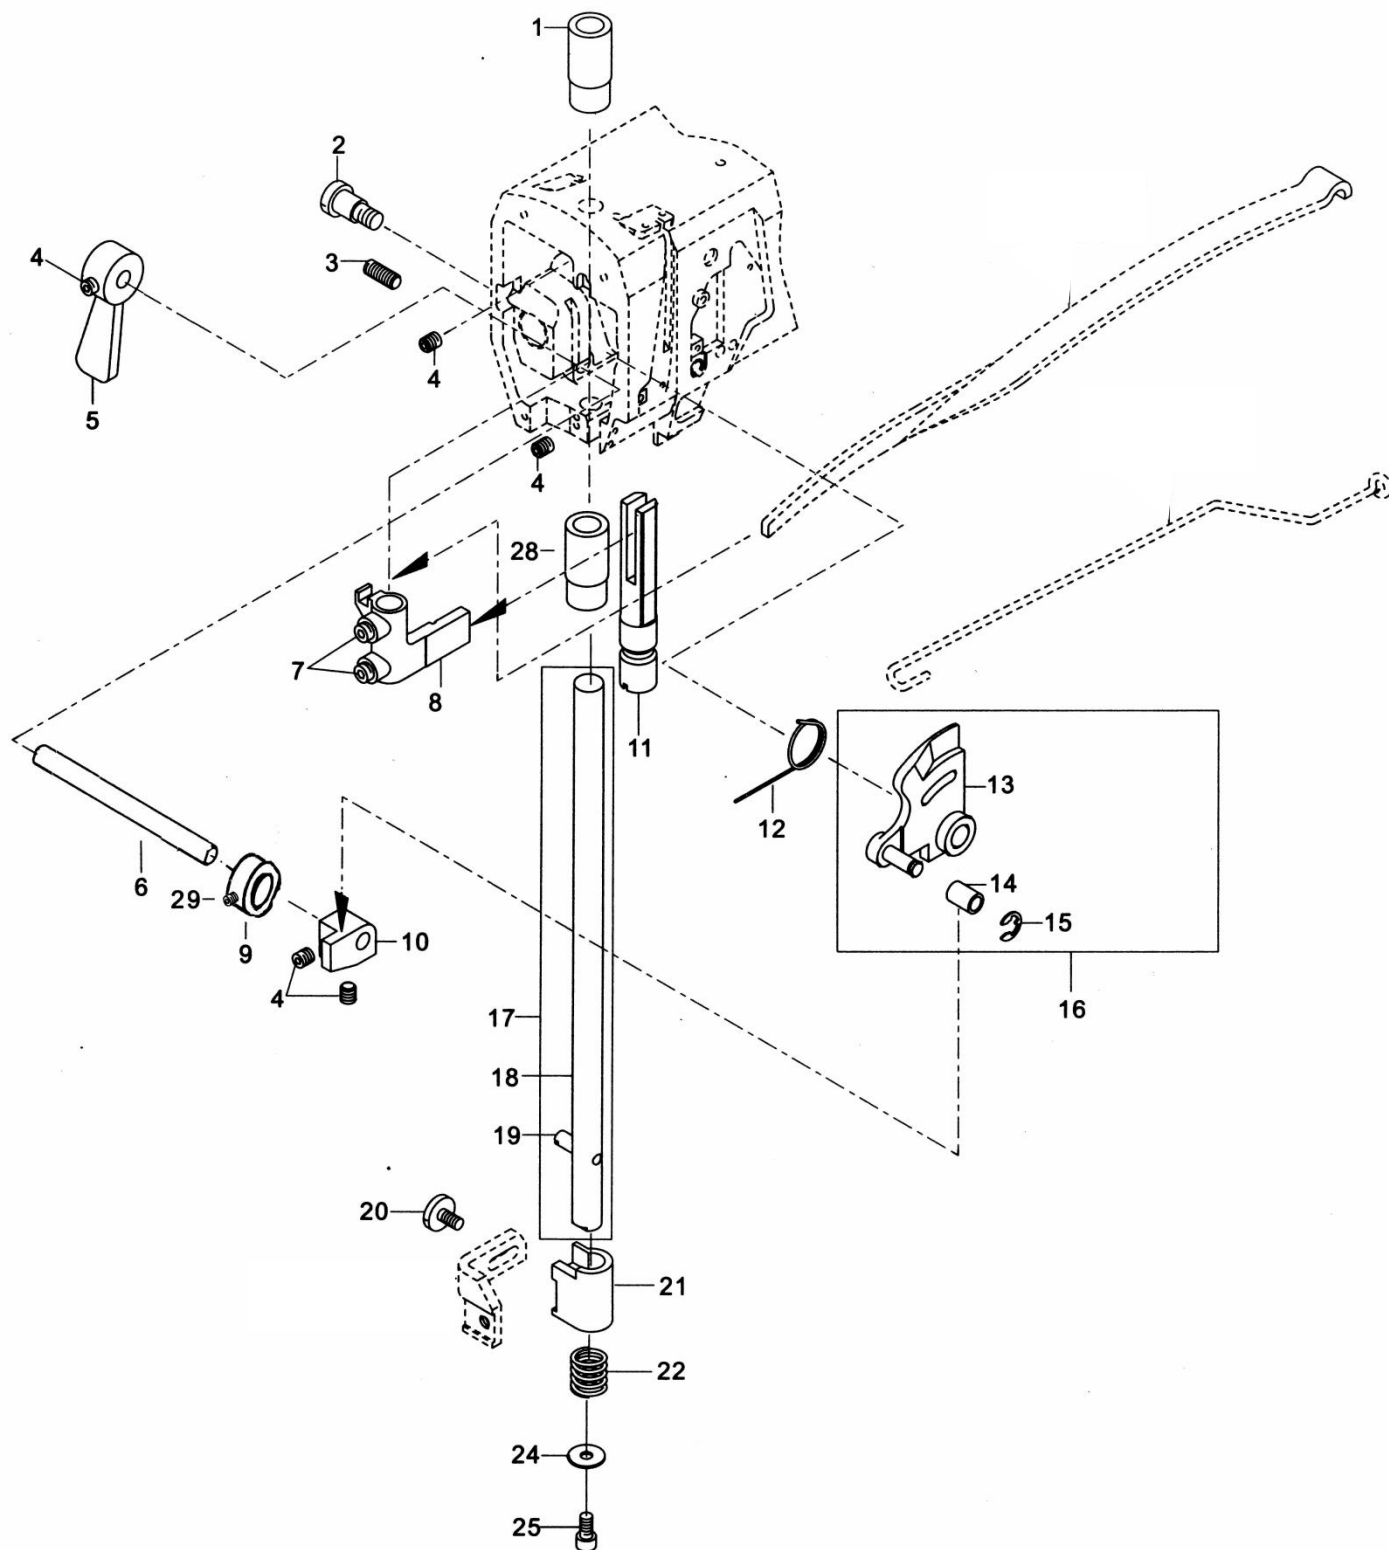

Per. No	Part No	名称	Description	Qty
01	PFNA0301	压杆轴套	Strut bar bearing	1
02	PFNA0302	螺钉 M6X8 (特殊)	Screw M6x8	1
03	PFNA0303	螺钉 M6x8	Screw M6X8	1
04	PFNA0304	螺钉 M5x5	Screw M5X5	5
05	PFNA0305	压脚扳手	Presserfoot spanner	1
06	PFNA0306	抬压脚轴	Presser foot lift axle	1
07	PFNA0229	螺钉 M6x0.75x5	Screw M6x5	2
08	PFNA0308	压杆滑块	Strut bar slides	1
09	PFNA0309	抬压脚手柄轴套	Presser feet handle bushing	1
10	PFNA0310	抬压脚凸块	Presser foot lift bump	1
11	PFNA0311	压杆滑块导杆	Strut bar slides guide bar	1
12	PFNA0312	松线复位簧	Replacement spring	1
13	PFNA0313	抬压脚前杠杆焊接件	Presser foot lift jointing	1
14	PFNA0314	抬压脚前杠杆销套	Presser foot lift pin	1
15	PFNA0315	挡圈	Collar	1
16	PFNA0316	抬压脚前杠杆组件	Presser foot lift asm	1
17	PFNA0317	压脚杆组件	Presser feet assembly	1
18	PFNA0318	压脚杆	Presser feet	1
19	PFNA0319	下节销螺钉 M4x5.2	Screw M4x5.2	1
20	PFNA0320	螺钉 M4x8 (特殊)	Screw M4X8	1
21	PFNA0321	压脚柄	Presser feet handle	1
22	PFNA0322	压簧	Pressure spriimg	1
24	PFNA0324	垫圈 04	Washer $\phi 4$	1
25	PFNA0325	螺钉 M4x8	Screw M4X8	1
28	PFNA0328	压杆轴套	Pressure bar sleeve	1
29	PFNA1810	M4X6 螺钉	Screw M4X6	1


4. 机头零件(3) Needle head parts (3)

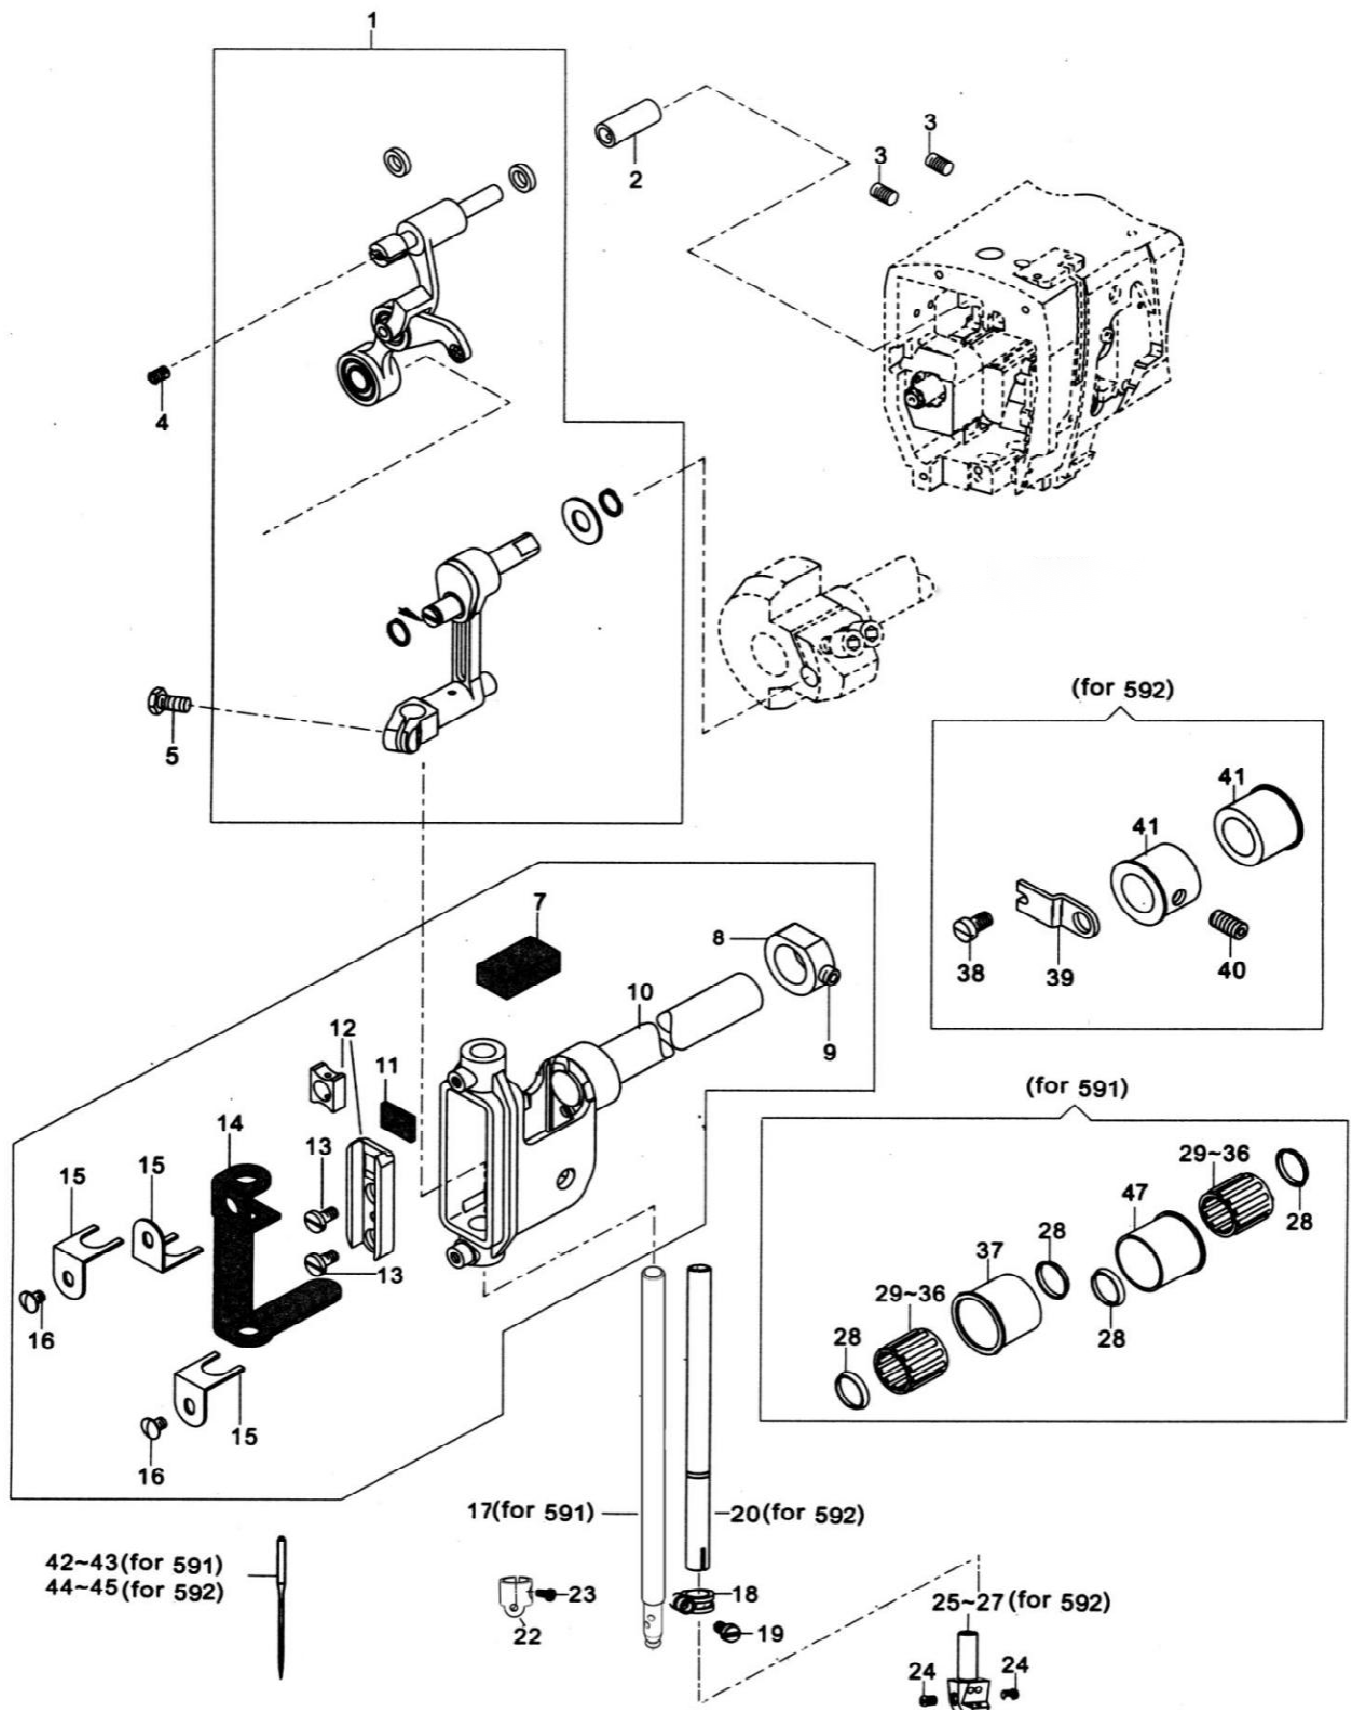

Per.No	Part No	名称	Description	Qty
01	PFNA0401	挑线杆组件	Takeuplever assembly	1
02	PFNA0402	挑线连杆销衬套	Takeuplever pin bushing	1
03	PFNA0403	螺钉 M5x8	Screw M5x8	2
04	PFNA1810	螺钉 M4x5	Screw M4x5	1
05	PFNA0131	螺钉 M5x10	Screw M5x10	1
08	PFNA0408	针杆架轴挡圈	Uper check ring	1
09	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	1
10	PFNA0410	针杆架件	Needle bar assembly	1
12	PFNA0412	针杆滑块槽组件	Needle slider groove asm	1
13	PFNA0413	螺钉 M4x4.5	Screw M4x4.5	2
14	PFNA0414	油毡	Felt	1
15	PFNA0415	油毡压板	Linoleum clamp	3
16	PFNA0120	螺钉 M4x4	Screw M4x4.5	2
17	PFNA0417	针杆	Needle bar	1
18	PFNB0418	针杆锁紧圈	Needle bar clamp ring	1
19	PFNB0419	螺钉 M4x8	Screw M4x8	1
20	PFNB0420	针杆上节	Needle bar uper	1
22	PF55500311	下过线钩	Arm thread guide	1
23	PF1790S0639	机针锁紧螺钉 M3x8	Screw M3x8	1
24	PFNB0424	螺钉 M3x3.2	Screw M3x3.2	2
25	PFNB0425	3.2 针夹头 (For 592)	Pin chuck 3.2 (For 592)	1
26	PFNB0426	2.8 针夹头 (For592)	Pin chuck 2.8 (For592)	1
27	PFNB0427	2.4 针夹头 (For 592)	Pin chuck 2.4 (For592)	1
28	PFNB0428	内卡圈	Inner retainer ring	4
29	PFNB0429	滚针轴承	Needle bearing	2
30	PFNB0430	滚针轴承	Needle bearing	2
31	PFNB0431	滚针轴承	Needle bearing	2
32	PFNB0432	滚针轴承	Needle bearing	2
33	PFNB0433	滚针轴承	Needle bearing	2
34	PFNB0434	滚针轴承	Needle bearing	2
35	PFNB0435	滚针轴承	Needle bearing	2
36	PFNB0436	滚针轴承	Needle bearing	2
37	PFNA1114	上边轴轴承套 Φ23.5	Bearing bush	1
38	PFNB0438	螺钉 M5x6	Screw M5x6	2
39	PFNB0439	定位板	Guide plate	1
40	PFNB0440	螺钉 M6x14	Screw M6x14	1
41	PFNB0441	针杆架轴套	Needle bar bush	2
42	PFDTDP516	机针 DPX5#14(for591-M)	Needle DPX5 90/14 (for591-M)	1
43	PFDTDP521	机针 DPX5#19(for591-H)	Needle DPX5 120/19 (for591-H)	1
44	PFDTDP516	机针 DPX5#14(for 592-M)	Needle DPX5 90/14 (for 592-M)	2
45	PFDTDP521	机针 DPX5#19(for 592-H)	Needle DPX5 120/19 (for 592-H)	2
46	PFNA0127	垫圈 Φ4	Washer Φ4	2
47	PFNA1115	针杆架轴套组件 Φ23	Bearing bush assy	1

5. 机头零件(4)


Needle head parts (4)

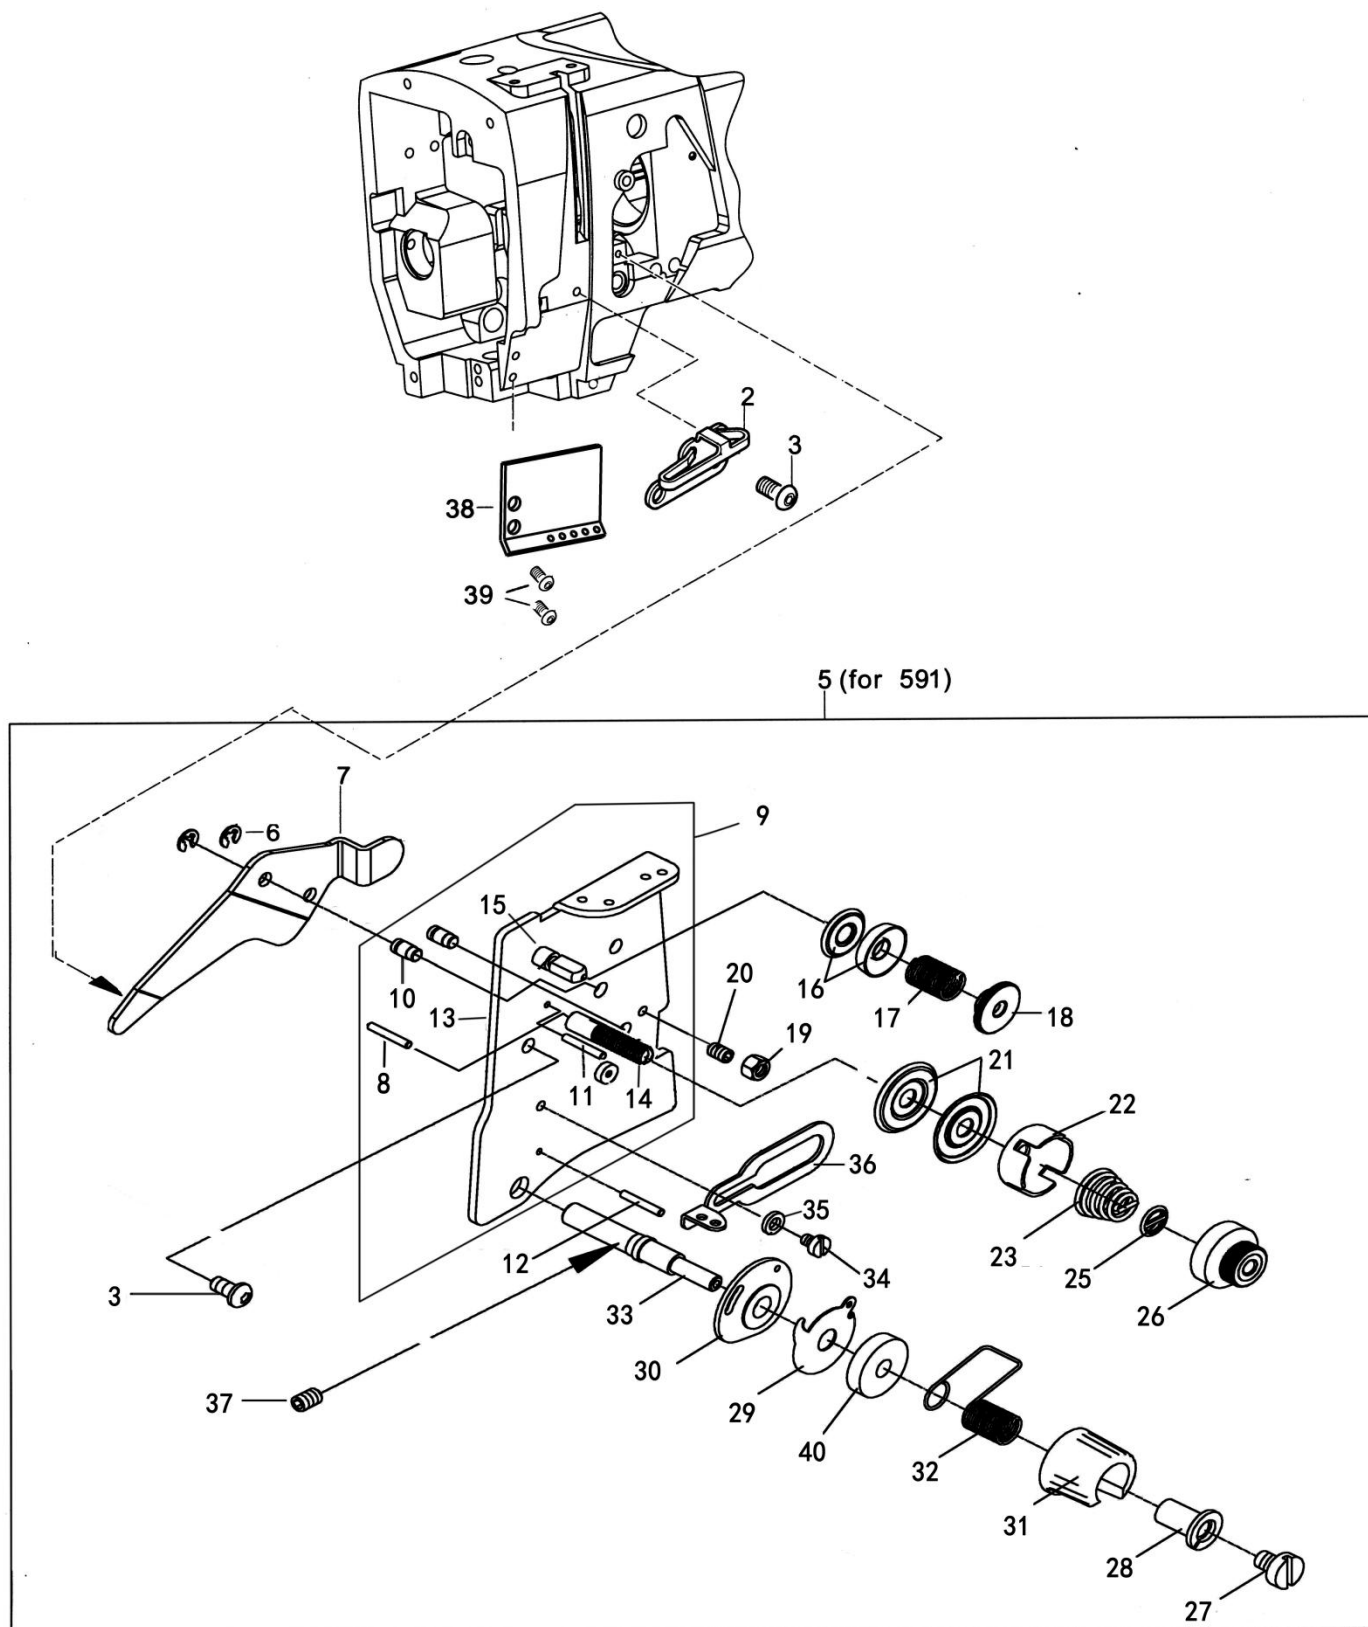


Per.No	Part No	名称	Description	Qty
02	PFNA0502	左右过线勾	Left and right wire hook	1
03	PFNA0102	螺钉 M5x10	Screw M5X10	2
05	PFNA050501	夹线器（591 专用）	Conductor holder (for 591)	1
06	PFNA0506	卡圈	Collar	2
07	PFNA0507	挑线簧限位板	Spring guard	1
08	PFNA0508	过线钉	Pin	1
09	PFNA0509	夹线大板组件	Clamp plate assembly	1
10	PFNA0510	销钉 5x8	Screw pin 5x8	2
11	PFNA0511	过线销钉 2x20	Screw pin 2x20	1
12	PFNA0512	防转销钉 2x8	Screw pin 2x8	1
13	PFNA0513	夹线大板	Bobbin winder tension disc	1
14	PFNA0514	螺钉	Screw	1
15	PFNA0515	夹线调压螺钉	Screw	1
16	PFNA0516	调节簧座	Thred tension disk	2
17	PFNA0517	夹线调节弹簧	Spring	1
18	PFNA0518	夹线调节螺母 M6	Screw M6	1
19	PFNA0519	挺线电磁铁调节螺母 M4	Screw M4	1
20	PFNA0520	螺钉 M4x8	Screw M4x8	1
21	PFNA0521	过线板	Thread guide plate	2
22	PFNA0522	夹线簧座	Split line spring plate	1
23	PFNA0523	夹线簧	Split line spring	1
25	PFNA0525	压簧板	Spring plate	1
26	PFNA0526	夹线螺母	NUT	1
27	PFNA0527	螺钉 M3x8	Screw M3X8	1
28	PFNA0528	压套	Pipe casing	1
29	PFNA0529	过线件	Balance thread guide	1
30	PFNA0530	挑线簧隔板	Partition board	1
31	PFNA0531	挑线簧限位螺母	Limit nut	1
32	PFNA0532	挑线簧	Spring	1
33	PFNA0533	夹线过线轴	Thread guide spindle	1
34	PFNA0534	螺钉 M4x6	Screw M4x6	1
35	PFNA0535	垫圈 $\phi 4$	Washer $\phi 4$	1
36	PFNA0536	过线调节板	Thread guide plate	1
37	PFNA0403	螺钉	Screw	1
38	PFNA0538	大过线勾	Large crossing hook	1
39	PFNA0539	螺钉 M4X10	Screw M4x 10	2
40	PFNA0540	垫块	Heel	1

6. 机头零件(5)

Needle head parts (5)

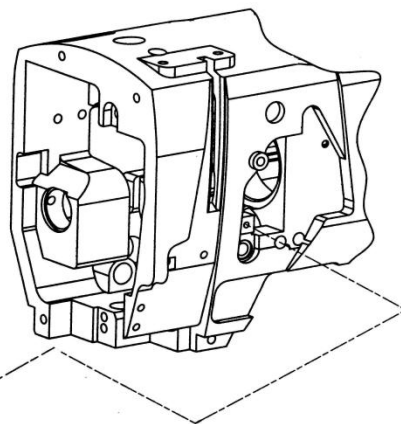


1 (For 592)

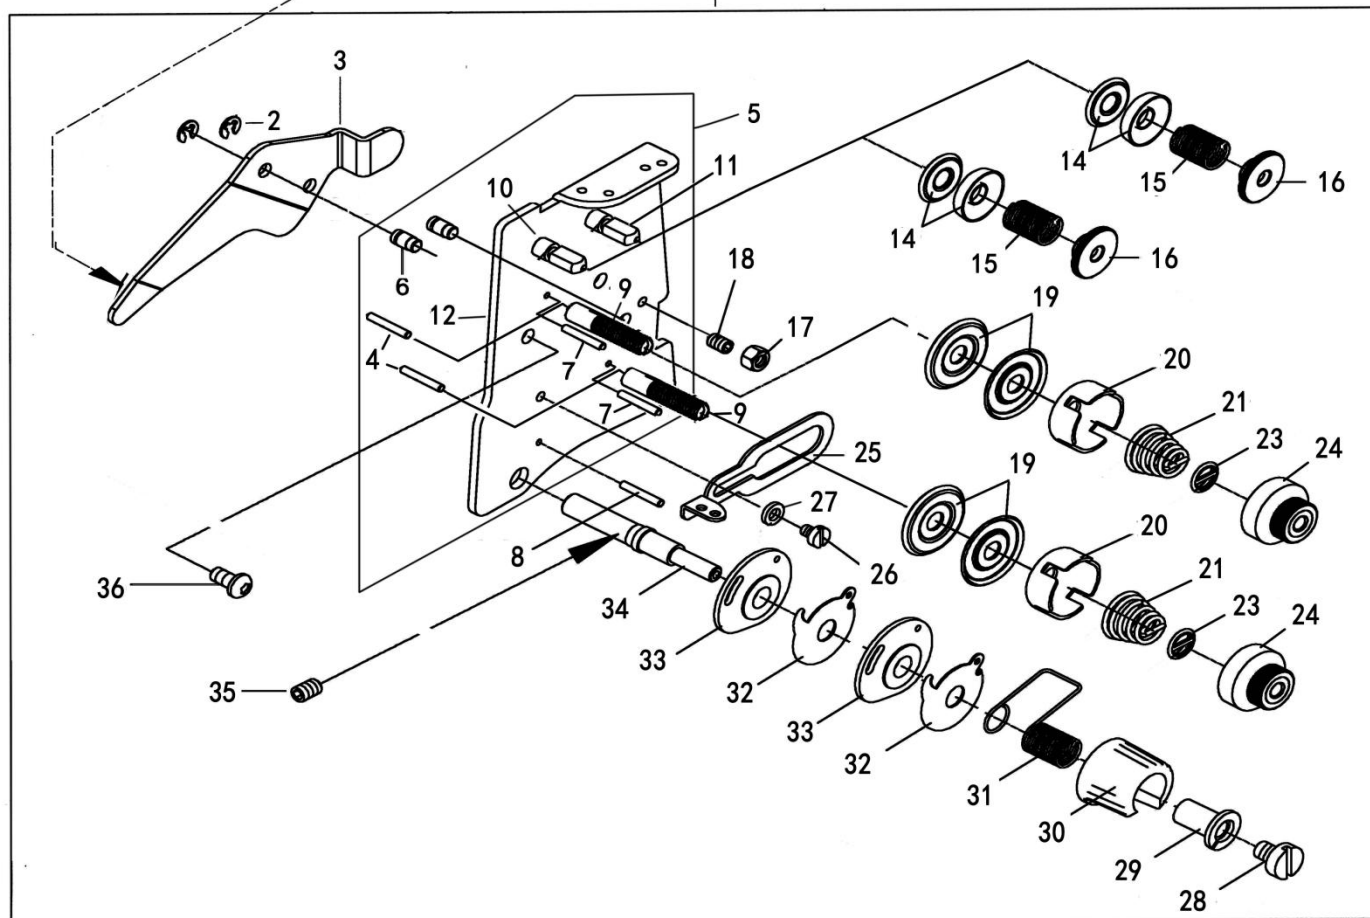


Per.No	Part No	名称	Description	Qty
01	PFNB060101	夹线器（592 专用）	Conductor holder (for592)	1
02	PFNB0602	卡圈	Collar	2
03	PFNB0603	挑线簧限位板	Spring guard	1
04	PFNB0604	松线钉	Pin	1
05	PFNB0605	夹线板大组件	Bobbin winder tension disc asm	1
06	PFNB0606	销钉 5x8	Screw pin 5x8	2
07	PFNB0607	过线销钉 2x20	Screw pin 2X20	2
08	PFNB0608	防转销钉 2x8	Screw pin 2x8	1
09	PFNB0609	螺钉	Screw	2
10	PFNB0610	夹线调压螺钉 I	Screw	1
11	PFNB0611	夹线调压螺钉	Screw	1
12	PFNB0612	夹线大板	Bobbin winder tension disc	1
14	PFNB0614	调节簧座	Thred tension disk	4
15	PFNB0615	夹线调节弹簧	Spring	2
16	PFNB0616	夹线调节螺母 M6	Nut M6	2
17	PFNB0617	挺线电磁铁调节螺母 M4	Nut M4	1
18	PFNB0618	螺钉 M4X8	Screw M4X8	1
19	PFNB0619	过线板	Thread guide plate	4
20	PFNB0620	夹线簧座	Split line spring plate	2
21	PFNB0621	夹线簧	Split line spring	2
23	PFNB0623	压簧板	Spring plate	2
24	PFNB0624	夹线螺母	Nut	2
25	PFNB0625	过线调节板	Thread guide plate	1
26	PFNB0626	螺钉 M4x6	Screw M4x6	1
27	PFNB0627	垫圈 Φ 4	Washer Φ 4	1
28	PFNB0628	螺钉 M3x8	Screw M3x8	1
29	PFNB0629	套环	Pipe casing	1
30	PFNB0630	挑线簧限位螺母	Limit nut	1
31	PFNB0631	挑线簧	Spring	1
32	PFNB0632	过线件	Balance thread guide	1
33	PFNB0633	挑线簧隔板	Partition board	1
34	PFNB0634	挑线簧调节轴	Adjustment axle	1
35	PFNB0635	螺钉	Screw	1
36	PFNB0636	螺钉 M5x10	Screw M5x 10	1

7. 机臂零件(1) Arm parts (1)

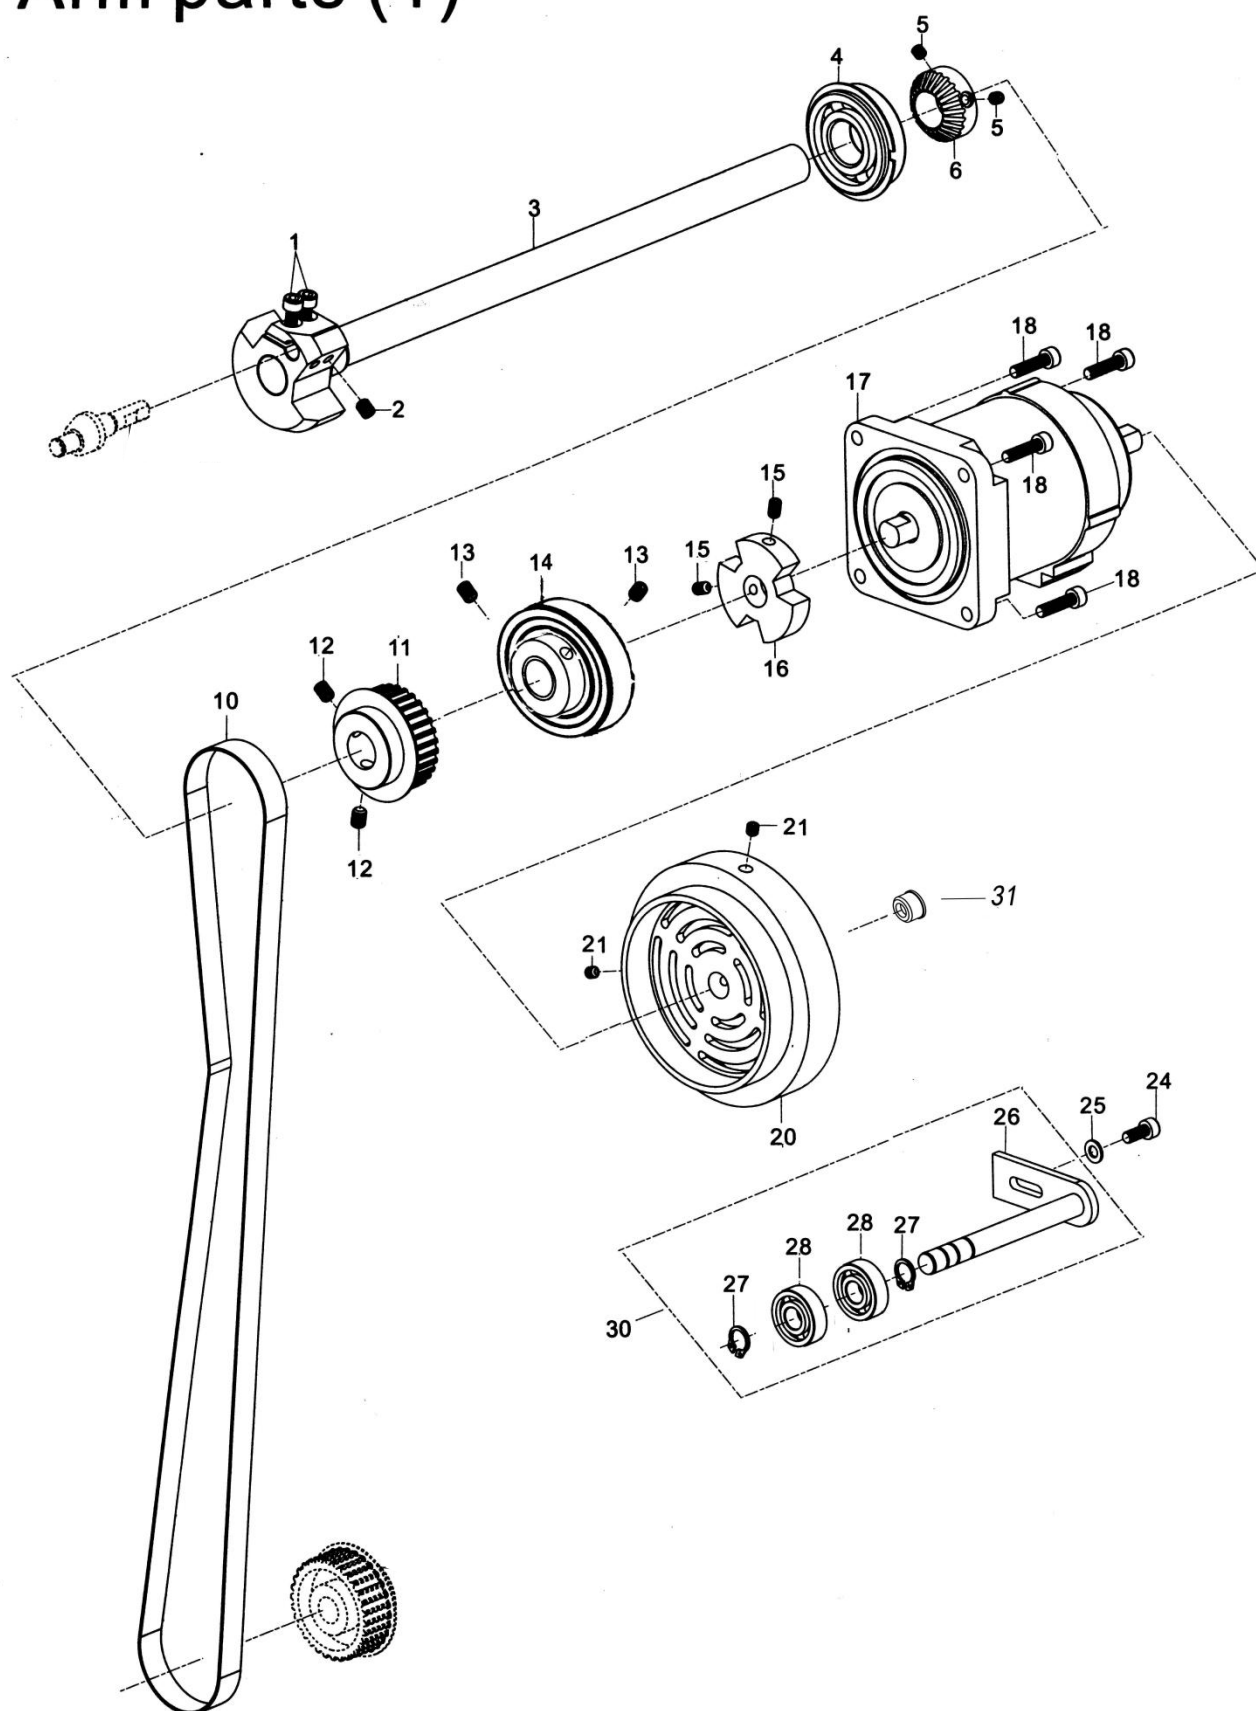


Per.No	Part No	名称	Description	Qty
01	PFNA0131	螺钉 M5x10	Screw M5x10	2
02	PFNA0713	螺钉 M6x0.75x5	Screw M6x0.75X7	1
03	PFNA0703	曲柄主轴组件	Counter weight assy	1
04	PFNA0704	主轴前轴承 6204ZZNR	Bearing 6204ZZNR	1
05	PFNA0304	螺钉 M5x5	Screw M5x5	2
06	PFNA0706	绕线主动轮	Pulley	1
10	PFNA0710	一体机同步带	Synchronous belt	1
11	PFNA0711	主轴宽带轮	Spindle Pulley	1
12	PFNA0303	螺钉 M6X8	Screw M6X8	2
13	PFNA0713	螺钉 M6X0.75x8	Screw M6X0.75X8	2
14	PFNA0714	轴承 S6907RZ	BearingS6907RZ	1
15	PFNA0713	螺钉 M5x8	Screw M5X8	2
16	PFNA0716	电机联轴器组件	Coupling rubber	1
17	PFNA2620SF02	WR58L-01-01 电机	Electric machinery	1
18	PFNA0718	螺钉 M5x20	Screw M5x 18.5	4
20	PFNA072001	一体机手轮喷漆	Uppper wheel	1
21	PFNA0303	螺钉 M6X8	Screw M5X5	2
24	PFNA0724	螺钉 M5x12	Screw M5X12	1
25	PFNA0725	垫圈 $\phi 5$	Washer $\phi 5$	1
26	PFNA0726	同步带压紧焊接件	Seal part	1
27	PFNA0727	挡圈	Collar	2
28	PFNA0728	轴承 6000ZZ	Bearing 6000ZZ	1
29	PFNA0729	皮带压紧器轴承套	Bearing bush	1
30	PFNA0730	同步带压紧	Synchronous belt compression	1
31	PF9820Z85	油塞	Oil dam	1

8. 机臂零件(2) Arm parts (2)

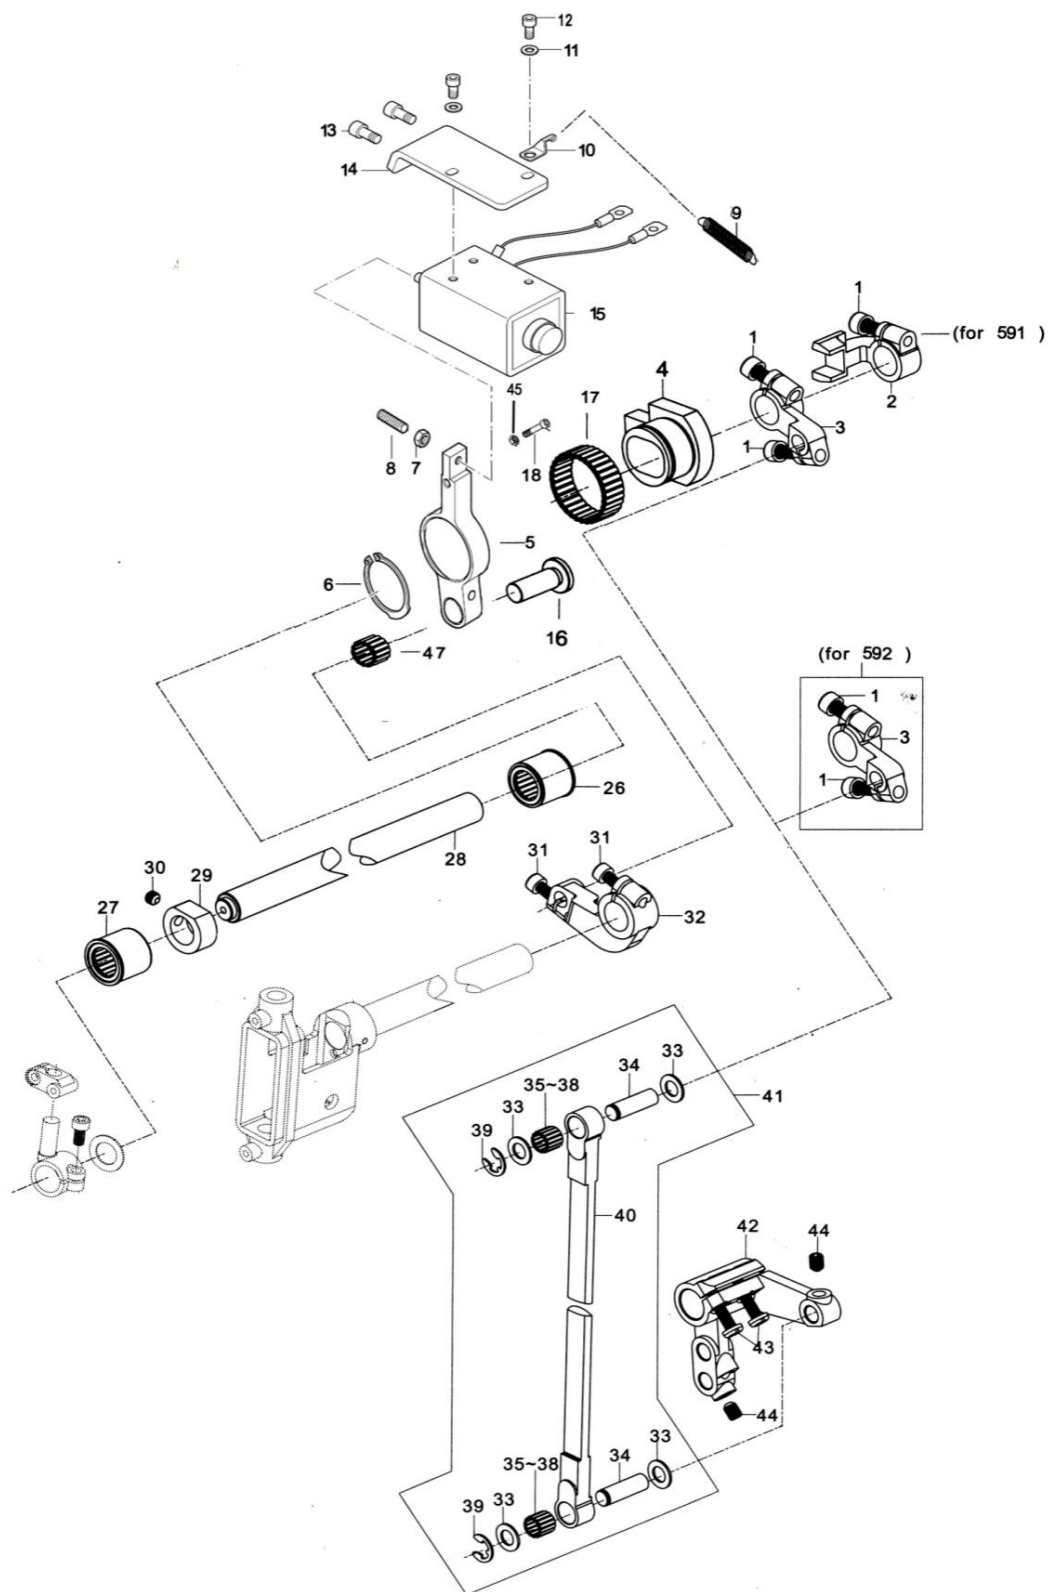


Per.No	Part No	名称	Description	Qty
01	PFNA0801	螺钉 M6x16	Screw M6 x16	3
02	PFNA0802	摆动架滑块槽	Crank slider groove	1
03	PFNA0803	上边轴曲柄	Crank	1
04	PFNA0804	摆动架滑块	Crank slider	1
05	PFNA0805	摆动架	Crank	1
06	PFNA0806	挡圈	Thrust collar	1
07	PFNA0116	螺母 M4	NUT	1
08	PFNA0808	螺钉 M4X15	Screw	1
09	PFNA0809	摆动架倒缝复位弹簧	Spring	1
10	PFNA0810	弹簧挂钩	Spring hook	1
11	PFNA0127	垫片 4	CollarM4	2
12	PFNA0325	螺钉 M4X8	ScrewM4X8	2
13	PFNA0131	螺钉 M5X10	ScrewM5X10	2
14	PFNA0814	摆动架电磁铁安装板	Plate	1
15	PFNA0815	摆动架电磁铁	Swing span electromagnet	1
16	PFNA0816	针距调节螺杆销	Needle pitch adjusting screw pin	1
17	PFNA0817	轴承	Bearing	1
18	PFNA0818	螺钉 M4X40	Screw M4x40	1
26	PFNA1114	针杆架轴套组件 Φ23.5	Needle bar rock shaft bush	1
27	PFNA1115	针杆架轴套组件 Φ23	Needle bar rock shaft bush	1
28	PFNA0828	上边轴组件	Upper shaft assy	1
29	PFNA0408	针杆架轴挡圈	Thrust collar	1
30	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	1
31	PFNA0724	螺钉 M5x12	Screw M5x12	2
32	PFNA0832	曲柄	Crank	1
33	PFNA0833	垫圈 Φ8	Washer Φ8	4
34	PFNA0834	销轴	Shaft	2
35	PFNA0835	滚针轴承	Needle bearing	2
36	PFNA0836	滚针轴承	Needle bearing	2
37	PFNA0837	滚针轴承	Needle bearing	2
38	PFNA0838	滚针轴承	Needle bearing	2
39	PFNA0839	挡圈	Thrust collar	2
40	PFNA0840	竖边轴	Link shaft	1
41	PFNA0841	竖边轴组件	Link shaft assy	1
42	PFNA0842	连杆支臂	Link	1
43	PFNA0843	螺钉 M5x12	Screw M5x12	2
44	PFNA0229	螺钉 M6x0.75x8	Screw M6x0.75x8	2
45	PFNA0116	螺母 M4	Nut M4	1
47	PFNA1327	滚针轴承	needle bearing	1

9. 机臂零件(3) Arm parts (3)

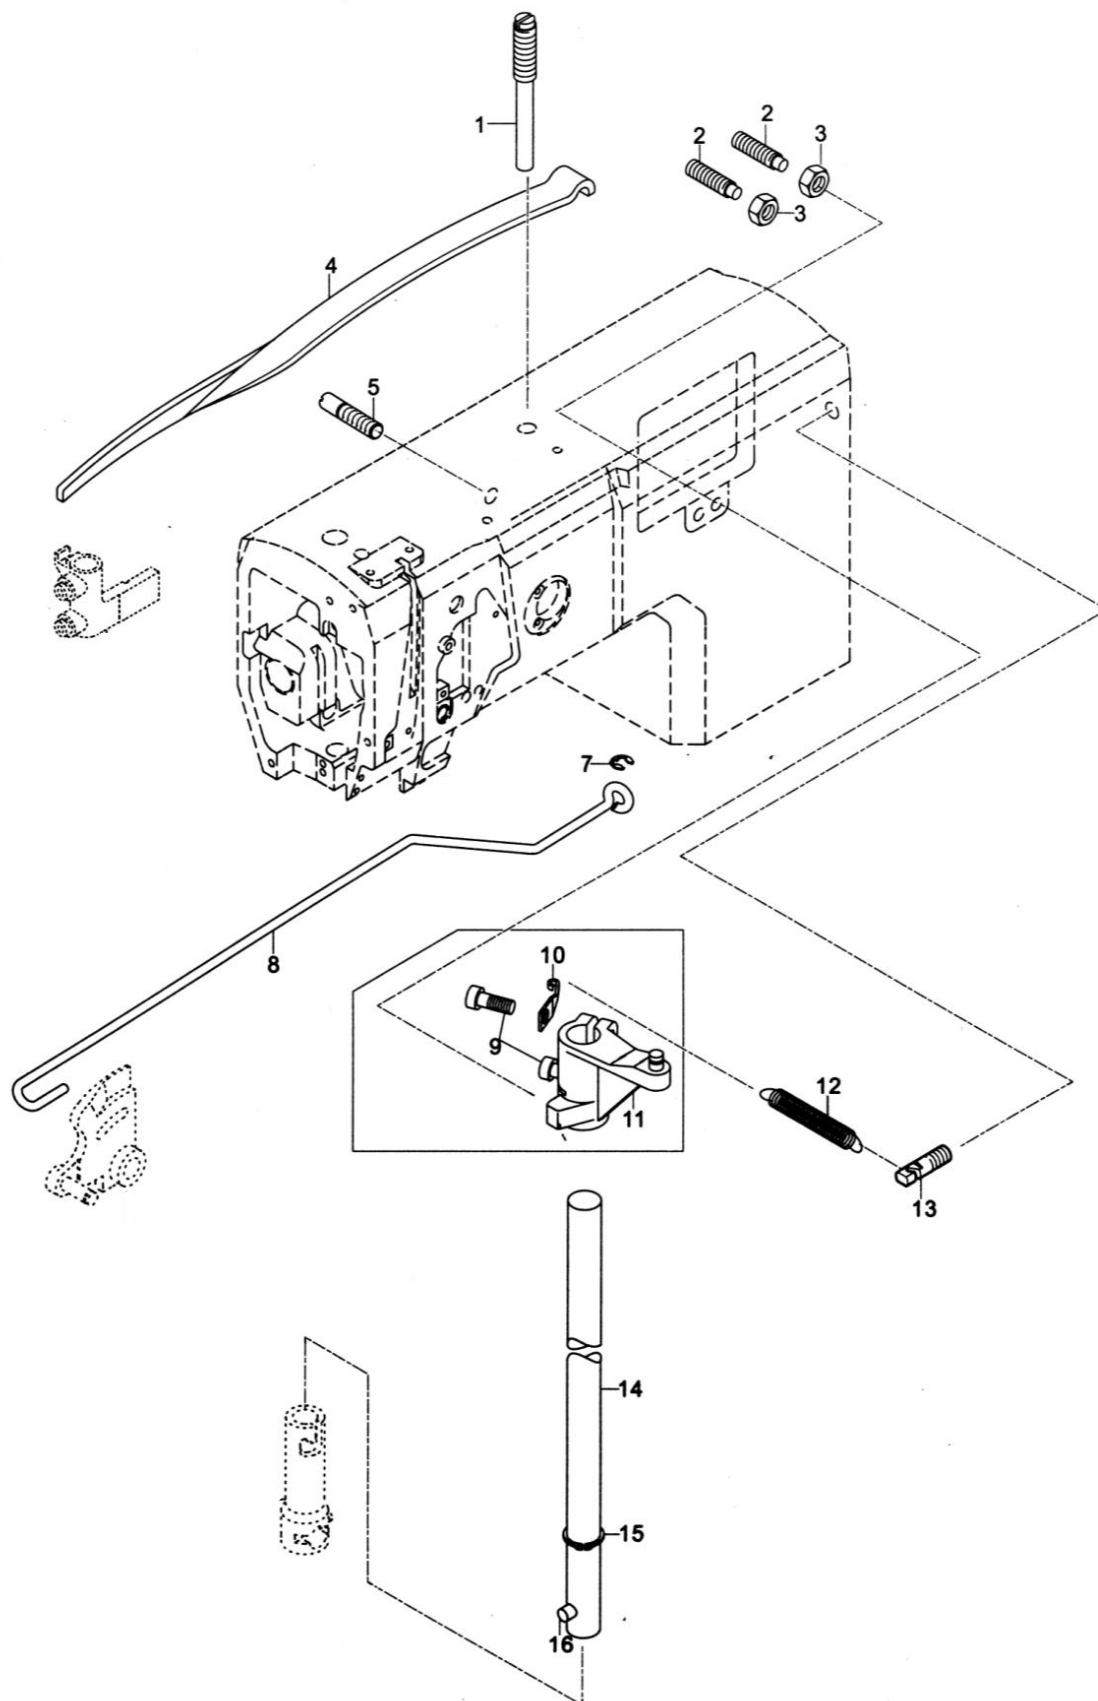

Per. No	Part No	名称	Description	Qty
01	PFNA0901	弹簧销	Spring pin	1
02	PFNA0902	螺钉 M6x30 (特殊)	Screw M6x30	2
03	PFNA0903	螺母 M6	Nut M6	2
04	PFNA0904	压紧杠杆	compress lever	1
05	PFNA0905	螺钉 M6x7.2 (特殊)	Screw M6x7.2	1
07	SCJ1004	卡圈 E4	collar	1
08	PFNA0908	压脚拉杆	Connecting rod	1
09	PFNA0724	螺钉 M5x12	Screw M5x12	2
10	PFNA0810	弹簧固定板	Spring Board	1
11	PFNA0911	脚杆动轴曲柄组件	Crank	1
12	PFNA0912	脚杆动轴拉簧	Spring	1
13	PFNA0913	螺钉 M6x8 (特殊)	Screw M6x8	1
14	PFNA0914	脚杆动轴组件	Moving axis assm	1
15	SCJ1018	卡圈 C12	Collar	1
16	PFNA0915	销 5x14	Pin 5x14	1


10. 机臂零件(4) Arm parts (4)

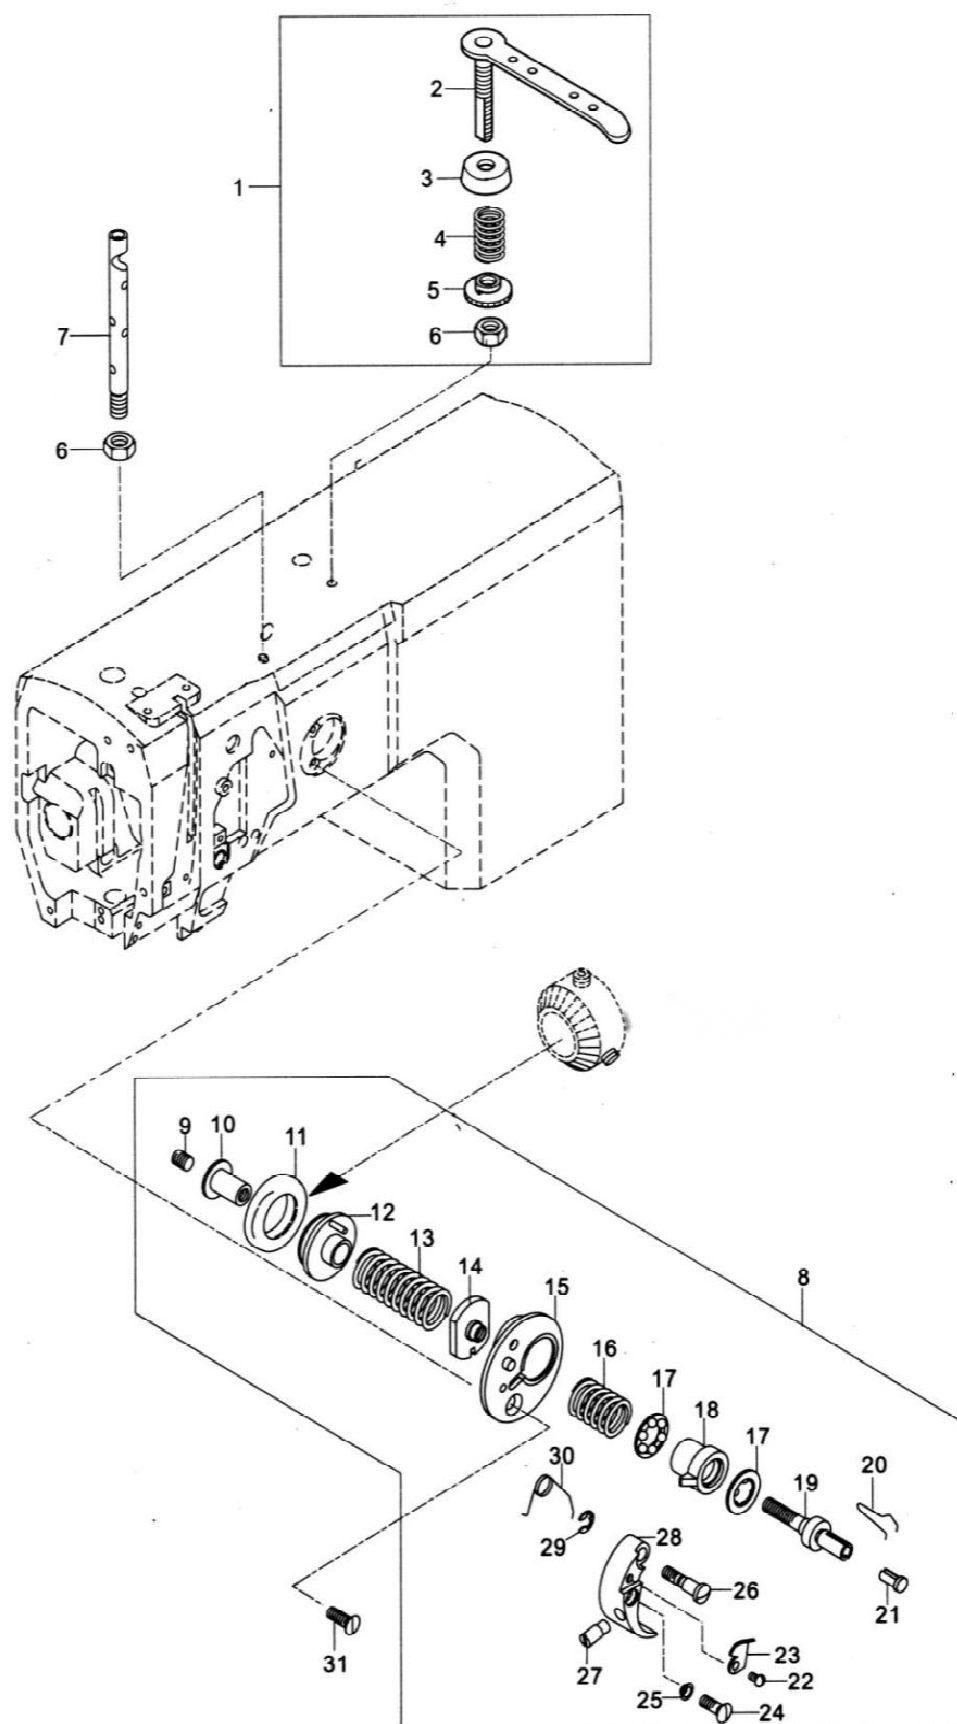

Per. No	Part No	名称	Description	Qty
01	PFNA1001	过线器	Thread guide	1
02	PFNA1002	过线杆组件	Thread crossing column assy	1
03	PFNA1003	调节簧座	Thred tension disk	1
04	PFNA1004	过线器压簧	Spring	1
05	PFNA1005	夹线调节螺母 M6	Nut M6	1
06	PFNA1006	六角螺母 M6	Nut M6	1
07	PFNA1007	过线柱	Thread crossing column	1
08	PFNA1008	绕线器	Bobbin winder unit	1
09	PFNA1009	螺钉 M5x5	Screw M5x5	1
10	PFNA1010	螺杆座	Screw plate	1
11	PFNA1011	橡胶轮	Ring	1
12	PFNA1012	绕线轮座组件	Bobbin winder shaft compl.	1
13	PFNA1013	下压簧	Compression spring	1
14	PFNA1014	压簧座	Compression spring seat	1
15	PFNA1015	线圈板组件	Retaining ring assy	1
16	PFNA1016	上压簧	Compressing spring	1
17	PFNA1017	端面轴承	Edge bearing	2
18	PFNA1018	芯轴衬套	Shaft bush	1
19	PFNA1019	芯轴	Shaft	1
20	PFNA1020	梭芯簧	Shuttle spring	1
21	PFNA1021	梭芯衬套	Shuttle bush	1
22	PFNA1022	切刀定位螺钉	Screw	1
23	PFNA1023	剪刀	Knife	1
24	PFNA1024	挡块销紧定螺钉 M3x8	Screw M3x8	1
25	PFNA1025	挡块螺钉垫	Washer	1
26	PFNA1026	转动螺钉 M4x4	Screw M4x4	1
27	PFNA1027	挡块销	Pin	1
28	PFNA1028	挡块	Plate	1
29	PFNA1029	挡圈 $\phi 8$	Collar	1
30	PFNA1030	扭簧	Spring	1
31	PF1310D137	螺钉 M4x8	Screw M4x8	1

11. 底板零件(1)


Bedplate psrts (1)

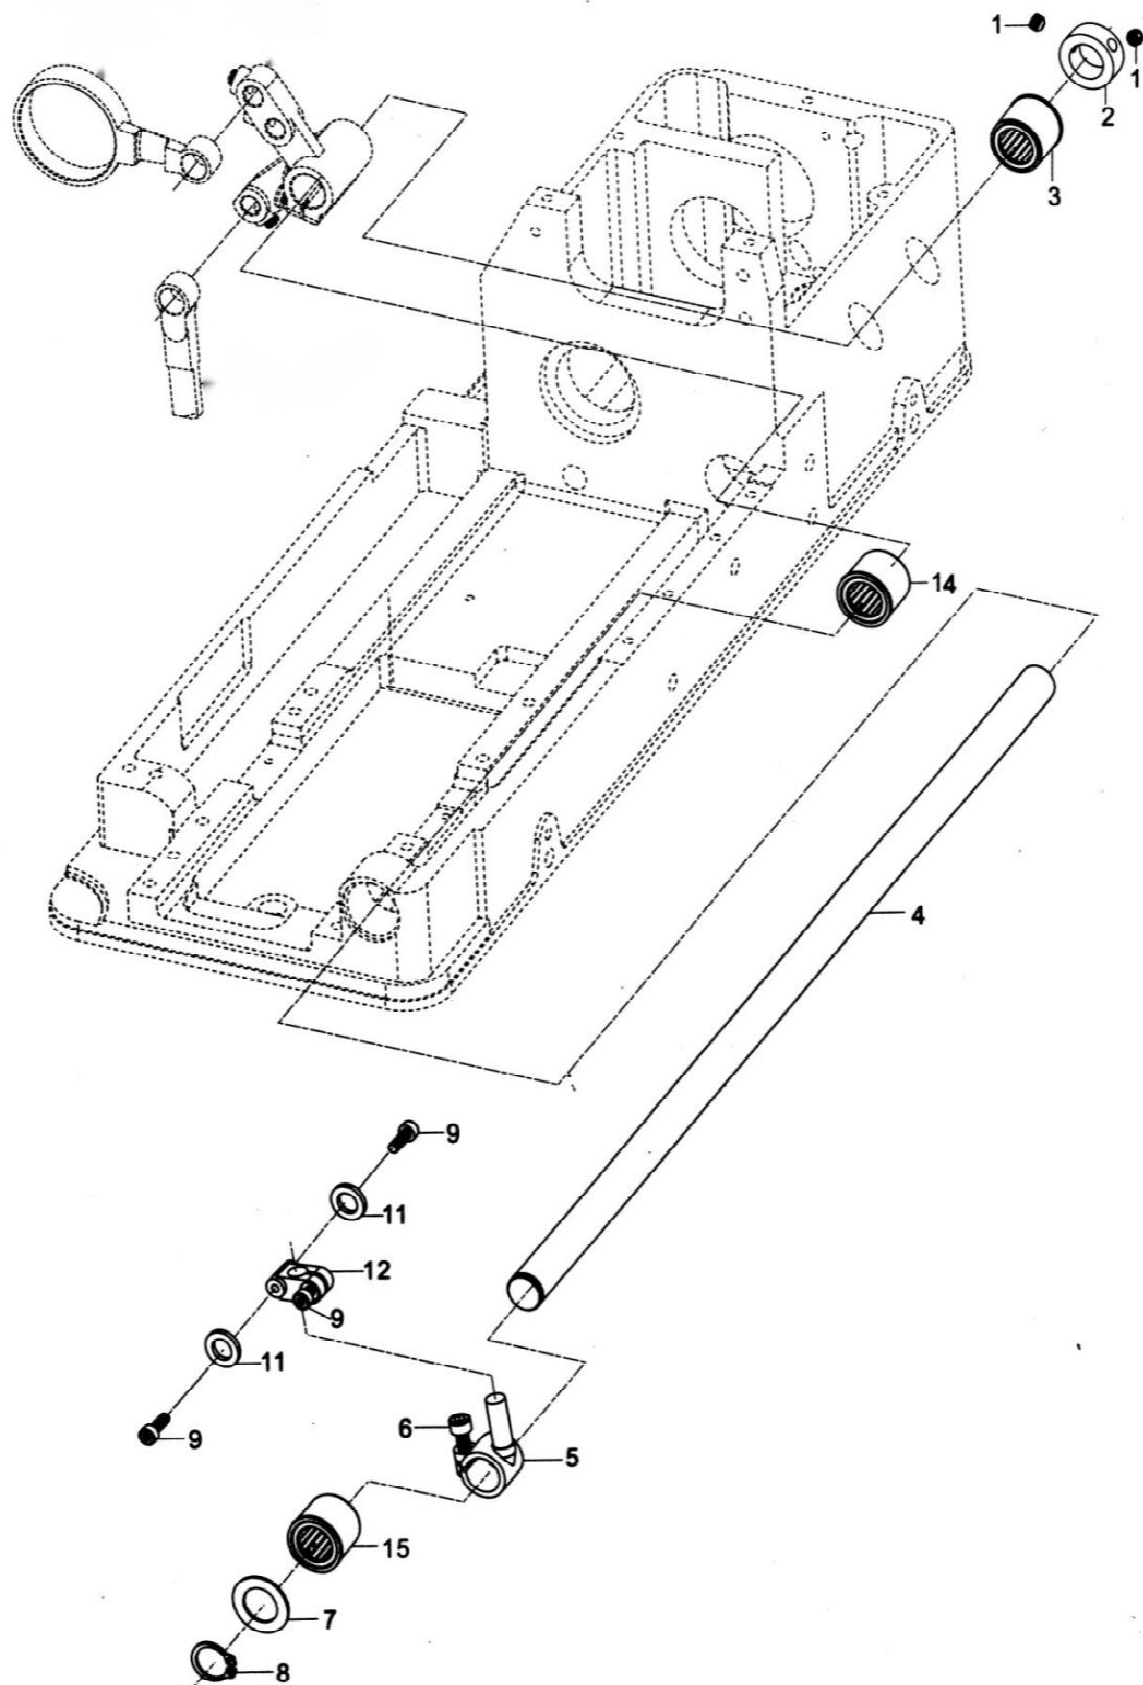

Per. No	Part No	名称	Description	Qty
01	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	2
02	PFNA1102	15 输送主轴挡圈	Shaft collar	1
03	PFNA1103	针杆架轴套组件 Φ24	Bearing bush assy	1
04	PFNA1104	一体输送主轴	Transport major axis	1
05	PFNA0223	万向联接头	Universal coupling head	1
06	PFNA0131	螺钉 M5x10	Screw M5x10	1
07	PFNA0218	15 输送主轴挡圈垫片	Washer	1
08	SCJ1019	卡圈 C15	Collar	1
09	PFNA0203	螺钉 M4x10	Screw M4x 10	1
11	PFNA0224	油毡垫片	Oil reservoir gasket	4
12	PFNA0220	万向联接座	Base frame	1
14	PFNA1114	针杆架轴套组件 Φ23.5	Bearing bush assy	1
15	PFNA1115	针杆架轴套组件 Φ23	Bearing bush assy	1


12. 底板零件(2)

Bedplate psrts (2)

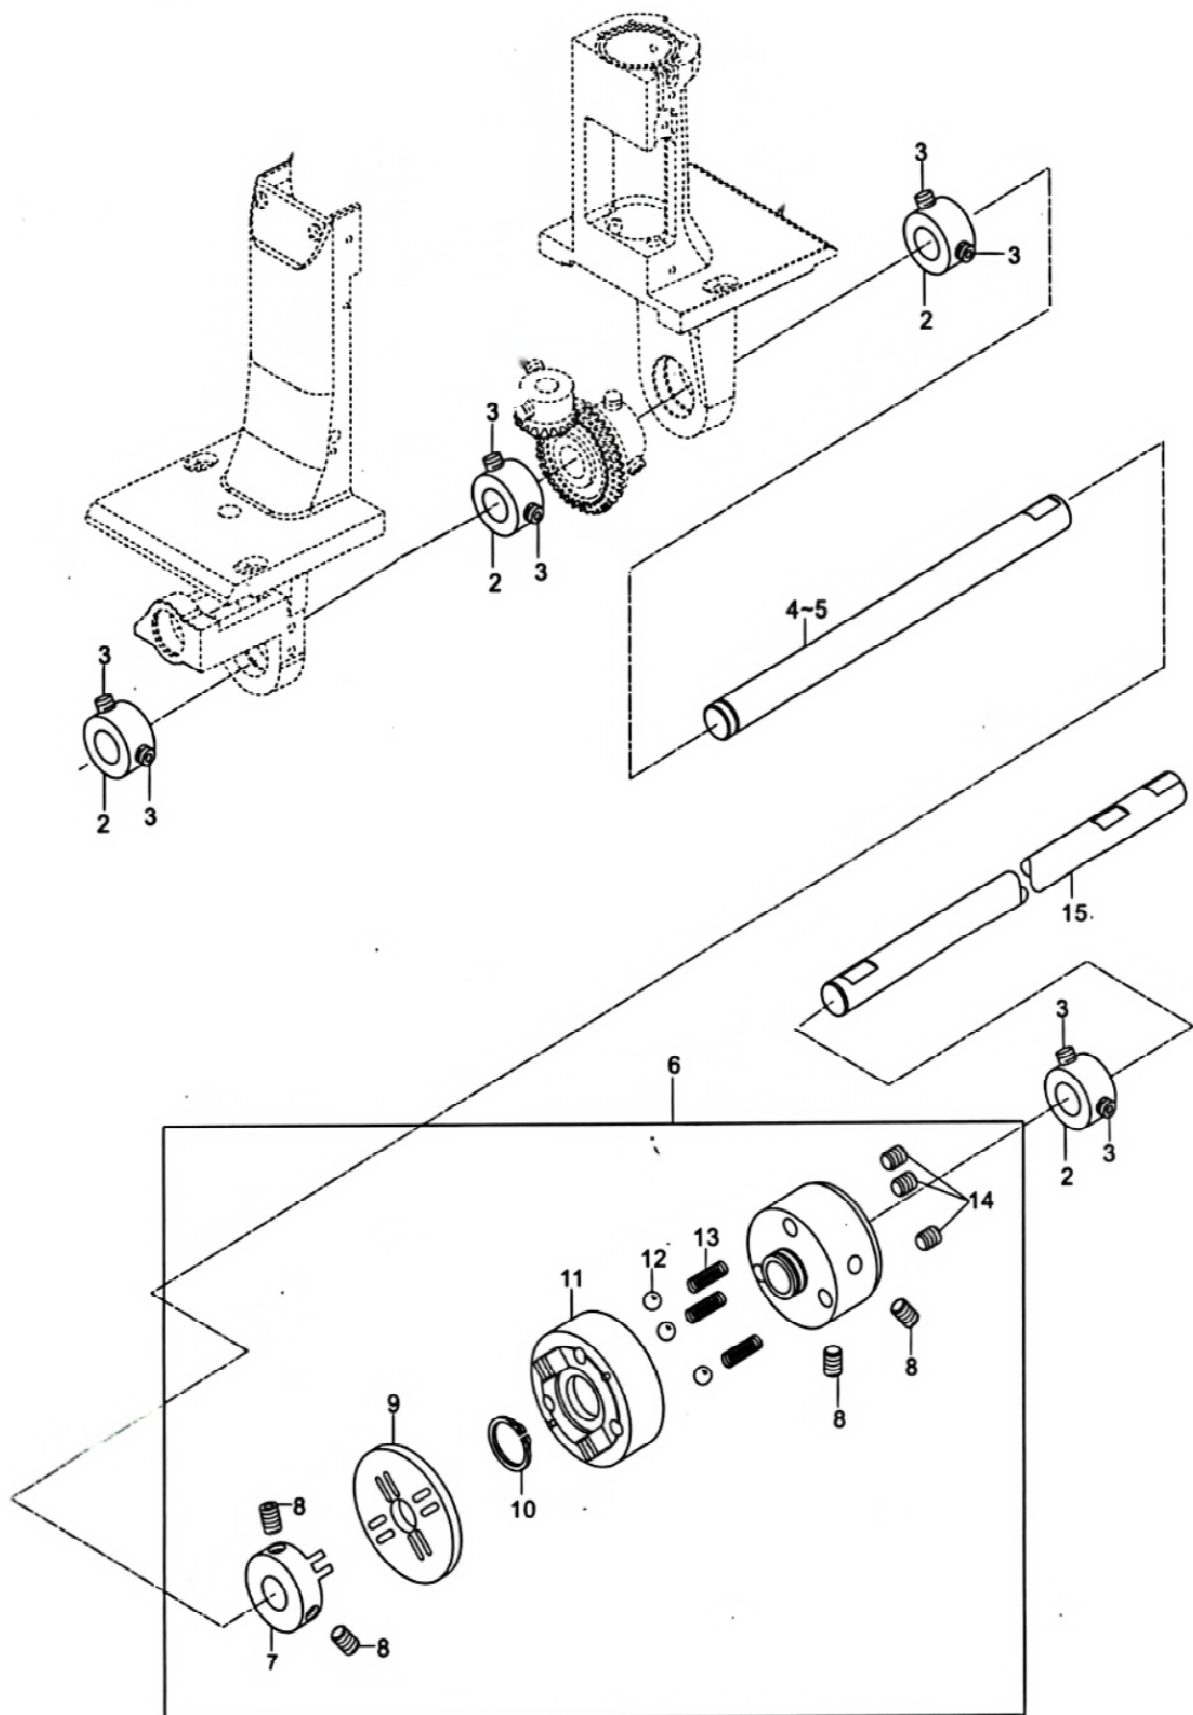


Per.No	Part No	名称	Description	Qty
02	PFNA1202	12 万向联接轴挡圈	shaft collar	4
03	PF1790S0539	螺钉 M6x5	Screw M5x5	8
04	PFNA1204	万向联接轴 A (for 591)	Universal coupling spindle A (for 591)	1
05	PFNB1205	万向联接轴 (for 592)	Universal coupling spindle (for 592)	1
06	PFNA1206	离合器	Clutch	1
07	PFNA1207	离合器小连接	Clutch minor connector	1
08	PFNA0713	螺钉 M6x0.75x8	Screw M6x0.75x8	2
09	PFNA1208	离合器连接板	Clutch gusset	1
10	PFNA1209	卡圈	Collar	1
11	PFNA1210	离合连接组件	Clutch connector	1
12	PFNA1211	钢珠球	Steel ball	3
13	PFNA1212	离合器小弹簧	spring	3
14	PFNA1213	螺钉 M6x0.75x6	Screw M6x0.75x6	3
15	PFNA1215	一体下轴	Lower shaft	1

13. 底板零件(3) Bedplate psrts (3)

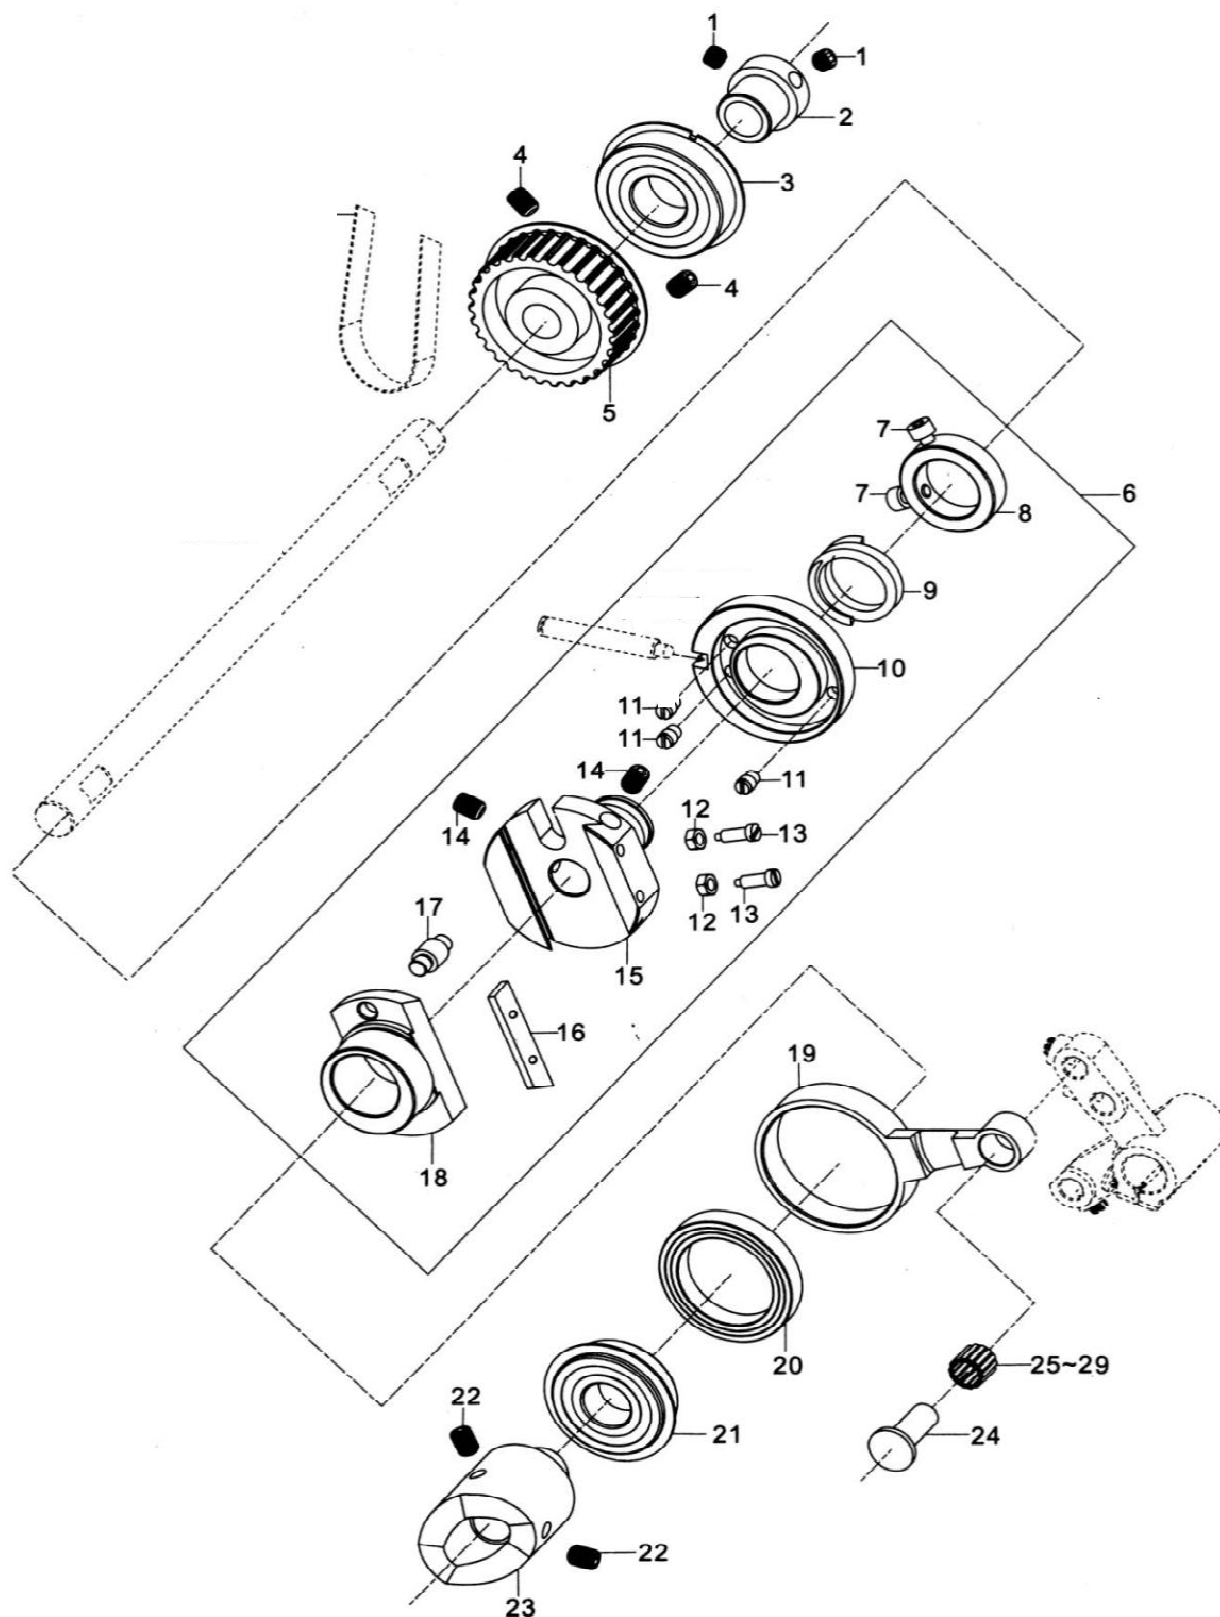


Per. No	Part No	名称	Description	Qty
01	PFNA0304	螺钉 M6x0.75x5	Screw M6x5	2
02	PFNA1302	下轴轴承套	Lower shaft rear bush	1
03	PFNA1303	轴承 6203ZZNR	Bearing	1
04	PFNA0303	螺钉 M6x8	Screw M6x8	2
05	PFNA1305	下轴宽带轮	Lower shaft sprocket	1
06	PFNA1306	针距调节器部件	Guage regulator component	1
07	PFNA1307	螺钉 M4x8	Screw M4x8	2
08	PFNA1308	挡圈	Collar	1
09	PFNA1309	压簧	compression spring	1
10	PFNA1310	偏心调整轮	Adjustment wheel	1
11	PFNA1311	螺钉	Screw	3
12	PFNA1312	螺母	Nut	2
13	PFNA1313	螺钉	Screw	2
14	PFNA0303	螺钉 M6x8	Screw M6x8	2
15	PFNA1314	针距调节器滑块槽	Slider groove	1
16	PFNA1315	调整垫	Adjustment plate	1
17	PFNA1316	销	Pin	1
18	PFNA1317	针距调节器滑块	Slider	1
19	PFNA1318	针距调节传动连杆	Connecting rol	1
20	PFNA1320	轴承 6906Z	Bearing	1
21	PFNA1321	轴承 6202ZZNR	Bearing	1
22	PFNA0713	螺钉 M6x0.75x8	Screw M6x0.75x8	2
23	PFNA1323	下轴剪线凸轮	Thread trimming cam	1
24	PFNA1324	针距调节连杆销	Connecting pin	1
25	PFNA1325	滚针轴承 8*11 0-2	Needle bearing	1
26	PFNA1551	滚针轴承 8*11 -2-4	Needle bearing	1
27	PFNA1552	滚针轴承 8*11 -4-6	Needle bearing	1
28	PFNA1553	滚针轴承 8*11 -6-8	Needle bearing	1
29	PFNA1554	滚针轴承 8*11 0+2	Needle bearing	1

14. 底板零件(4) Bedplate psrts (4)

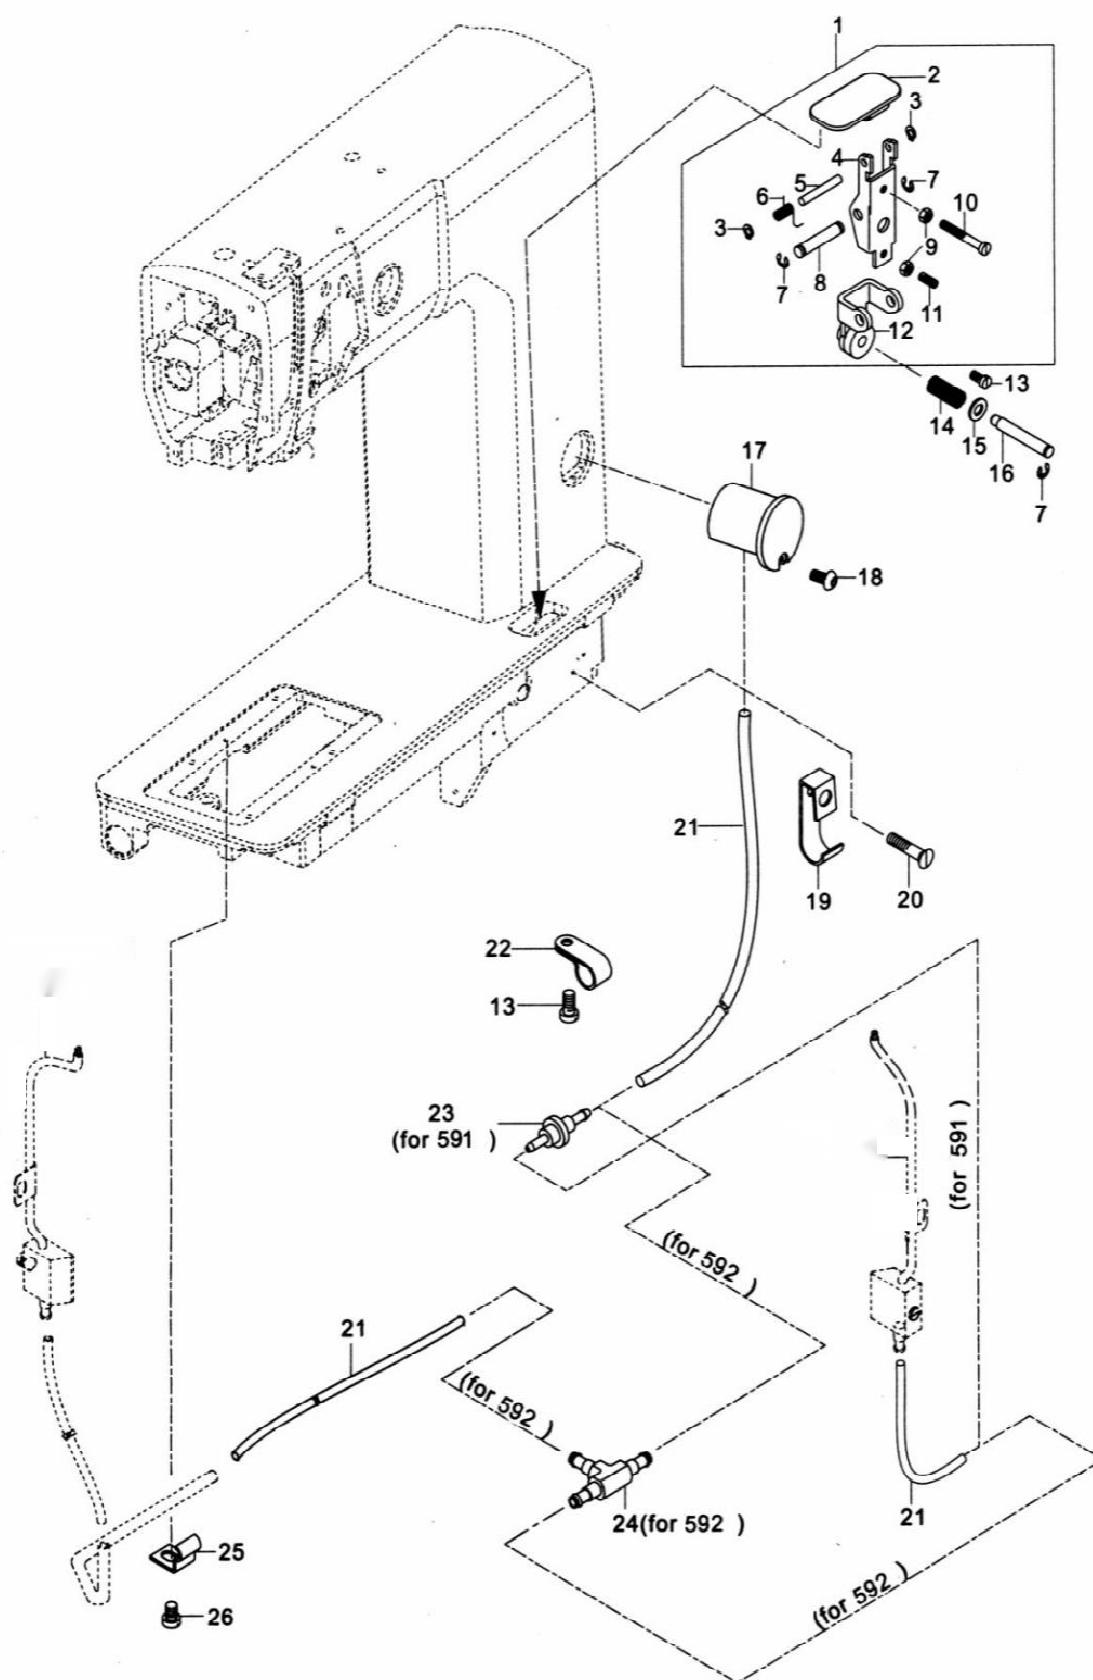


Per.No	Part No	名称	Description	Qty
01	PFNA1401	针脚调节装置	Stitch adjusting assembly	1
02	PFNA1402	调货器摆动板焊接件	Adjusting plate	1
03	PFNA1403	针距调节装置轴卡圈	Ccollar	2
04	PFNA1404	调节器角钢	Angle adjustment	1
05	PFNA1405	销 4x30	Pin 4x30	1
06	PFNA1406	转动扭簧	Spring	1
07	SCJ1004	卡圈 E4	Collar	1
08	PFNA1407	摆动轴	Shaft	1
09	PFNA1408	螺母 M4	Nut M4	2
10	PFNA1409	螺钉 M4x32	Screw M4x 32	1
11	PFNA1410	螺钉 M4x10	Screw M4x 10	1
12	PFNA1411	调节器轴承座	Adjusting plate	1
13	PFNA0203	螺钉 M4x8	Screw M4x8	2
14	PFNA1414	摆动压簧	Compress spring	1
15	PFNA1415	垫圈 $\phi 6$	Washer $\phi 6$	1
16	PFNA1416	调节器体销轴	Adjusting pin	1
17	PFNA1417	油窗组件	Oil tank assy	1
18	PFNA0120	螺钉 M4x6	Screw M4x6	1
19	PFNA1419	油管夹	Oil pipe clip	1
20	PFNA2112	沉头螺钉 M4x14	Screw M4x14	1
21	PFNA0121	油管	Oil tube	2
22	PFNA0132	油管夹	Oil pipe clip	1
23	PFNA1423	油管接头	Terminall	1
24	PFNB1424	T 形接头	Terminall	1
25	PFNB1425	油管夹板	Oil tube support	1
26	PFNB1426	螺钉 M4x5	Screw M4x5	1

15. 旋梭左支座(1) Hook post, left(1)

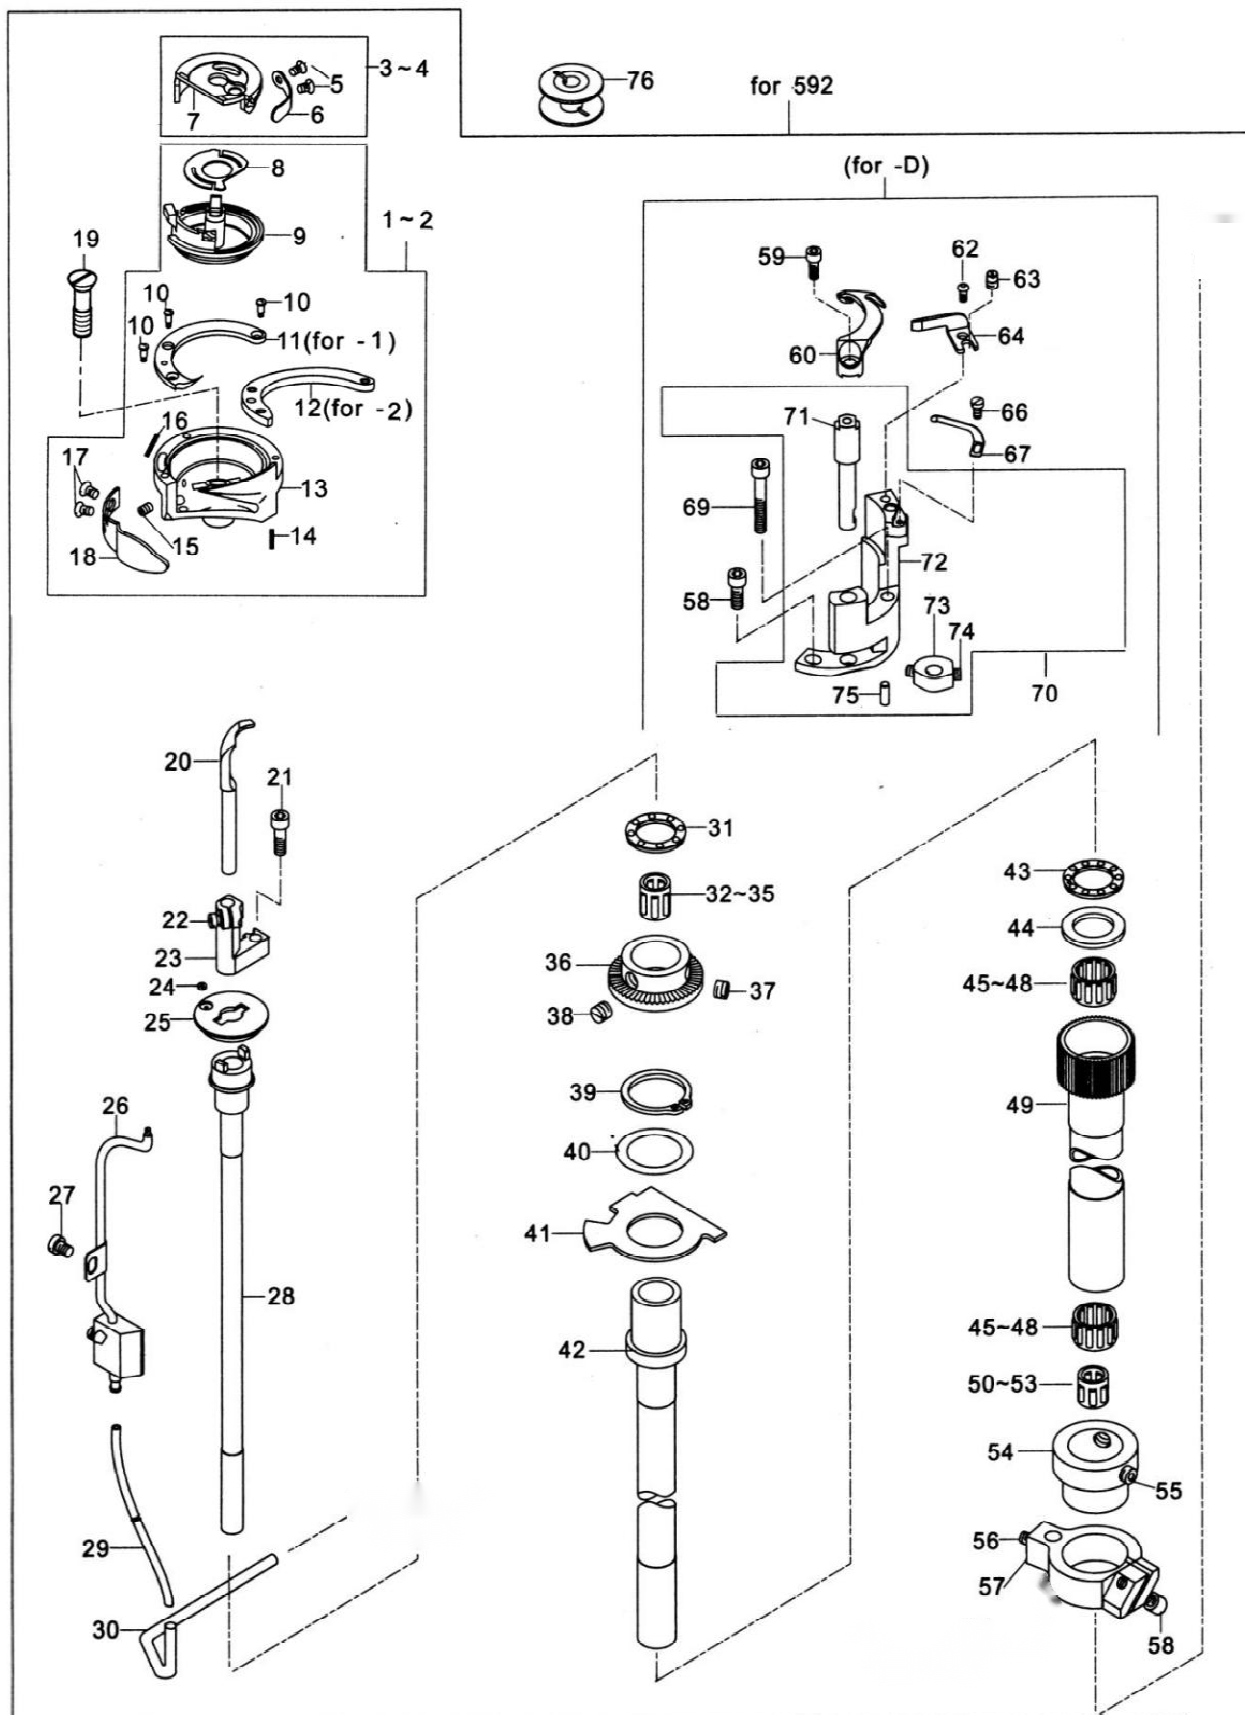


Per.No	Part No	名称	Description	Qty
01	PFNA1701	进口旋梭	Import Hook	1
02	PFNA1702	国产旋梭	Domestic Hook	1
03	PFNA1703	国产梭壳组件	Domestic Bobbin case asm	1
04	PFNA1704	进口梭壳组件	Import Bobbin case asm	1
05	PFNA1705	板式弹簧螺钉	Screw	2
06	PFNA1706	板式弹簧	Plate spring	1
07	PFNA1707	梭头体	Hook-top	1
08	PFNA1708	弹簧片	Spring	1
09	PFNA1709	梭宛	Shuttle wan	1
10	PFNA1710	螺钉	Screw	3
11	PFNA1711	内梭头舌（进口）	Import Shuttle' tongue	1
12	PFNA1712	内梭头舌（国产）	Domestic Shuttle' tongue	1
13	PFNA1713	梭壳	Bobbin case	1
14	PFNA1714	注塞	Wick	1
15	PFNA1715	螺钉 M3x4	Oil felt wick	1
16	PFNA1716	螺钉 M3x4	Screw M3x4	1
17	PFNA1717	螺钉 M2. 6x4	Screw M2. 6x4	2
18	PFNA1718	护针板	Needle protected plate	1
19	PFNA1719	螺钉 M5x20	Screw M5x20	1
20	PFNA1720	旋梭定位勾	Positioning finger	1
21	PFNA0203	螺钉 M4x12	Screw M4x' l2	1
22	PFNA0325	螺钉 M4x6	Screw M4x6	1
23	PFNA1723	旋梭定位勾座	Positioning finger plate	1
24	PFNA1724	O 形圈	O ring	2
25	PFNA1725	旋梭端盖	hook fid	1
26	PFNA1726	油里调节组成	Rubber assy	1
27	PFNA1426	螺钉 M4x5	Screw M4x5	1
28	PFNB1528	旋梭传动芯轴	Hook transmission mandrel	1
29	PFNA0121	油管	Oil felt	1
30	PFNB1530	铜油管	Copper tubing	1
31	PFNA1730	小端面轴承	Small end bearing	1
32	PFNA1731	滚针轴承	Needle bearing	1
33	PFNA1732	滚针轴承	Needle bearing	1
34	PFNA1733	滚针轴承	Needle bearing	1
35	PFNA1734	滚针轴承	Needle bearing	1
36	PFNB1536	送料转盘	Feeding wheel	1
37	PFNB1537	送料转盘螺钉 I M6x0. 75x3	Screw M6x0. 75x3	1
38	PF1310B08	送料转甜螺钉 M6x. 075x5	Screw M6x0. 75>c3	1
39	PFNA1735	20 旋梭护片卡圈	Collar	1
40	PFNA1736	20 旋梭护片垫圈	Collar	1

15. 旋梭左支座(1) Hook post , left(1)

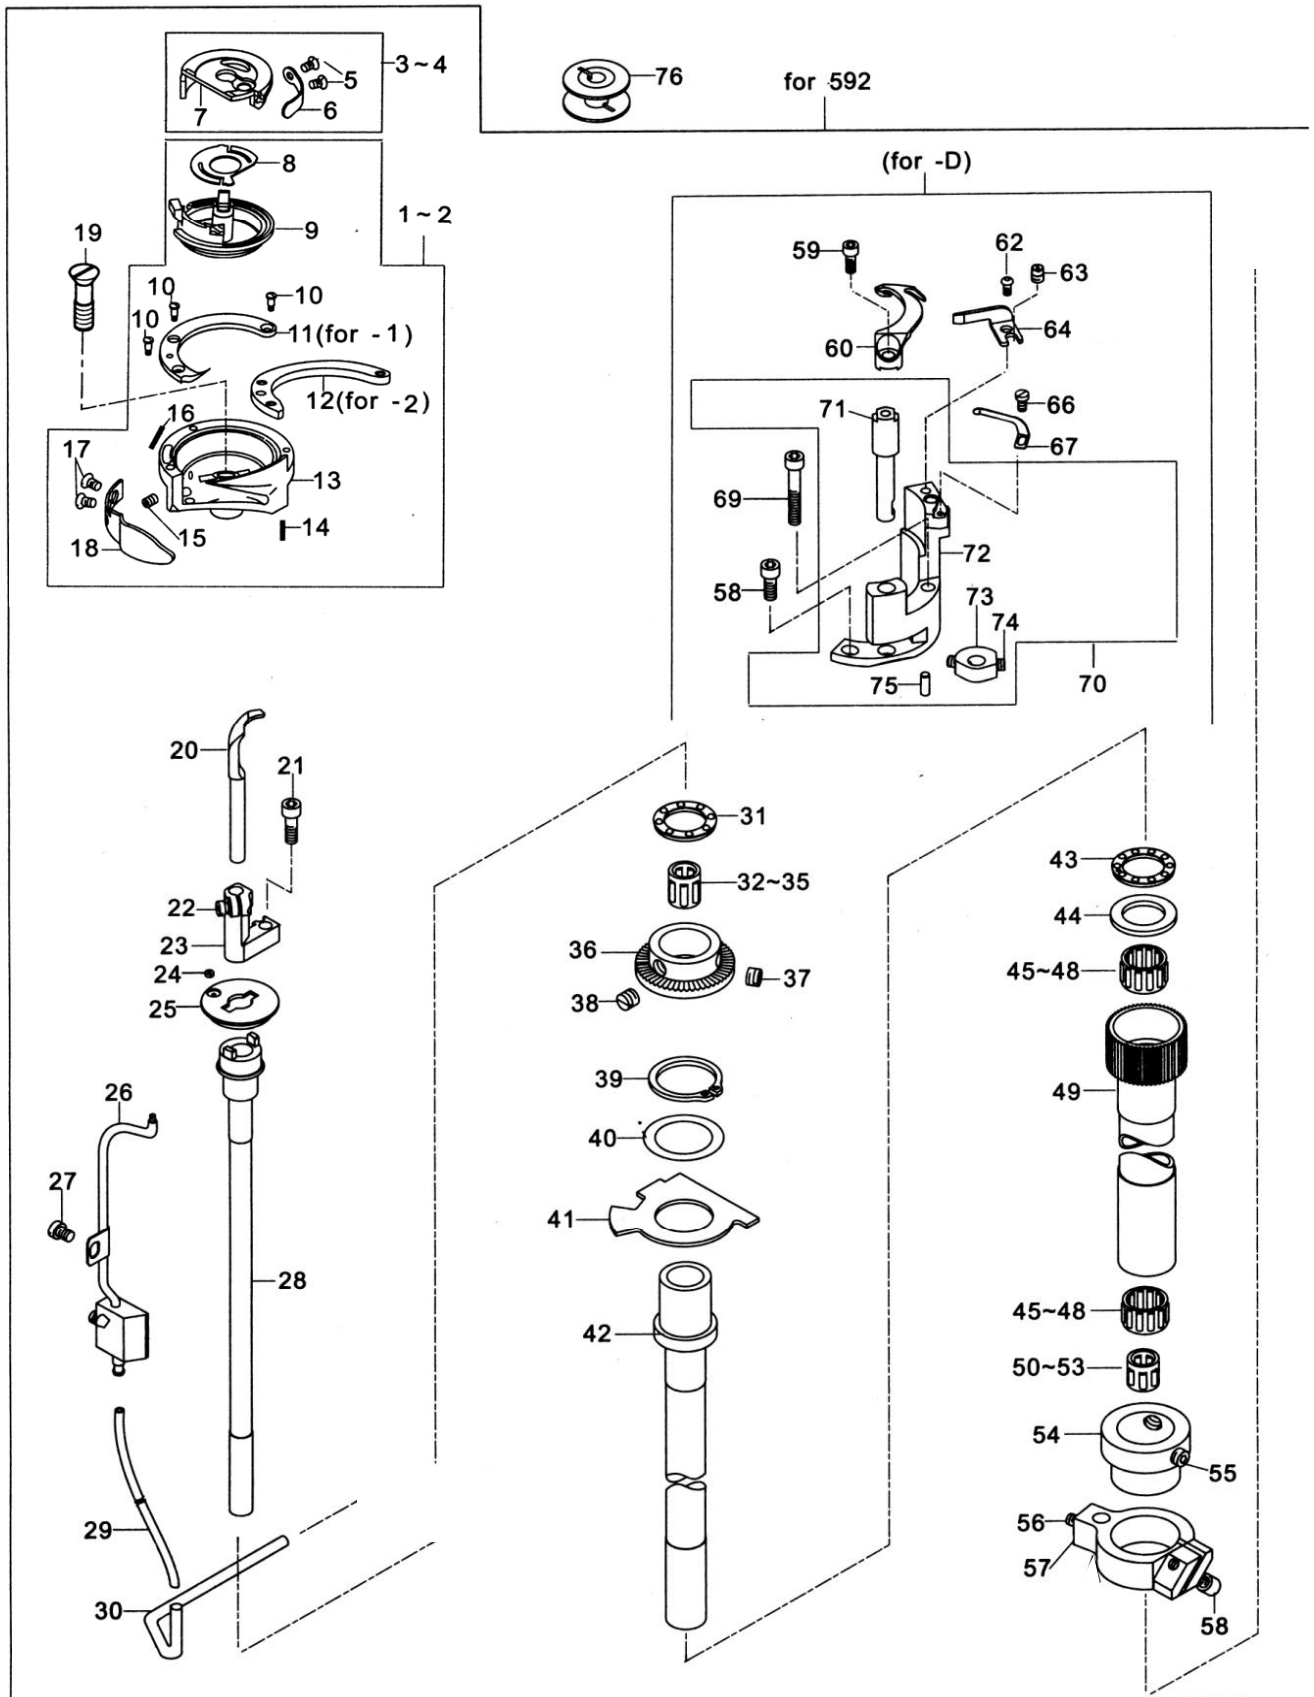


Per. No	Part No	名称	Description	Qty
41	PFNA1737	旋後护片	Armor pieces	1
42	PFNB1542	592 送料传动轴	592 feeding drive shaft	1
43	PFNB1543	592 端面轴承	592 end bearing	1
44	PFNB1544	端面轴承垫圈	Washer	1
45	PFNB1545	滚针轴承	Needle bearing	2
46	PFNB1546	滚针轴承	Needle bearing	2
47	PFNB1547	滚针轴承	Needle bearing	2
48	PFNB1548	滚针轴承	Needle bearing	2
49	PFNB1549	592 旋梭传动轴 I	574 hook shaft	1
50	PFNB1550	滚针轴承	Needle bearing	1
51	PFNB1551	滚针轴承	Needle bearing	1
52	PFNB1552	滚针轴承	Needle bearing	1
53	PFNB1553	滚针轴承	Needle bearing	1
54	PFNA1739	20 旋梭传动轴挡圈	Retaining ring	1
55	PFNA0229	螺钉 M6x0.75x5	Screw M6X0.75X5	2
56	PFNA0304	螺钉 M5x5	Screw M5x5	1
57	PFNB1557	592 旋梭传动曲柄	Crank	1
58	PFNA0203	螺钉 M4x10	Screw M4x10	2
59	PFNA0203	螺钉 M4x10	Screw M4x10	1
60	PFNA1746	动刀	Movable knife	1
62	PFNA0120	螺钉 M4x6	Screw M4x6	1
63	PFNA1749	偏心销	Eccentric pin	1
64	PFNA1750	定刀	Fixed knife	1
66	PFNA1752	螺钉 M2.5x3	Screw M2.5x3	1
67	PFNA1753	线夹	Wire clip	1
69	PFNA0118	螺钉 M4x25	Screw M4x25	1
70	PFNA1756	定刀支架部件	Movable knife lever	1
71	PFNA1757	勾线板支架 A	Knife holder	1
72	PFNA1758	定刀支把	Fixed knife bracket seat	1
73	PFNA1759	传动齿轮	Transmission gear	1
74	PFNA1760	螺钉 M4x4	Screw M4x4	2
75	PFNA1761	定位销 3x10	Pin 3x10	1
76	PFNA1762	梭心	Bobbin	1

16. 旋梭左支座(2) Hook post, left(2)

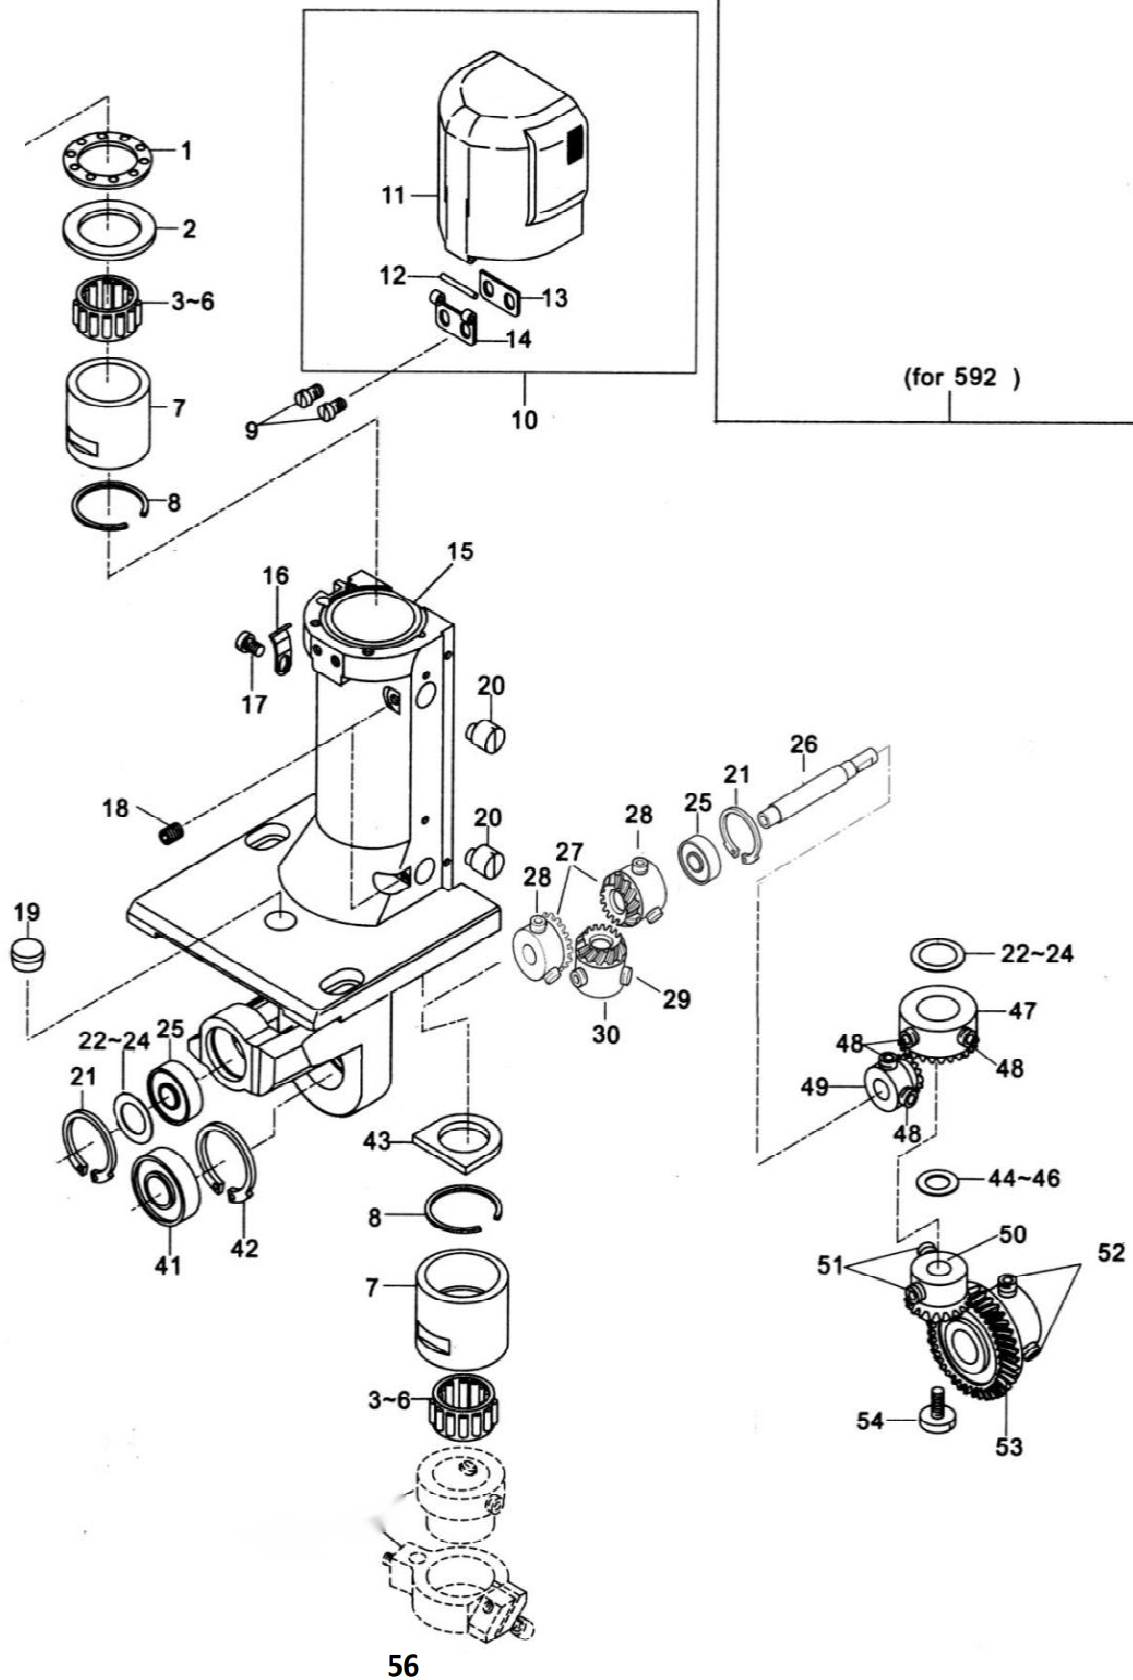


Per. No	Part No	名称	Description	Qty
01	PFNA1811	端面轴承	End bearing	1
02	PFNA1812	垫圈	Washer	1
03	PFNA1813	滚针轴承	Needle bearing	2
04	PFNA1813	滚针轴承	Needle bearing	2
05	PFNA1814	滚针轴承	Needle bearing	2
06	PFNA1815	滚针轴承	Needle bearing	2
07	PFNA1817	旋梭传动轴轴套	Hook shaft sleeve	2
08	PFNA1818	挡圈	Collar	2
09	PFNA0120	螺钉 M4x8	Screw M4x8	2
10	PFNA1801	旋梭防护罩组件	Hook shield components	1
11	PFNA1802	旋梭防护罩	Hook shield	1
12	PFNA1803	销	Pin	1
13	PFNA1804	垫片	Washer	1
14	PFNA1805	护罩转动座	Shield driving seat	1
15	PFNB1615	旋梭左支座 D 喷漆	Hook the left bearing	1
16	PFNA1819	弹簧板	Spring plate	1
17	PFNA1426	螺钉 M4x6	Screw M4x6	1
18	PFNA1810	螺钉 M4x6	Screw M4x6	2
19	PFNA1906	油塞	Oil plug	1
20	PFNA1809	偏心销	Eccentric pin	2
21	PFNA1908	22 挡圈	Collar	2
22	PFNA1909	垫片	Washer	1
23	PFNA1910	垫片	Washer	1
24	PFNA1911	垫片	Washer	1
25	PFNA1912	608ZZ 轴承	Bearing	2
26	PFNB1626	送料主动轴	Feeding drive shaft	1
27	PFNB1627	送料齿轮	Feeding gear	2
28	PFNB1628	螺钉	Screw	4
29	PFNB1629	螺钉	Screw	2
30	PFNB1630	送料齿轮	Screw	1
41	PFNA1823	轴承 6001ZZ	Bearing	1
42	PFNA1822	28 挡圈	Collar	1
43	PFNA1824	油毡	Oil felt	1
44	PFNB1644	垫片 0.1	Washer	3
45	PFNB1645	垫片 0.15	Washer	3
46	PFNB1646	垫片 0.2	Washer	3
47	PFNB1647	592 送料齿轮 II 组件	592 feeding drive gear components II	1
48	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	4
49	PFNB1649	592 送料边轮 I	592 feeding drive gear I	1
50	PFNA1827	传动旋梭齿轮 II	The hook driving gear II	1
51	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	2
52	PFNA0229	螺钉 M6x0.75x6	Screw M6x0.75x6	2
53	PFNA1830	传动旋梭齿轮 I 组件	The hook driving gear components 11	1
54	PFNB1654	螺钉 M4x10	Screw M4x 10	1

17. 旋梭右支座(1) Hook post , right(1)

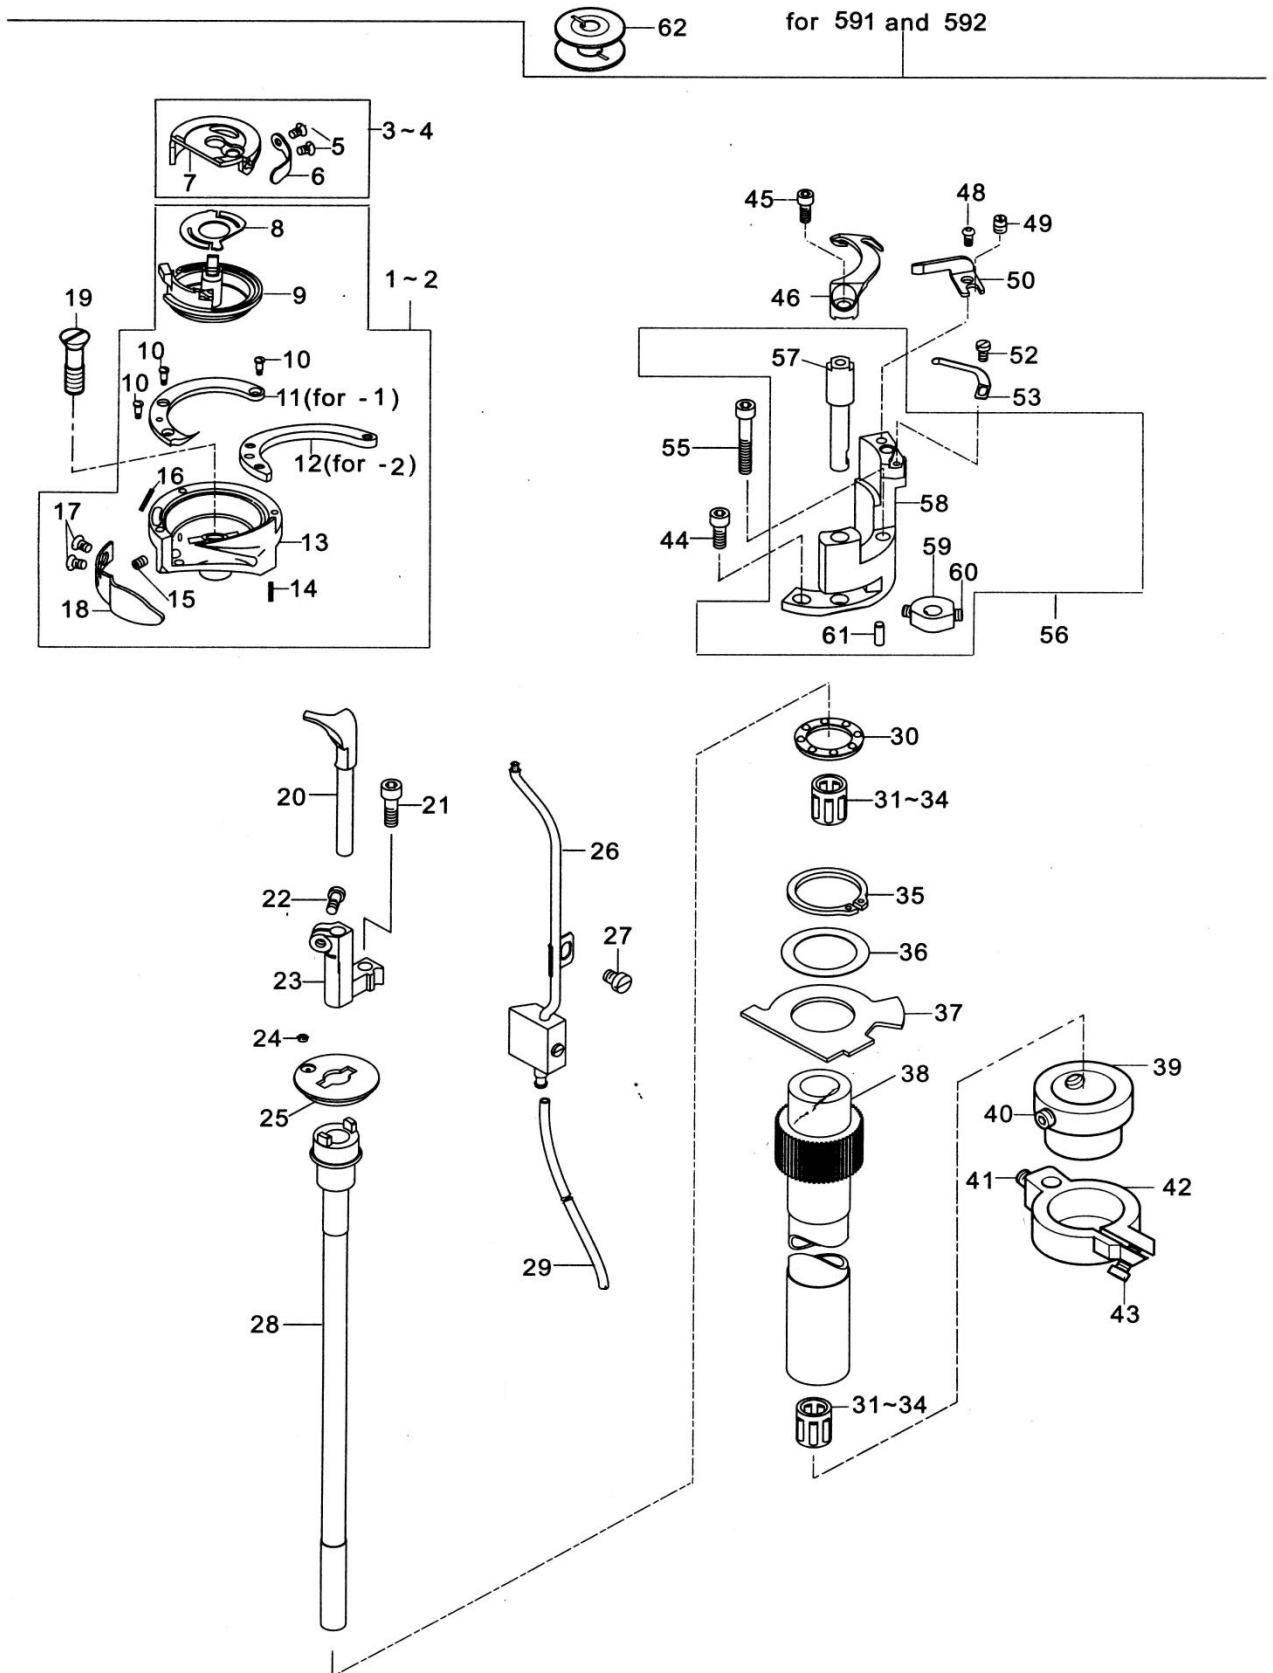


Per.No	Part No	名称	Description	Qty
01	PFNA1701	进口旋梭	Import Hook	1
02	PFNA1702	国产旋梭	Domestic Hook	1
03	PFNA1703	国产梭壳组件	Domestic Bobbin case asm	1
04	PFNA1704	进口梭壳组件	Import Bobbin case asm	1
05	PFNA1705	板式弹簧螺钉	Screw	2
06	PFNA1706	板式弹簧	Spring plate	1
07	PFNA1707	梭头体	Hook-top	1
08	PFNA1708	弹簧片	Spring	1
09	PFNA1709	梭宛	Shuttle wan	1
10	PFNA1710	螺钉	Screw	3
11	PFNA1711	内梭头舌（进口）	Import Shuttle' tongue	1
12	PFNA1712	内梭头舌（国产）	Domestic Shuttle' tongue	1
13	PFNA1713	梭壳	Bobbin case	1
14	PFNA1714	注塞	Wick	1
15	PFNA1715	螺钉 M3x4	Oil felt wick	1
16	PFNA1716	螺钉 M3x4	Screw M3x4	1
17	PFNA1717	螺钉 M2. 6x4	M2. 6x4	1
18	PFNA1718	护针板	Needle protected plate	1
19	PFNA1719	螺钉 M5x20（特殊）	Screw M5x20	1
20	PFNA1720	旋梭定位勾	Positioning finger	1
21	PF1790S0326	螺钉 M4x12	Screw M4x12	1
22	PFNA0325	螺钉 M4x6	Screw M4x6	1
23	PFNA1723	旋梭定位勾座	Positioning finger plate	1
24	PFNA1724	O 形圈	O ring	2
25	PFNA1725	旋梭端盖	hook lid	1
26	PFNA1726	油量调节组成	Rubber assy	1
27	PFNA1426	螺钉 M4x5	Screw M4x5	1
28	PFNA1728	旋梭传动芯轴	Hook transmission mandrel	1
29	PFNA0121	油管	Oil felt	1
30	PFNA1730	小端面轴承	End bearing	1
31	PFNA1731	滚针轴承	Needle bearing	2
32	PFNA1732	滚针轴承	Needle bearing	2
33	PFNA1733	滚针轴承	Needle bearing	2
34	PFNA1734	滚针轴承	Needle bearing	2
35	PFNA1735	轴用挡圈	Collar	1
36	PFNA1736	20 旋梭护片垫圈	Washer	1
37	PFNA1737	旋梭护片	Armor pieces	1
38	PFNA1738	旋梭传动轴	hook shaft	1
39	PFNA1739	20 旋梭传动轴挡圈	Collar	1
40	PFNA0229	螺钉 M6x0. 75x5	Screw M6x0. 75x5	2

17. 旋梭右支座(1) Hook post, right(1)

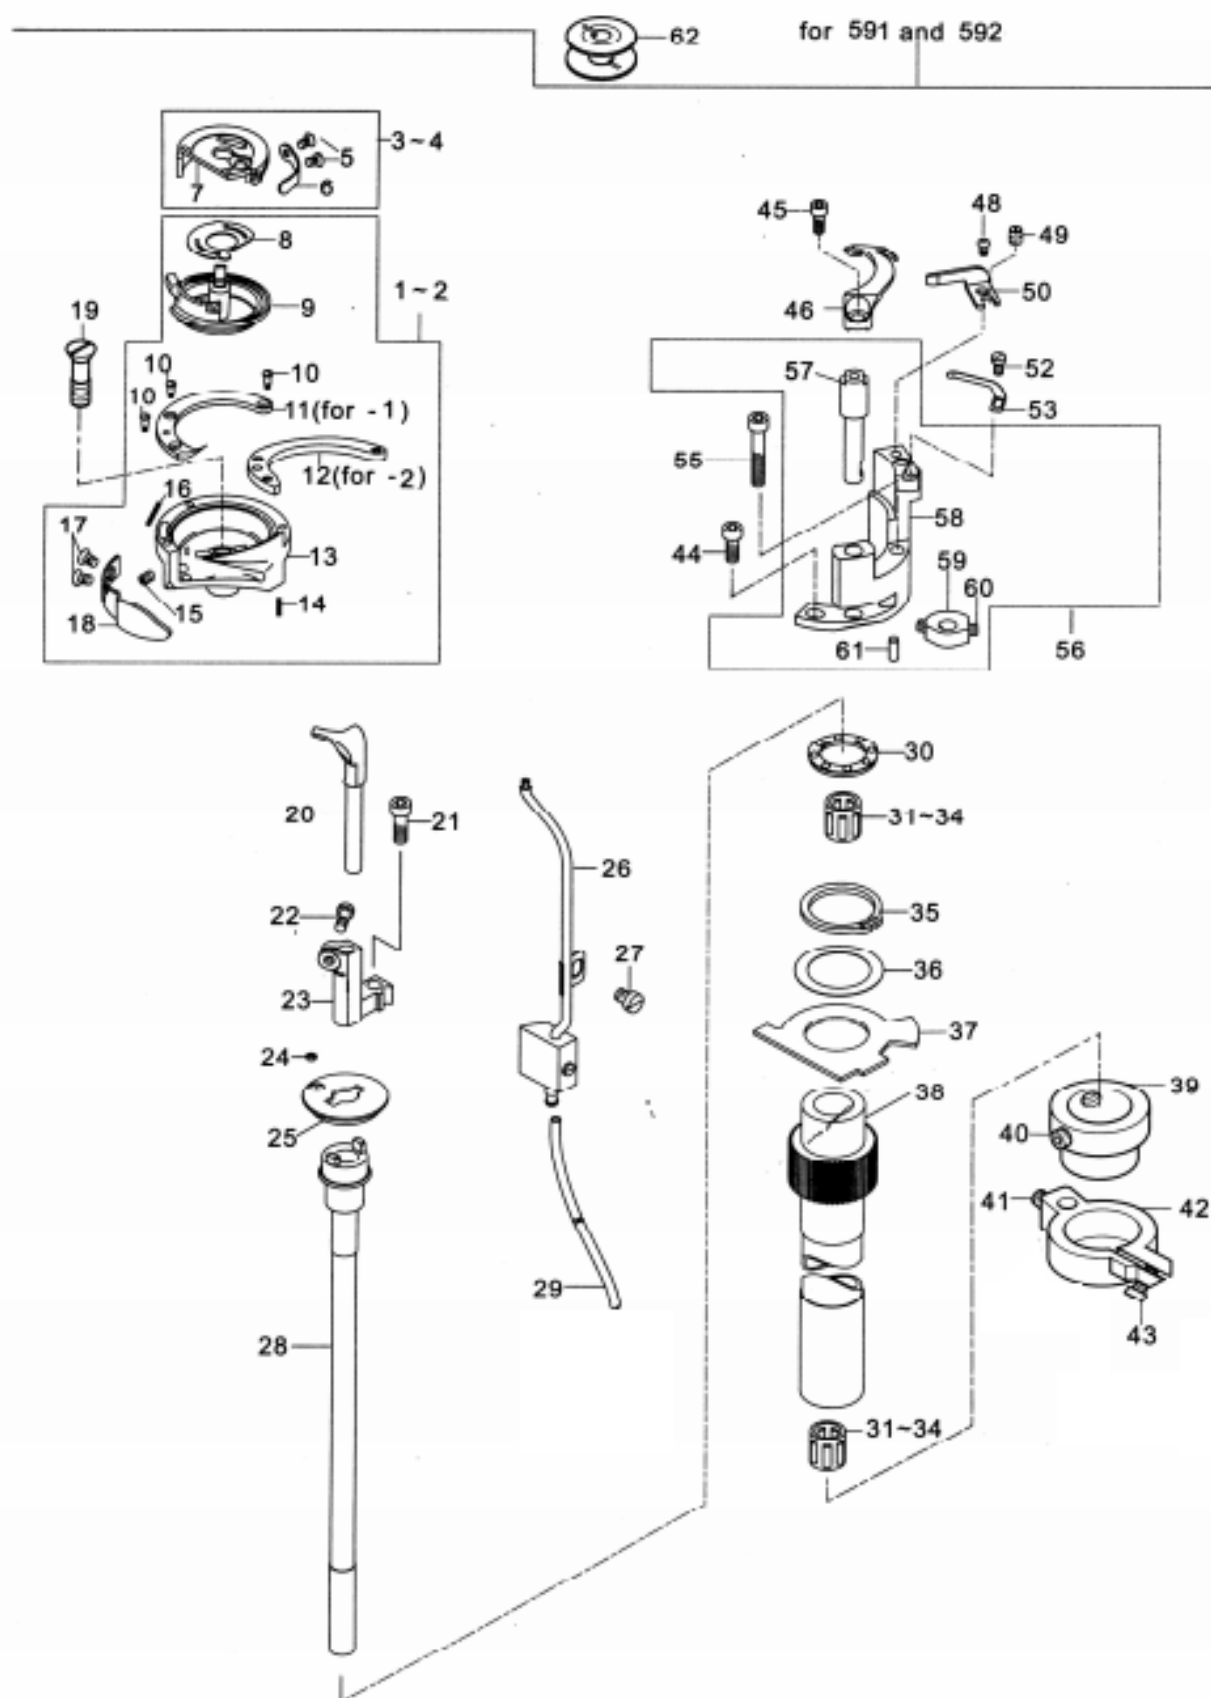


Per.No	Part No	名称	Description	Qty
41	PFNA0304	螺钉 M5x5	Screw M5x5	1
42	PFNA1742	旋梭传动曲柄	Crank	1
43	PFNA0131	螺钉 M4x10	Screw M4x10	1
44	PFNA0203	螺钉 M4x10	Screw M4x10	2
45	PFNA0203	螺钉 M4x10	Screw M4x10	1
46	PFNA1746	动刀	Movable knife	1
48	PFNA1748	螺钉 M4x6	Screw M4x6	1
49	PFNA1749	偏心销	Eccentric pin	1
50	PFNA1750	定刀	Fixed knife	1
52	PFNA1752	螺钉 M2.5x3	Screw M2.5x3	1
53	PFNA1753	线夹	Wire clip	1
55	PFNA0118	螺钉 M4x25	Screw M4x25	1
56	PFNA1756	定刀支架部件	Moveble knife lever	1
57	PFNA1757	勾线板支架 A	Knife holder	1
58	PFNA1758	定刀支架	Fixed knife bracket seat	1
59	PFNA1759	传动齿轮	Transmission gear	1
60	PFNA1760	螺钉 M4x4	Screw M4x4	2
61	PFNA1761	定位销 3x10	Pin 3x10	1
62	PFNA1762	梭心	Bobbin	1

18. 旋梭右支座(2) Hook post , right(2)

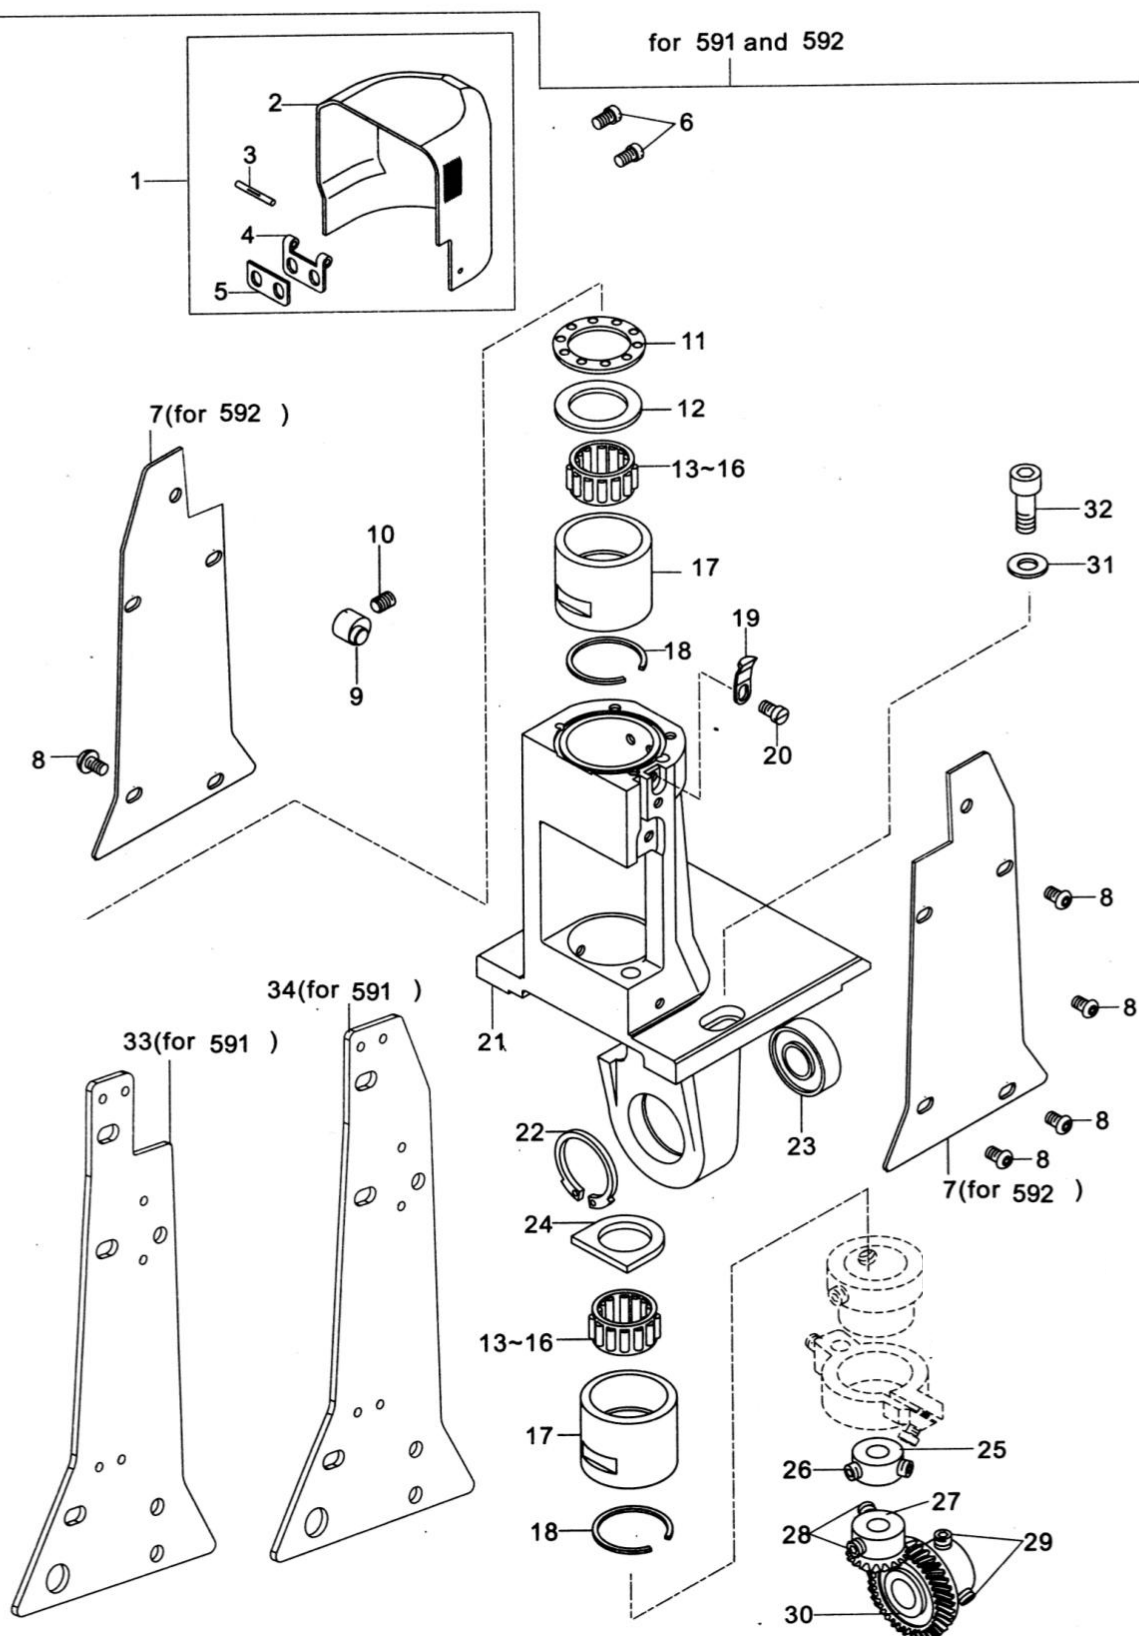


Per. No	Part No	名称	Description	Qty
01	PFNA1801	旋梭防护罩组件	Hook shield components	1
02	PFNA1802	旋梭防护罩	Hook shield	1
03	PFNA1803	销	Pin	1
04	PFNA1804	护罩转动座	Shield driving seat	1
05	PFNA1805	垫片	Washer	1
06	PFNA0539	螺钉 M4x6	Screw M4x8	2
07	PFNB1807	侧盖板喷漆 (for 592)	Double needle plate measuring (for592)	2
08	PFNA0120	螺钉 M4x6	Screw M4x6	10
09	PFNA1809	偏心销	Eccentric pin	2
10	PFNA1810	螺钉 M4x6	Screw M4x6	2
11	PFNA1811	端面轴承	End bearing	1
12	PFNA1812	21 垫圈	Washer	1
13	PFNA1813	滚针轴承 (+2, 0)	Needle bearing	2
14	PFNA1814	滚针轴承 (-2, 0)	Needle bearing	2
15	PFNA1815	滚针轴承 (+2, +4)	Needle bearing	2
16	PFNA1816	滚针轴承 (-2, -4)	Needle bearing	2
17	PFNA1817	旋梭传动轴轴套	Hook shaft sleeve	2
18	PFNA1818	挡圈	Collar	2
19	PFNA1819	弹簧板	Spring plate	1
20	PFNA1426	螺钉 M4x6	Screw M4x6	1
21	PFNA1821	旋梭支座喷漆	Hook the right bearing	1
22	PFNA1822	28 挡圈	Collar	1
23	PFNA1823	轴承 6001ZZ	Bearing 6001ZZ	1
24	PFNA1824	油毡	Oil felt	1
25	PFNA1825	8 旋梭传动芯轴挡圈	Collar	1
26	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	2
27	PFNA1827	旋梭传动齿轮 II	The hook driving gear II	1
28	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	2
29	PFNA0229	螺钉 M6x0.75x6	Screw M6x0.75x6	2
30	PFNA1830	旋梭传动齿轮 I	The hook driving gear I	1
31	PFNA1831	垫圈 $\phi 6$	Washer $\phi 6$	2
32	PFNA0801	螺钉 M6x16	Screw M6x 16	2
33	PFNA1833	侧盖板 A 喷漆 (for591)	One needle plate measuring (for 591)	1
34	PFNA1834	侧盖板 B 喷漆 (for591)	Plate measuring (for 591)	1

19. 送料支座 Feed wheel post, left

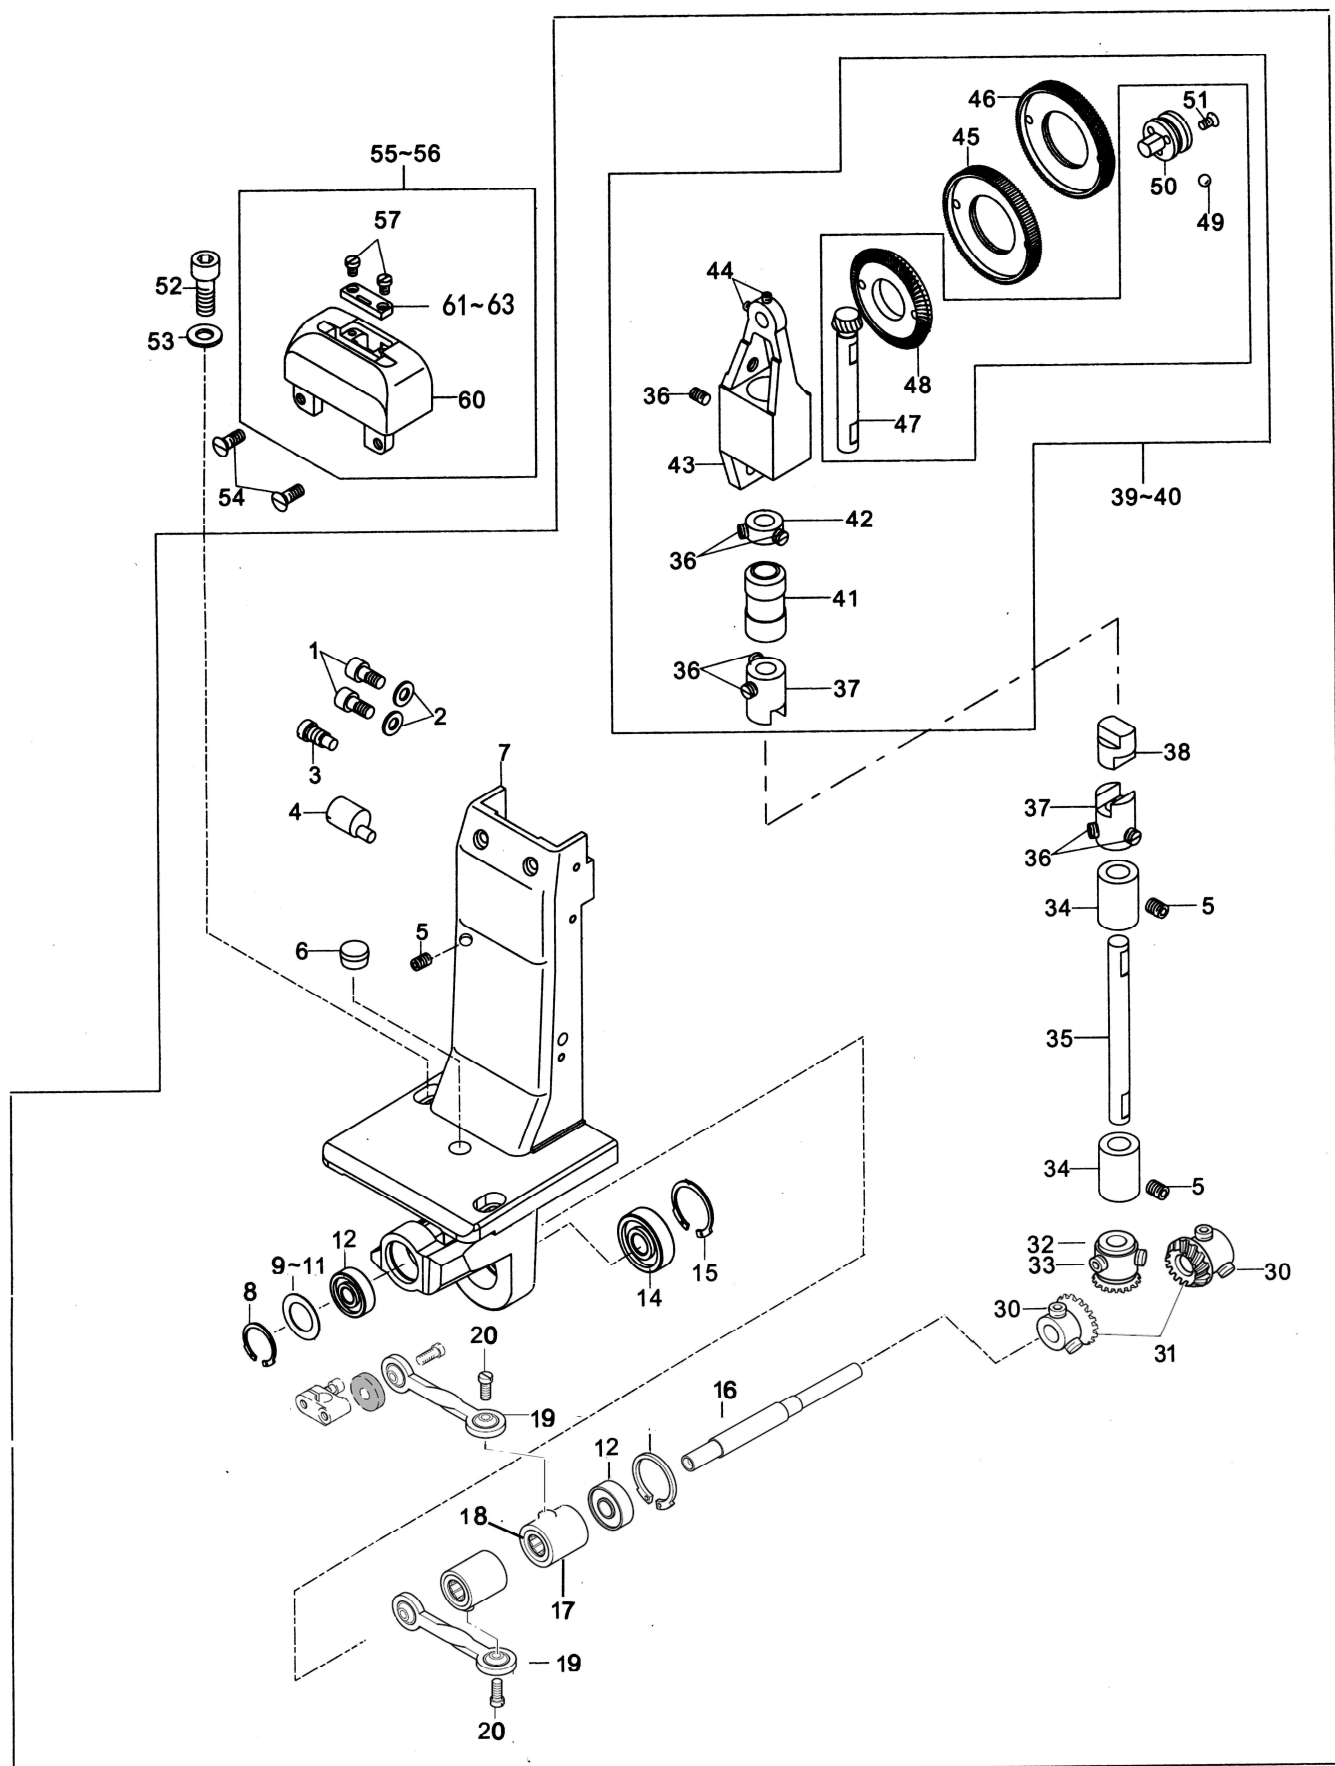

Per.No	Part No	名称	Description	Qty
01	PFNA0724	螺钉 M5x12	Screw M5x12	2
02	PFNA0725	垫圈 $\phi 5$	Washer $\phi 5$	2
03	PFNA1903	螺钉 M6x8(特殊)	Screw M6x8	1
04	PFNA1904	偏心销	Pin	1
05	PFNA1810	螺钉 M4x6	Screw M4x6	3
06	PFNA0128	油塞	Oil wick	1
07	PFNA1907	送料支座 D 喷漆	Feeding support D paint.	1
08	PFNA1908	22 挡圈	Collar	2
09	PFNA1909	垫片	Washer	2
10	PFNA1910	垫片	Washer	3
11	PFNA1911	垫片	Washer	3
12	PFNA1912	轴承 608ZZ	Bearing 608ZZ	2
14	PFNA1823	轴承 6001ZZ	Bearing 6001 ZZ	1
15	PFNA1822	28 挡圈	Colar	1
16	PFNA1916	送料主动轴	Feeding drive shaft	1
17	PFNA1917	轴承座组件	Bearing seat asm	2
18	PFNA0243	单向轴承	One way bearing	2
19	PFNA0226	球连杆组件	Ball connecting rod component	2
20	PFNA0325	螺钉 M4X9	Screw	4
30	PFNA0229	螺钉 M6X0. 75X6	Screw M6x0.7x6	2
31	PFNA1931	送料机构齿轮 I	Feeding mechanism of gear I	2
32	PFNA1932	送料机构齿轮 II	Feeding mechanism of gear II	1
33	PFNA0229	螺钉 M6x0.75x5	Screw M6x0.75x5	2
34	PFNA1934	套	Axle sleeve	2
35	PFNA1935	送料传动轴	Feeding transmission shaft	1
36	PFNA0304	螺钉 M5x5	Screw M5x5	2
37	PFNA1937	联接衬套	Coupling bushing	1
38	PFNA1938	联接块	Connecting block	1
39	PFNA1939	送料机构（直齿送料轮）	Straight tooth feeding mechanism	1
40	PFNA1940	送料机构（滚花送料轮）	Knurling tooth feeding mechanism	1


19. 送料支座 Feed wheel post, left

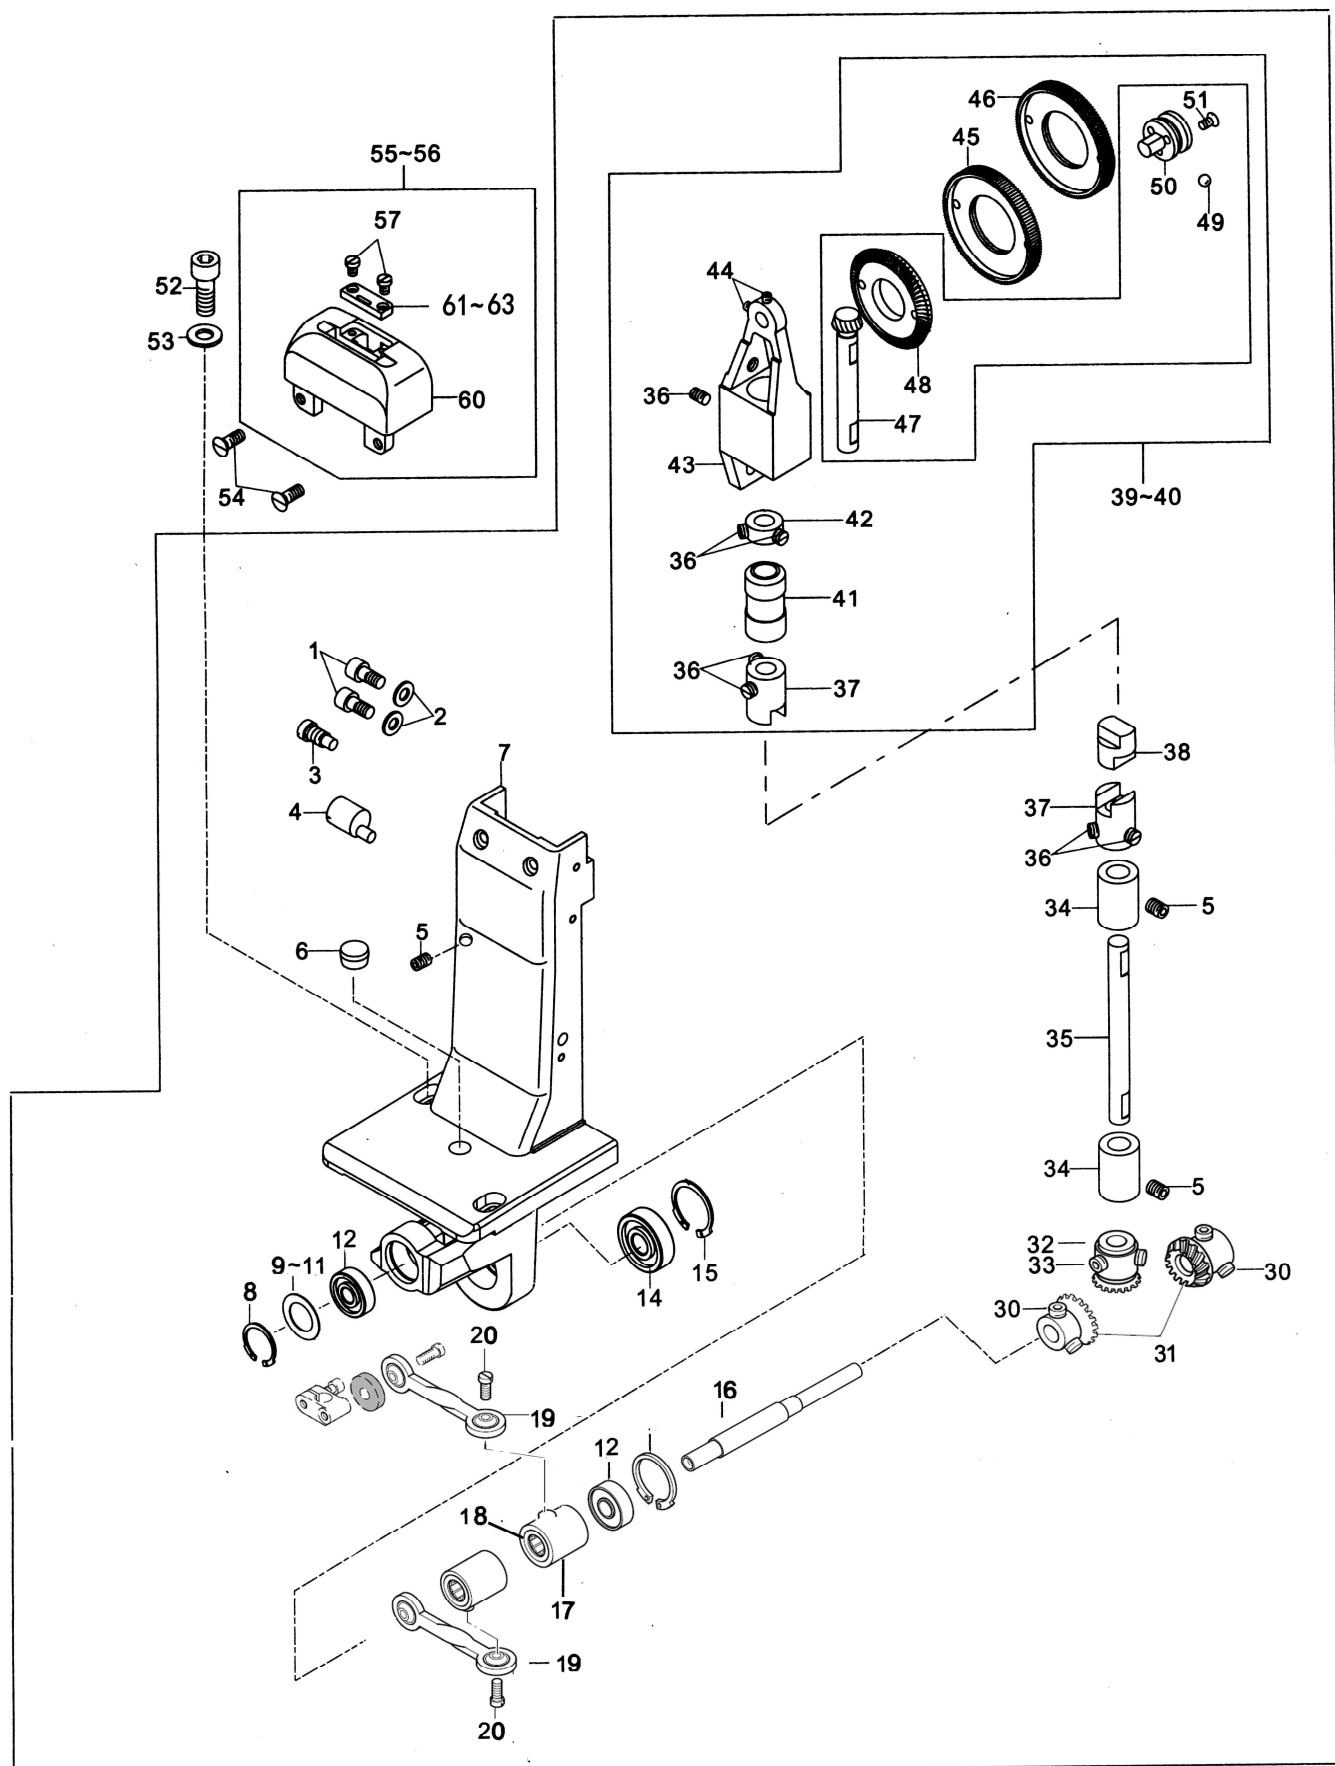

Per. No	Part No	名称	Description	Qty
41	PFNA1941	送料机构座前轴套	Axle sleeve	1
42	PFNA1942	送料传动锥齿轮挡圈	Collar	1
43	PFNA1943	送料机构座	Feeding mechanism of bearing	1
44	PFNA1944	螺钉 M3x4	Screw M3x4	2
45	PFNA1945	送料盘（直齿送料轮）	Feeding straight tooth	1
46	PFNA1946	送料盘（滚花送料轮）	Knurling tooth feed tray	1
47	PFNA1947	送料传动锥齿轮 I	The feed driving bevel gear I	1
48	PFNA1948	送料传动锥齿轮 II	The feed driving bevel gear II	1
49	PFNA1949	钢球 $\phi 2$	Steel ball $\phi 2$	23
50	PFNA1950	送料齿联接块组件	The Connecting block assembly	1
51	PFNA1951	螺钉 M2.5x4	Screw M2.5x4	3
52	PFNA0801	螺钉 M6x16	Screw M6x 16	2
53	PFNA1831	垫圈 $\phi 6$	Washer $\phi 6$	2
54	PFNA1031	螺钉 M4x8	Screw M4x8	2
55	PFNA1955	单针针板组件（1.6*3.7）	Single needle plate assembly（1.6*3.7）	1
56	PFNA1956	单针针板组件（1.8*3.9）	Single needle plate assembly（1.8*3.9）	1
57	PFNA1957	针板螺钉 M2x3	Screw M2x3	2
60	PFNA1960	针板罩 S	needle plate seat	1
61	PFNA1961	小针板（1.6*3.7）	Small needle plate -thick（1.6*3.7）	1
62	PFNA1962	小针板（1.8*3.9）	Small needle plate -thick（1.8*3.9）	1
63	PFNA1963	小针板（2.3*4.7）	Small needle plate -thick（2.3*4.7）	1

20. 送料轮托盘

 
Feed wheel mounting plate



Per. No	Part No	名称	Description	Qty
01	PFNB2001	送料轮调整块	Feeding wheel adjusting block	1
02	PFNB2002	送料轮	Feeding wheel	1
03	PFNB2003	螺钉 M4x10	Screw M4x 10	6
04	PFNA0801	螺钉 M6x16	Screw M6x10	4
05	PFNA1831	垫圈 Φ6	Washer Φ6	4
06	PFNB2006	螺钉 M4x6	Screw M4x6	2
07	PFNB2007	双针针板组件(N1.2-1.8, S2.8)	Double needle plate assembly(N1.2-1.8)	1
08	PFNB2008	双针针板组件(N2.0-2.4, S2.8)	Double needle plate assembly(N2.0-2.4)	1
09	PFNB2009	双针针板固定螺钉 M3x3.2	Screw M3x 3.2	2
10	PFNB2010	双针小针板(N1.2-1.8, S2.8)	Small double needle plate(N1.2-1.8)	1
11	PFNB2011	双针小针板(N2.0-2.4, S2.8)	Small double needle plate(N2.0-2.4)	1
12	PFNB2012	针板罩(N1.2-1.8, S2.8)	Double needle plate cover(N1.2-1.8)	1
13	PFNB2013	针板罩(N2.0-2.4, S2.8)	Double needle plate cover(N2.0-2.4)	1
14	PFNB2014	针板罩座(N1.2-1.8, S2.8)	Double needle plate cover seat(N1.2-1.8)	1
15	PFNB2015	针板罩座(N2.0-2.4, S2.8)	Double needle plate cover seat(N2.0-2.4)	1
16	PFNB2016	双针针板组件(N1.8, S3.2)	Double needle plate assembly(N1.8)	1
18	PFNB2018	双针小针板(N1.8, S3.2)	Small double needle plate(N1.8)	1
20	PFNB2020	针板罩(N1.8, S3.2)	Double needle plate cover(N1.8)	1
21	PFNB2021	针板罩座(N1.8, S3.2)	Double needle plate cover seat(N1.8)	1
22	PFNB2022	双针针板组件(2.2-2.6)	Double needle plate assembly(2.2-2.6)	1
23	PFNB2023	双针小针板(N2.2-2.6)	Small double needle plate(N2.2-2.6)	1

21. 倒缝装置


Backtacking mechanism

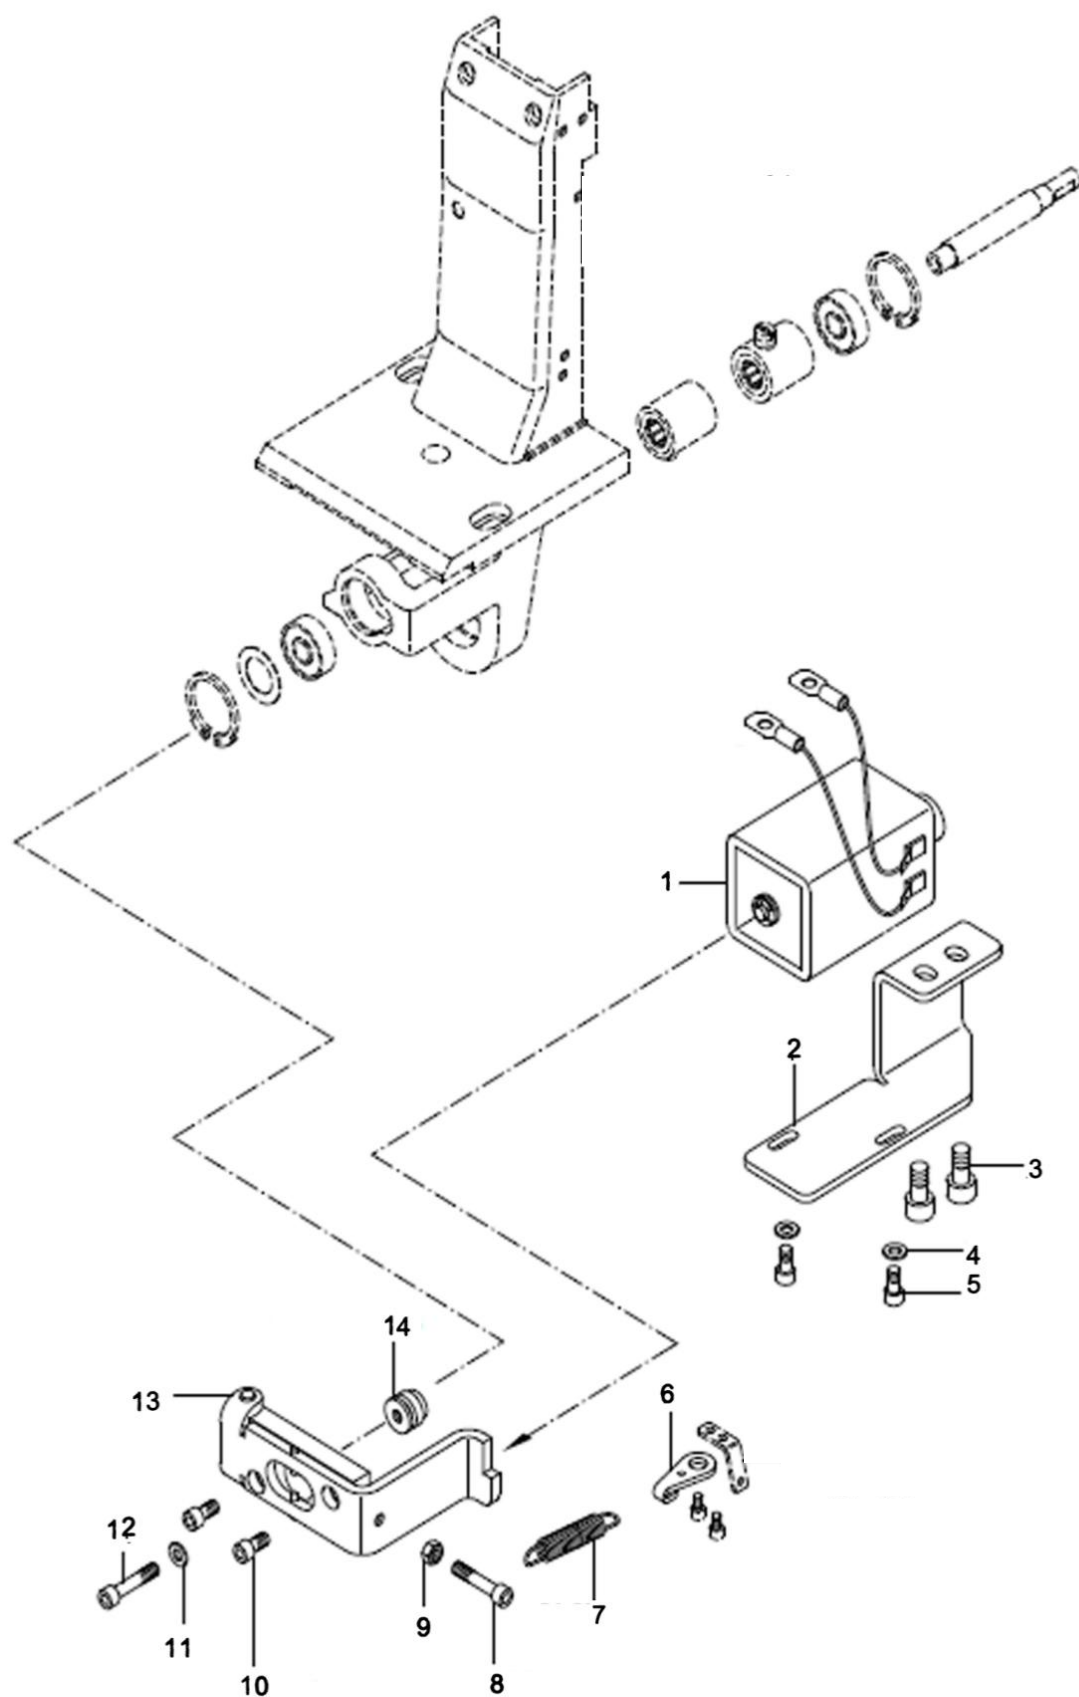

Per. No	Part No	名称	Description	Qty
01	PFNA2101	倒缝电磁铁	Backstitch electromagnet	1
02	PFNA2102	电磁铁支架	Electromagnet bracket	1
03	PFNA0106	螺钉 M6x10	Screw M6x 10	2
04	PFNA0127	垫圈 $\phi 4$	Washer $\phi 4$	2
05	PFNA0325	螺钉 M4x6	Screw M4x6	2
06	PFNA2106	弹簧固定板	Spring Board	1
07	PFNA2107	复位弹簧	Reset spring	1
08	PFNA2108	螺钉 M5X30	Screw	1
09	PFNA2109	螺母 M5	Nut M5	1
10	PFNA0203	螺钉 M4x8	Screw	2
11	PFNA0127	垫圈 $\phi 4$	Washer $\phi 4$	1
12	PFNA2112	螺钉 M4X20	Screw	1
13	PFNA2113	倒缝支座	Backstitch transmission	1
14	PFNA2114	倒缝连接嘴	Backstitch Connector	1


22. 倒缝装置

Backtacking mechanism

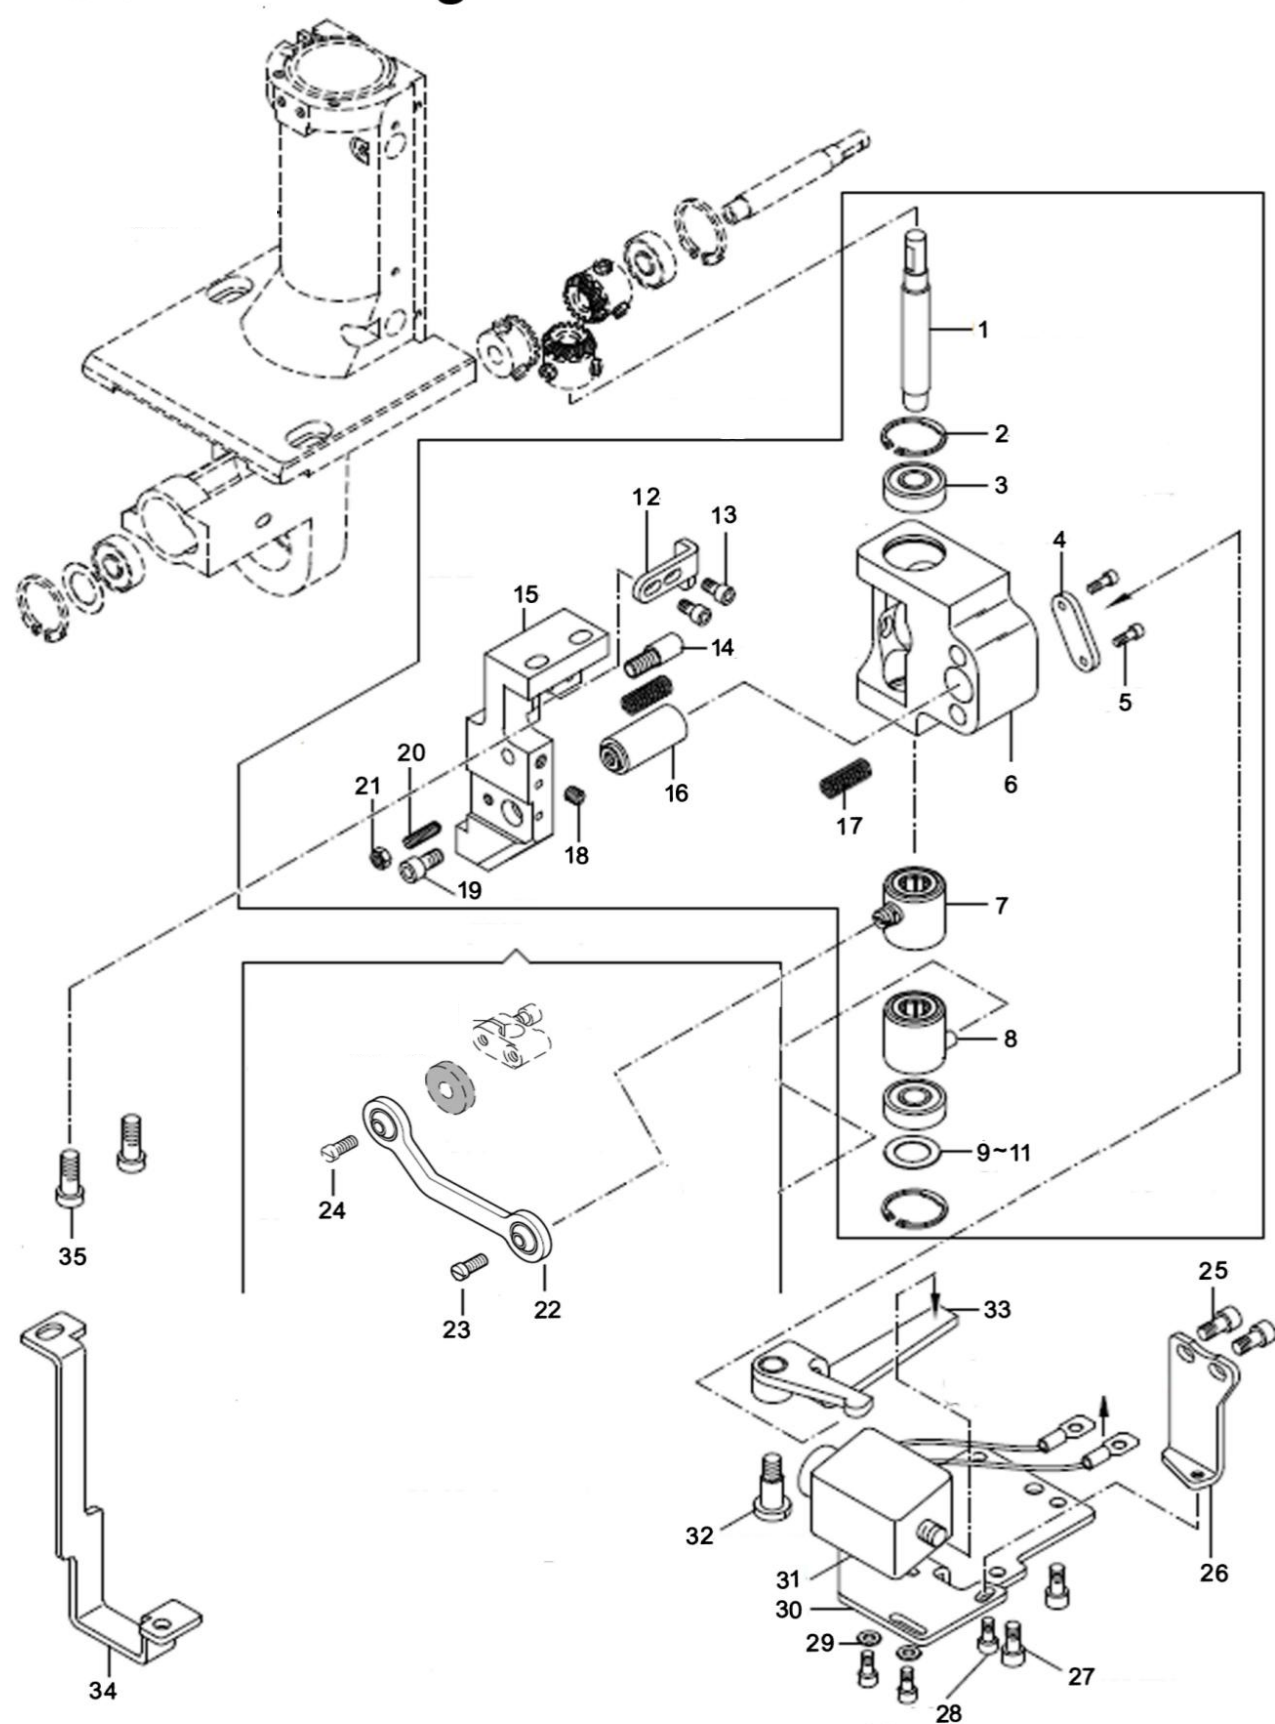



Per. No	Part No	名称	Description	Qty
01	PFNB1626	轴	Shaft	1
02	PFNA1908	22 挡圈	Collar	2
03	PFNA1912	轴承 608ZZ	Bearing 608ZZ	1
04	PFNB2204	平板	PLATE	1
05	PFNB2205	螺钉 M4x8	Screw M4x8	2
06	PFNB2206	倒缝支座	Backstitch transmission	1
07	PFNB2207	轴承座	Bearing seat	2
08	PFNB2208	单向轴承	One way bearing	2
09	PFNA1909	垫片	Washer	1
10	PFNA1910	垫片	Washer	1
11	PFNA1911	垫片	Washer	1
12	PFNB2212	定位片	Positioning piece	1
13	PFNB2213	螺钉	Screw	2
14	PFNB2214	偏心销	Eccentric pin	1
15	PFNB2215	倒缝固定座	Twist seat	1
16	PFNB2216	连接销	Connection pin	2
17	PFNB2217	弹簧	spring	1
18	PFNA0304	螺钉 M5X5	Screw	1
19	PFNA0131	螺钉 M5X10	Screw	1
20	PFNA0808	螺钉 M4X16	Screw	1
21	PFNA0116	螺母 M4	NUT	1
22	PFNB2222	球连杆组件	Ball connecting rod assembly	1
23	PFNA1920	螺钉 M4X9	Screw	1
24	PFNA1920	螺钉 M4X9	Screw	1
25	PFNA0131	螺钉 M5X10	Screw	2
26	PFNB2226	倒缝侧板	Backstitch side plate	1
27	PFNA0131	螺钉 M5X10	Screw	2
28	PFNA0325	螺钉 M4x8	Screw	4
29	PFNA0127	垫片	Washer	2
30	PFNB2230	电磁铁安装座	Electromagnet mount	1
31	PFNB2231	倒缝电磁铁	Reverse stitch electromagnet	1
32	PFNB2232	特殊螺钉	Screw	1
33	PFNB2233	倒缝曲柄	Backstitch crank	1
34	PFNB2234	支架	Bracket	1
35	PFNB2235	螺钉 M6X16	Screw	2

23. 剪线结构(-D) Thread trimmer (-D)

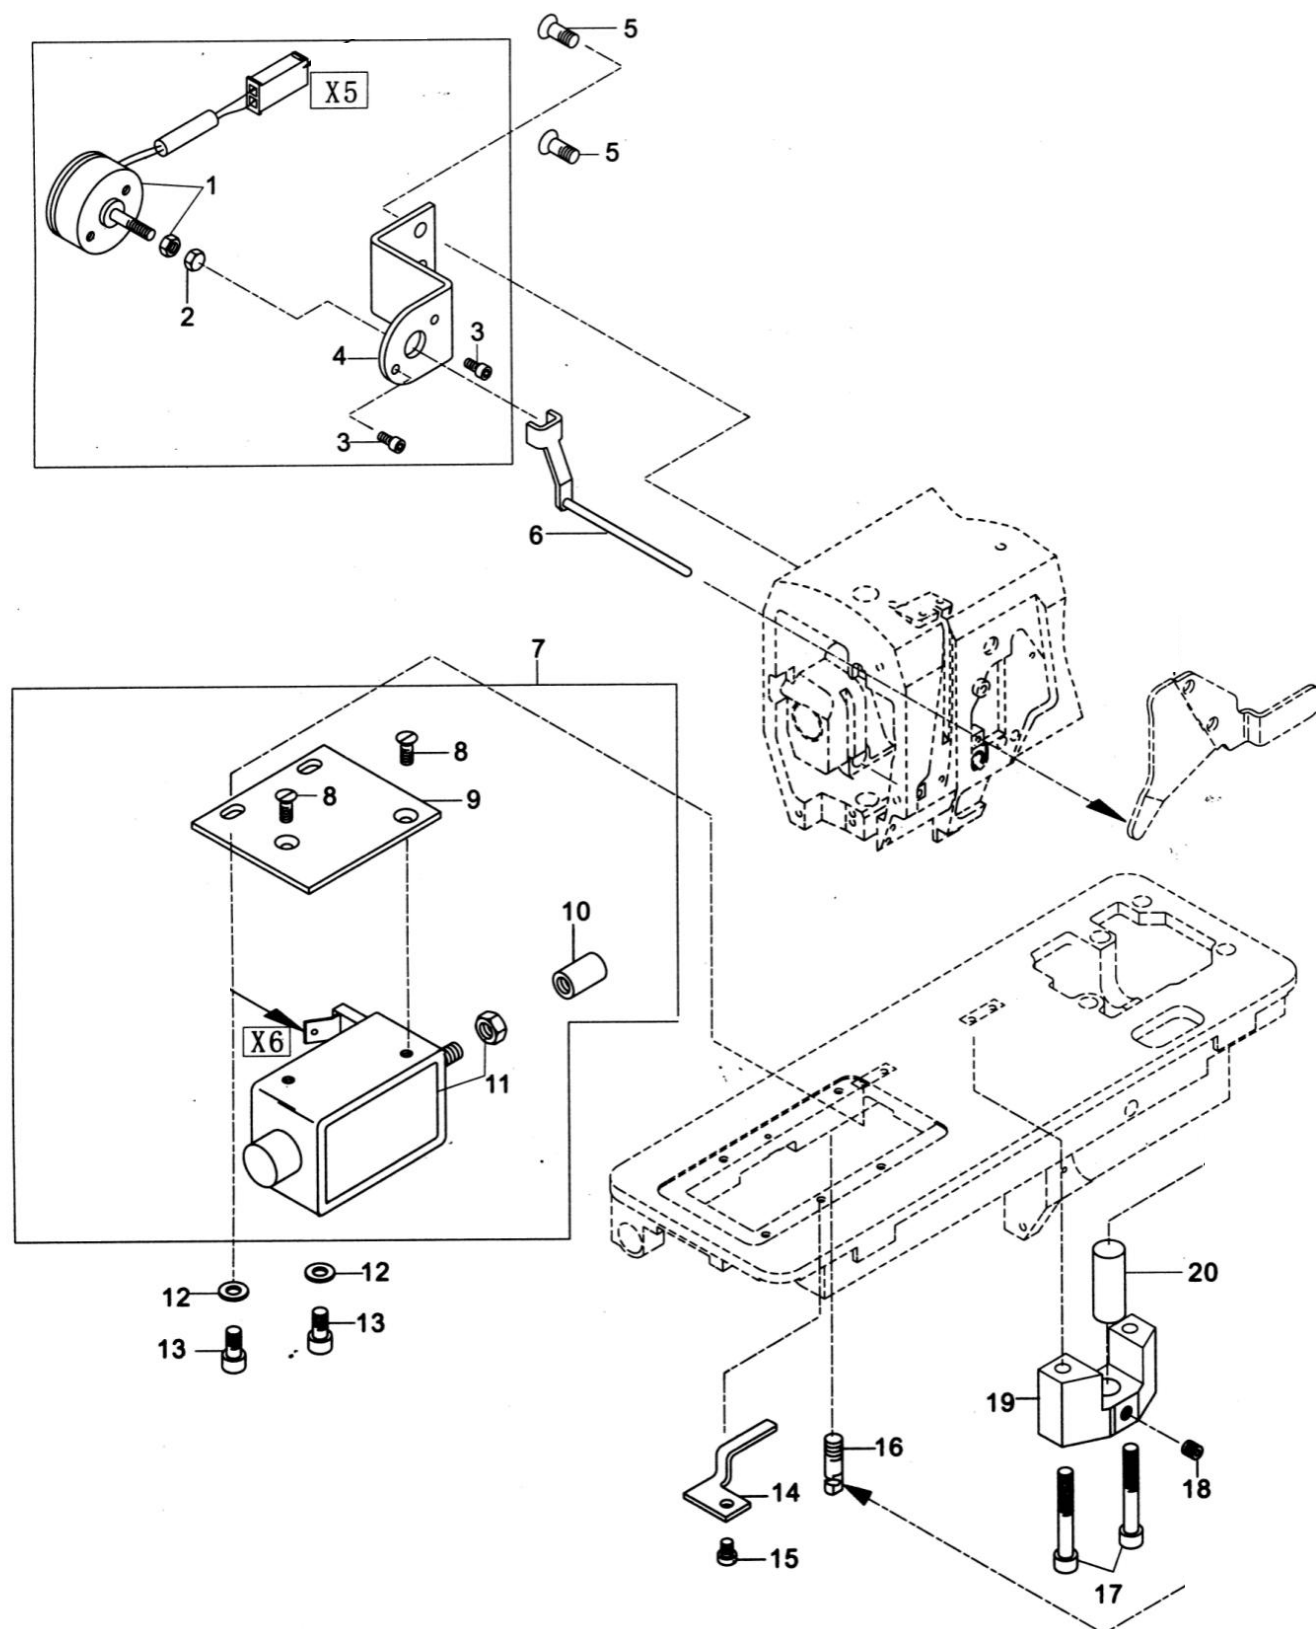

Per.No	Part No	名称	Description	Qty
01	PFNA2301	松线电磁铁	Loose line electromagnet	1
02	PFNA2302	松线电磁铁帽 M4	Nut M4	1
03	BF140130	螺钉 M3x5	Screw M3x5	2
04	PFNA2304	松线电磁铁安装板	Mounting plate.	1
05	PFNA2305	螺钉 M5x10	Screw M5x10	2
06	PFNA2306	电磁铁挺线钉	Tension release pin	1
07	PFNA2307	剪线电磁铁整组	Shear line electromagnet assembly	1
08	PF1900A0643	螺钉 M4x6	Screw M4x6	2
09	PFNA2308	剪线电磁铁安装板	Mounting plate	1
10	PFNA2309	剪线电磁铁联接节	Connecting block	1
11	PFNA2310	剪线电磁铁	Shear line electromagnet	1
12	PFNA0725	垫圈 $\phi 5$	Washer $\phi 5$	2
13	PFNA0131	螺钉 M5x10	Screw M5x10	2
14	PFNA2314	油线挡板	Oil line baffle	1
15	PFNA0325	螺钉 M4x5	Screw M4x5	1
16	PFNA0913	螺钉 M6x8 特殊	Screw M6x8	1
17	PFNA2108	螺钉 M5x30	Screw M5x30	2
18	PFNA0304	螺钉 M5x5	Screw M5x5 、	1
19	PFNA2319	剪线摆动杆座	Shear line swing rod seat	1
20	PFNA2320	剪线摆动杆座销 10x32	Pin 10x32	1


24. 剪线结构(-D) Thread trimmer (-D)

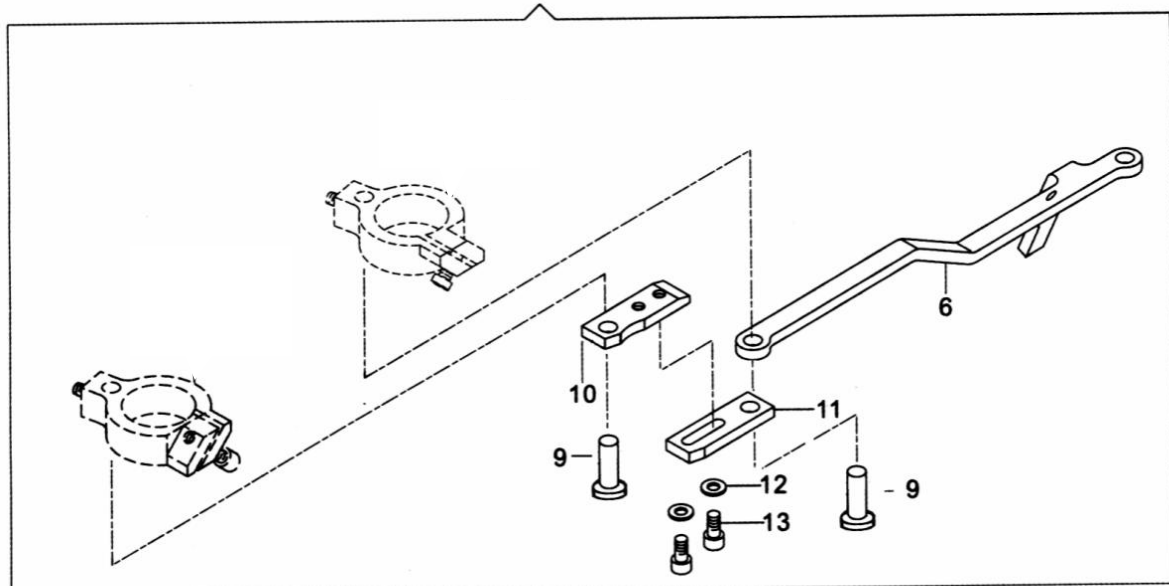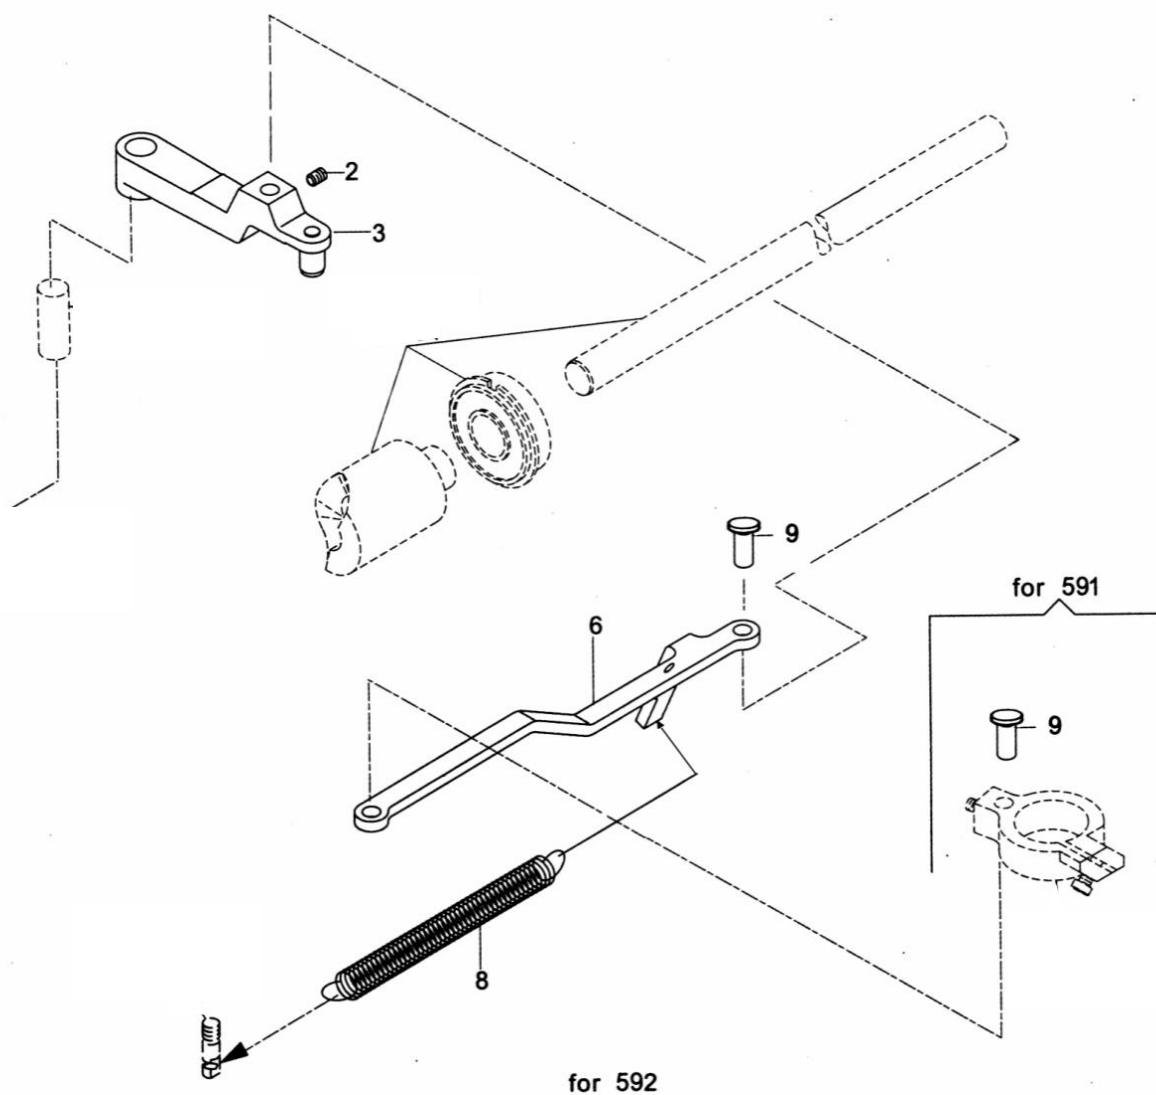

Per.No	Part No	名称	Description	Qty
01	PFNA2409	剪线摆动杆销	Pin	1
02	PFNA0304	螺钉 M5x5	Screw M5x5	1
03	PFNA2403	剪线摆动杆组件	Swing rod assembly	1
06	PFNA2406	剪线摆动拉杆	Shear line swing rod	1
08	PFNA2408	剪线摆动拉杆弹簧	Spring	1
09	PFNA2409	剪线摆动销	Pin	1
10	PFNA2410	剪线摆动拉杆连接板 II	Connecting plate II	1
11	PFNA2411	剪线摆动拉杆连接板 I	Connecting plate I	1
12	PFNA0127	垫圈 $\phi 4$	Washer $\phi 4$	2
13	PFNA0325	螺钉 M4x8	Screw M4x8	2


25 . 自动抬压脚

Automatic presser foot lifter

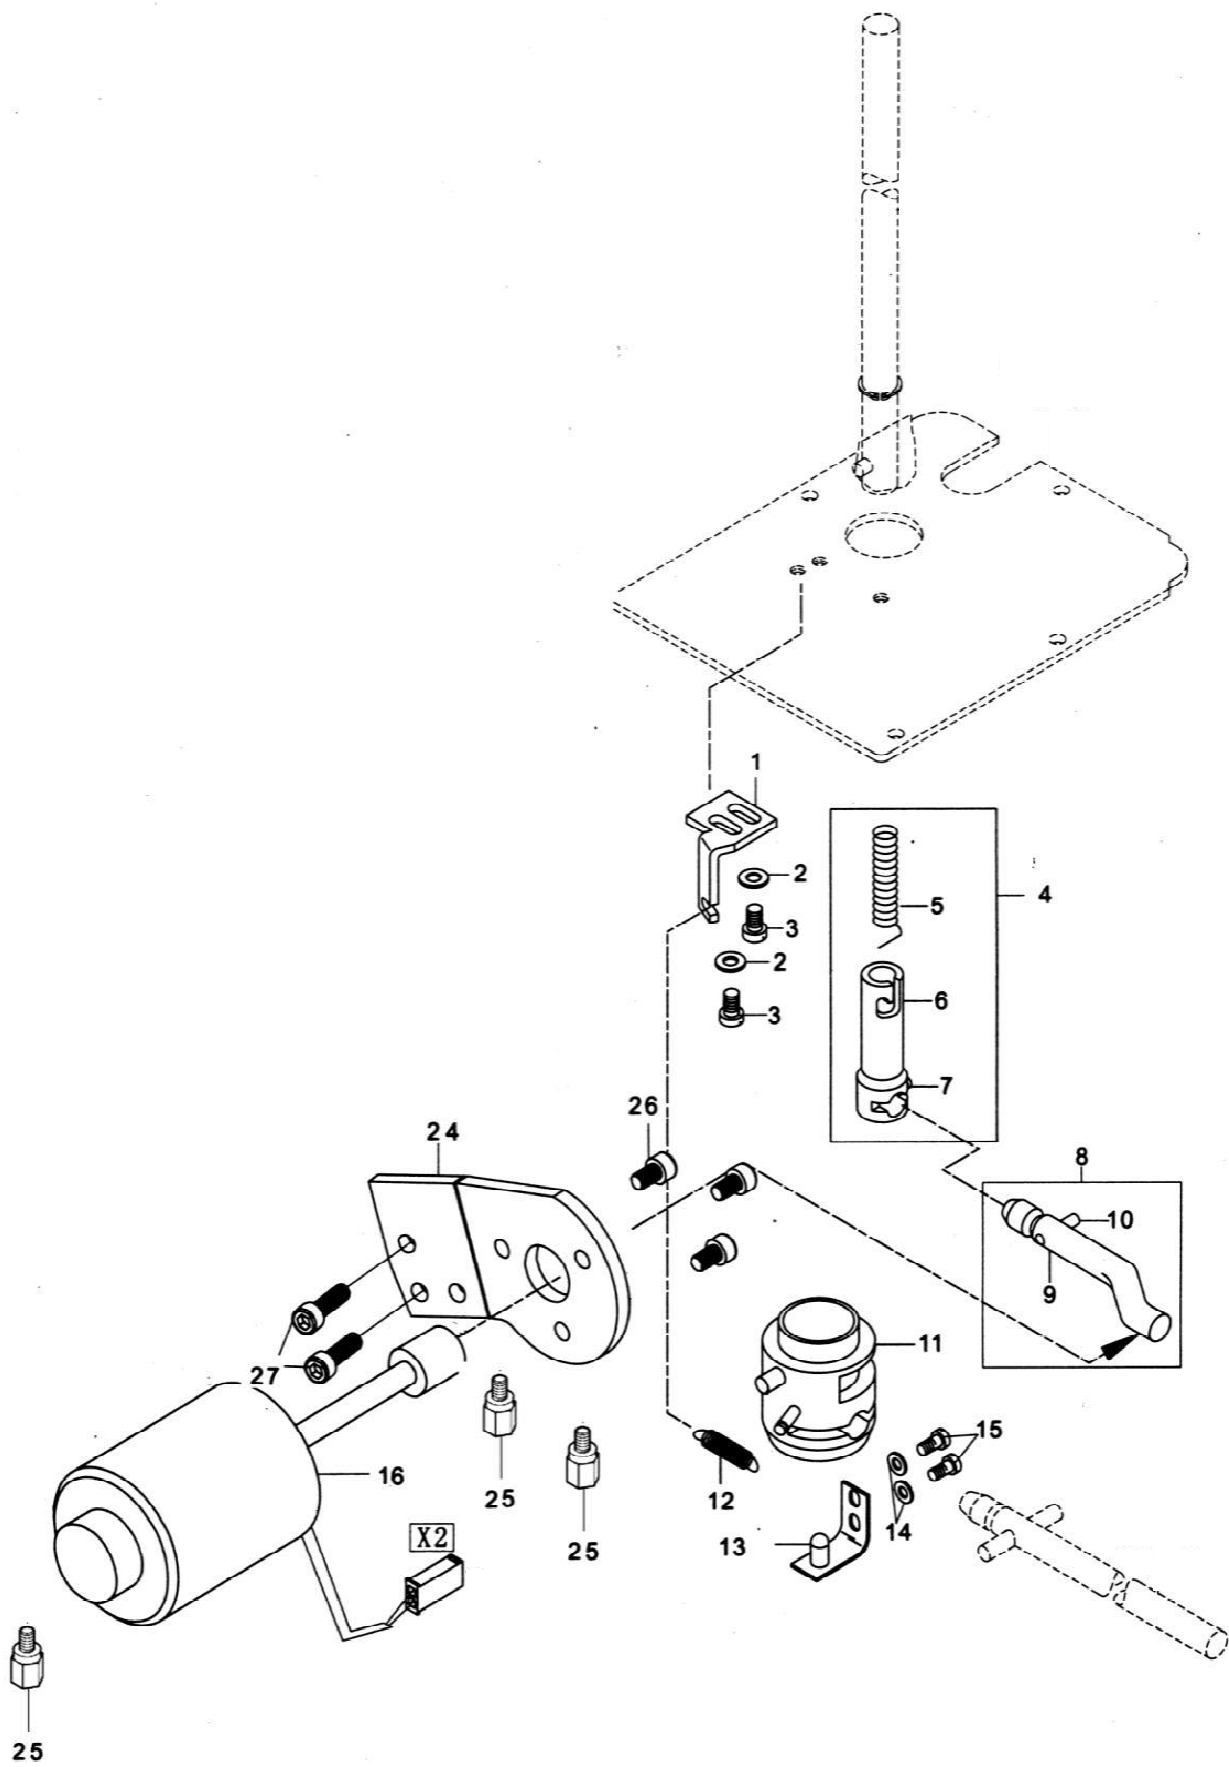

Per.No	Part No	名称	Description	Qty
01	PFNA2501	操纵顶柱复位板	Reset plate	1
02	PFNA0127	垫圈 $\phi 4$	Washer $\phi 4$	2
03	PFNA0131	螺钉 M5x10	Screw M5x10	2
04	PFNA2504	操纵顶柱组件	Manipulating the top column assembly	1
05	PFNA2505	操纵顶柱弹簧	Spring	1
06	PFNA2506	操纵顶柱	Manipulating of the top pillar	1
07	PFNA2507	螺钉 M4x6	Screw M4x6	1
08	PFNA2508	操纵弯杆组件	Control rod bending component	1
09	PFNA2509	操纵弯杆	Control rod bending	1
10	PFNA2510	操作弯杆销 4x16	Pin	1
11	PFNA2511	脚膝抬压脚操作顶柱组件	Presser foot lifting component of knee	1
12	PFNA2107	复位弹簧	Spring	1
13	PFNA2513	操纵弯杆挡片组件	Baffle assembly	1
14	PFNA0127	垫圈 $\phi 4$	Washer $\phi 4$	2
15	PFNA0325	螺钉 M4x8	Screw M4x6	2
16	PFNA2516	抬压脚电磁铁	Presser foot lifting electromagnet	1
24	PFNA2524	电磁铁安装座	One way bearing electromagnet mounting base	1
25	PFNA2525	特殊螺钉（长款）	Screw	2
26	PFNA0106	螺钉 M6x10	Screw M6x 10	3
27	PFNA0201	螺钉 M6x30	Screw M6x 30	2





26. 电控 Electric control

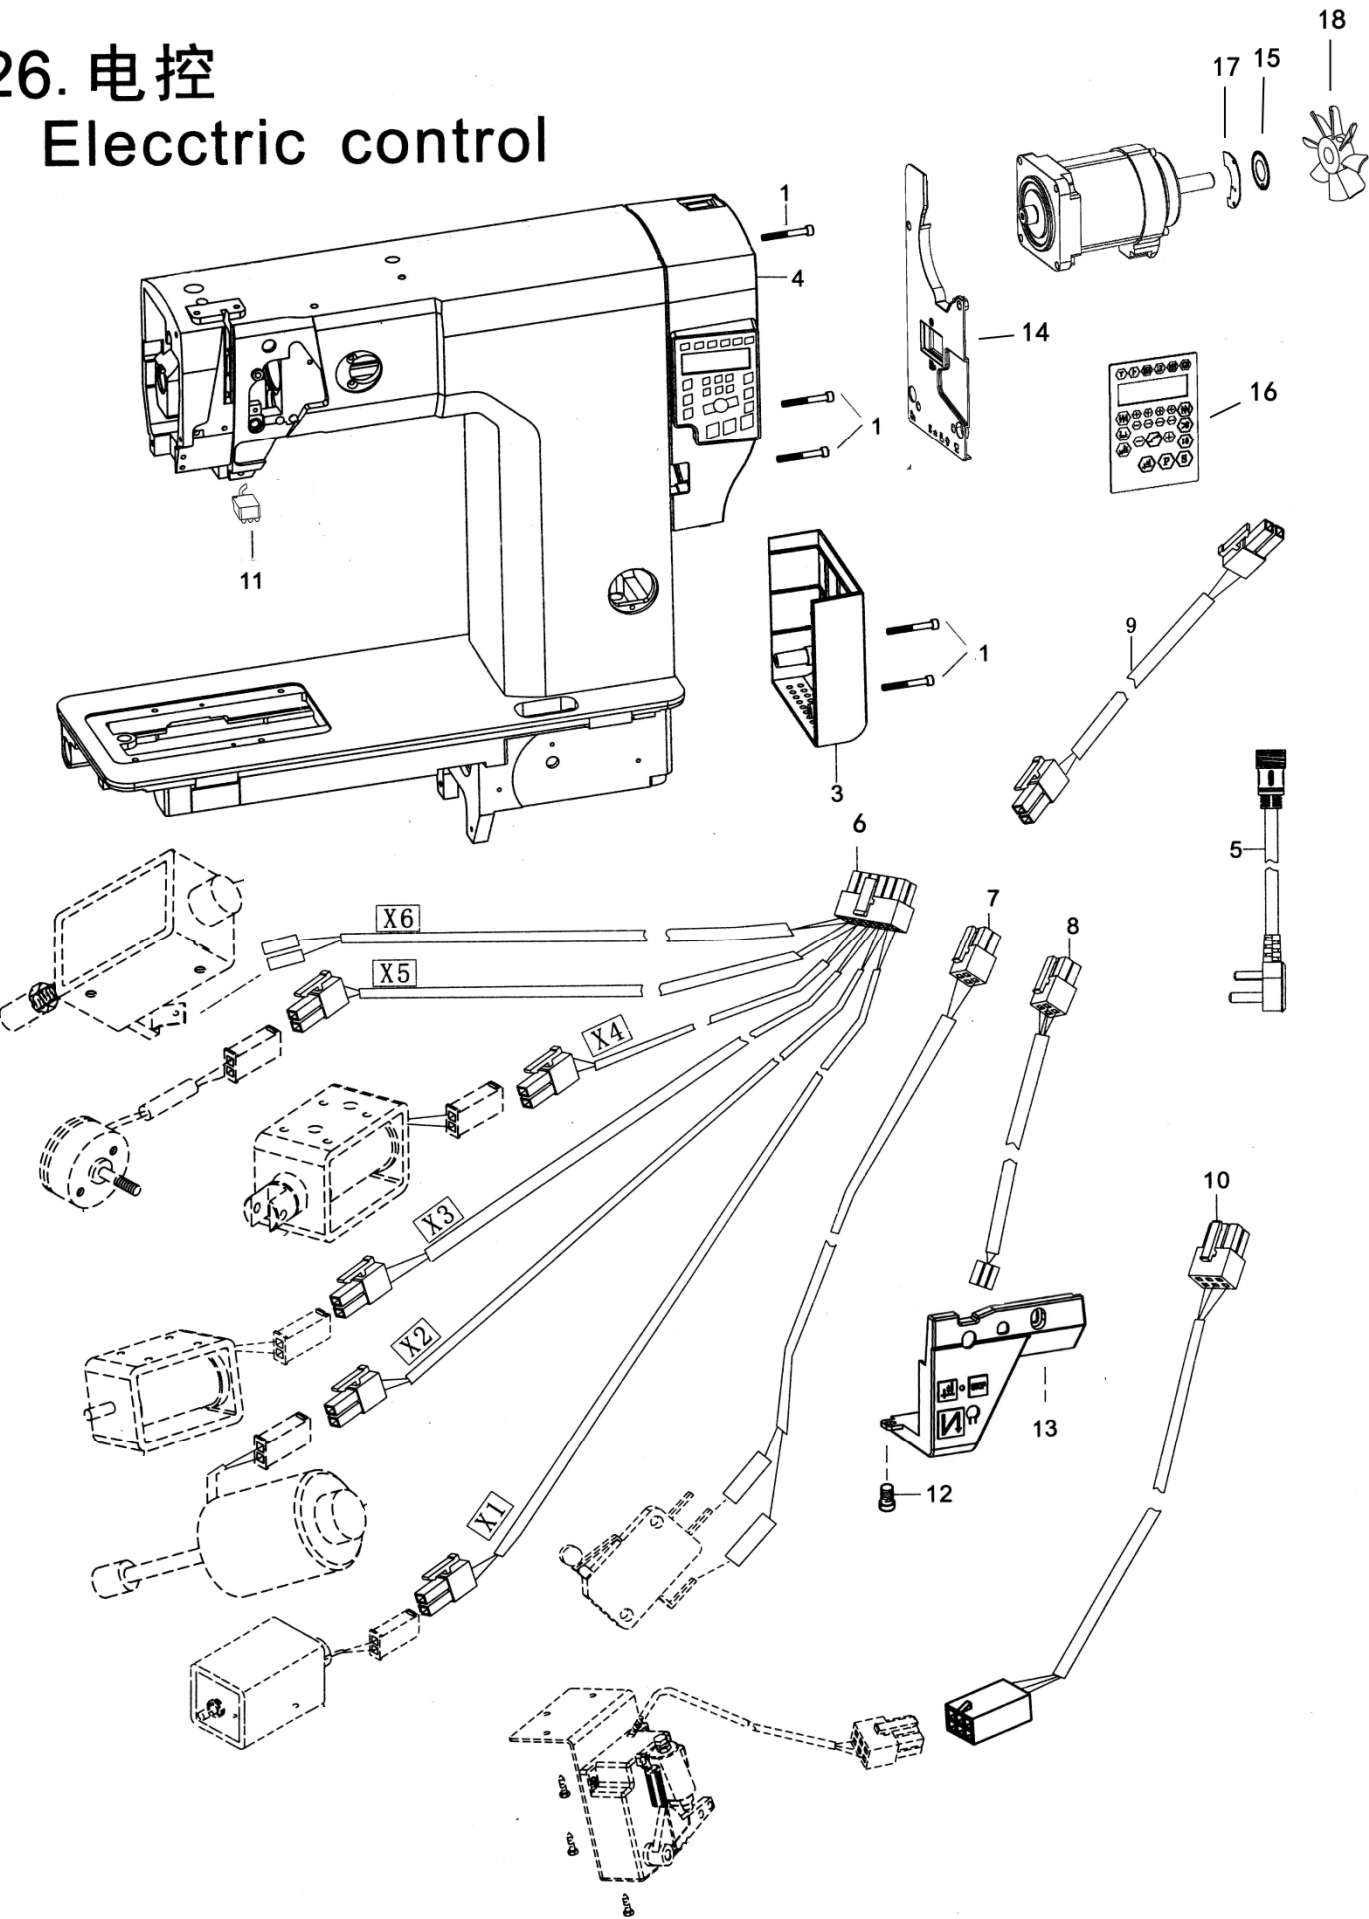

Per.No	Part No	名称	Description	Qty
01	PFNA0718	螺钉 M5x25	Screw M5x20	1
02	PFNA0718	螺钉 M5x25	Screw M5x40	4
03	PFNA2603	一体机下罩盖	Cover	1
04	PFNA2620SF06	NA35UT 电控箱	NA35UT electric control box	1
05	PFNA2605	电源转接线	The power adapter cable	1
06	PFNA2606	主控线	Main control line	1
07	PFNA2607	点动倒缝开关线	Swich line	1
08	PFNA2608	倒缝开关线	Reverse stitching switch wiring	1
09	PFNA2609	机头灯转接线	head lamp adapter	1
10	PFNA2610	踏板转接线	Redal switch line	1
11	PFNA261301	外接衣车灯	Exterior clothes lamp	1
12	PFNA0102	螺钉 M4x8	Screw M4x 8	2
13	PFNA2613	快捷按键	Shortcut keys	1
14	PFNA2620SF01	NA35UT 电控主板	NA35UT motherboard	1
15	PFNA2620SF04	主电机编码器	Main motor encoder	1
16	PFNA2620SF05	NA35UT 电控薄膜开关	NA35UT membrane switch	1
17	PFNA2620SF07	主电机光栅片	Main motor grating	1
18	PFNA2620SF08	电控主马达风扇	Main motorfan	1

27. 附件(1)







Accessories components (1)

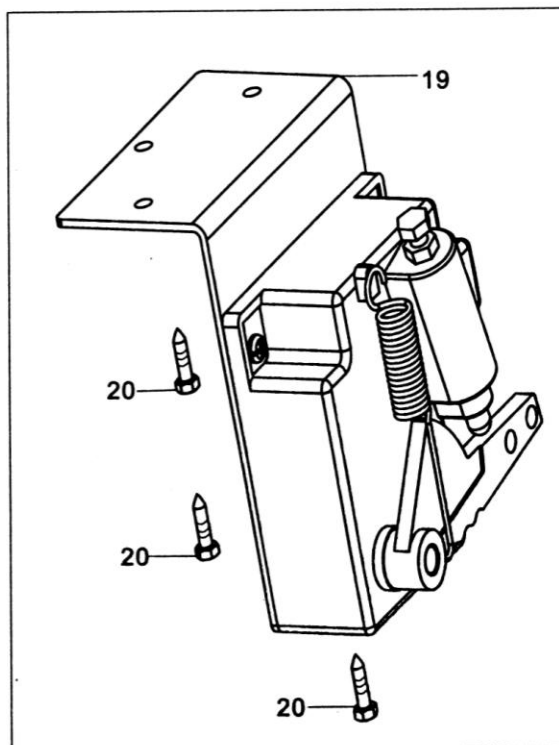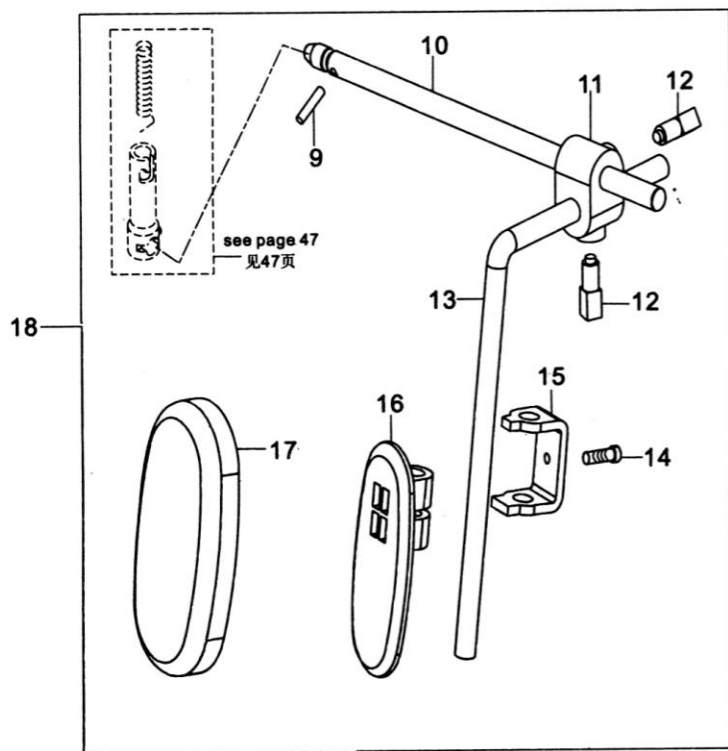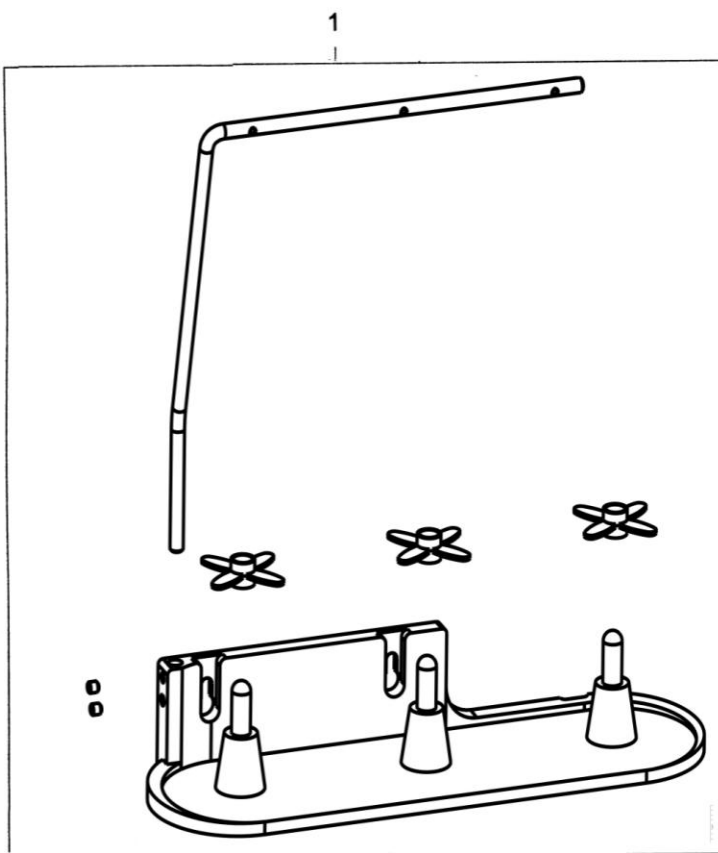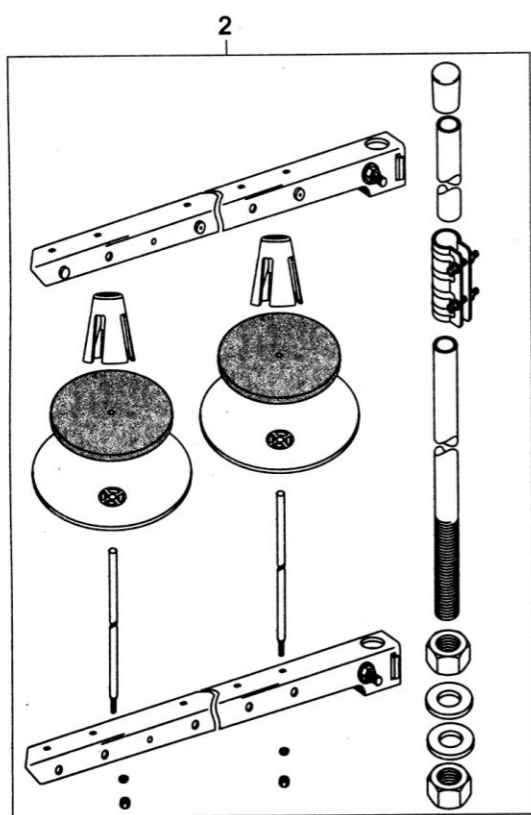



Per.No	Part No	名称	Description	Qty
01	PFNA2701	一体式线架	Two wire frame component	1
02	PF55501127	外置线架	Three wire frame component	1
09	PFNA2709	销 4x18	Pin 4x18	1
10	PFNA2710	操纵连杆	Control rod	1
11	PFNA2711	操纵杆接头	Control rod joints	1
12	PFNA2712	螺钉 M8x14	Screw M8x14	2
13	PFNA2713	操纵杆	Control stick	1
14	PFNA2714	螺钉 M5x13.3	Screw M5x13.3	1
15	PFNA2715	膝控调节支架	Knee control adjusting bracket	1
16	PFNA2716	膝控操纵架	Knee control frame	1
17	PFNA2717	膝控软垫	Knee control pad	1
18	PFNA2718	膝控组件	Knee control assembly	1
19	PFNA2620SF03	踏板	Pedal	1
20	PFNA2720	踏板螺钉	Self tapping Screw	3
21	PFNA2721	操纵杆垫	Lever pad	1

28. 附件(2)

 Accessories components (2)

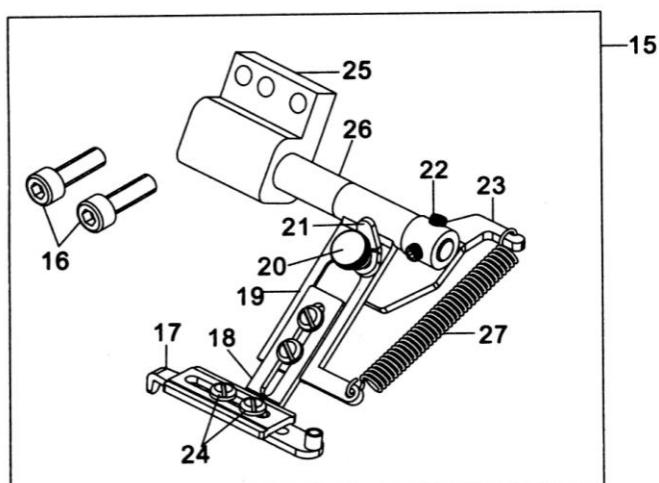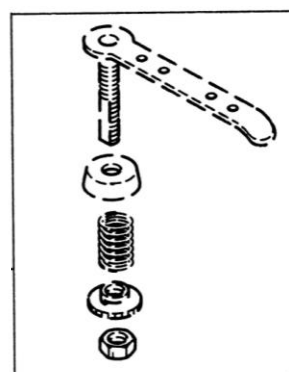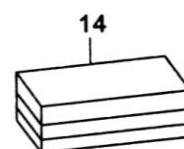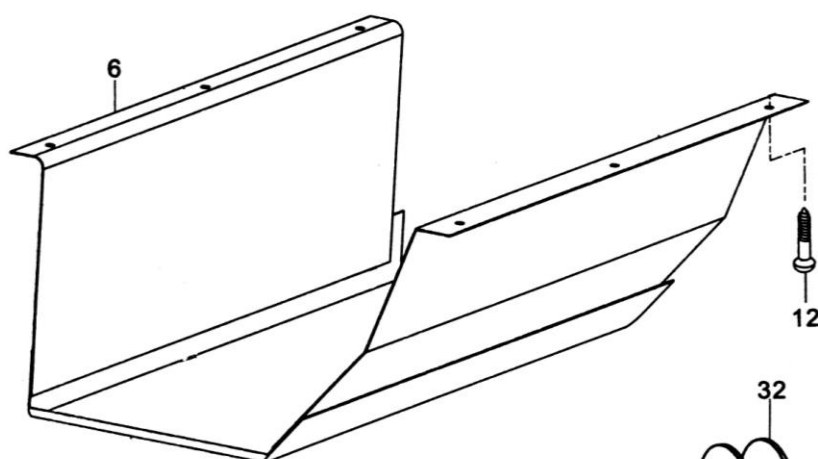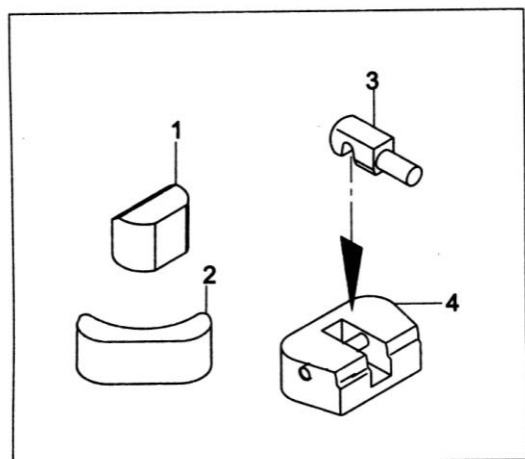

33~34 (for 591)
35~36 (for 592)

 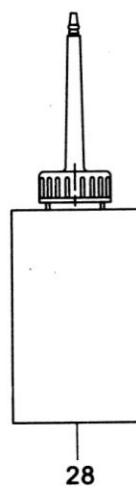


41

Per.No	Part No	名称	Description	Qty
01	PFNA2801	机头支座	Head support	2
02	PFNA2802	机头座垫	Head cushion	2
03	PFNA2803	机头铰链	Head hinge	2
04	PFNA2804	机头铰链座组件	Head hinge base assembly	2
05	PFNA2805	木支架组件	Wood bracket assembly	1
06	PFNA2806	机头油盘	Head pan	1
12	PFNA2812	螺钉 ST4. 2x20-C-H	Wood screw ST4. 2x20-C-H	6
14	PFNA2814	机头罩	Head cover	1
15	PFNA2815	罗拉车靠边器	Pull device	1
16	PFNA2816	螺钉 M5x16	Screw M5x16	2
17	PFNA2817	靠边板组件	Side plate assembly	1
18	PFNA2818	调节板	Adjusting plate	1
19	PFNA2819	导向板焊接件	Welding guide plate	1
20	PFNA2820	滚花高头螺钉 M4x12	Screw M4x12	1
21	PFNA2821	紧固扳手	Fastening wrench	1
22	PFNA2822	螺钉 M6x5	Screw M6x5	1
23	PFNA2823	调整焊接件	Welding adjustment	1
24	PFNA2824	螺钉 M4x5	Screw M4x5	4
25	PFNA2825	安装座	Mounting seat	1
26	PFNA2826	轴	Shaft	1
27	PFNA2827	拉簧	Drag spring	1
28	PFNA2828	油壶	Oil pot	1
29	PFNA2829	内六角扳手	Inner six angle wrench	1
30	PFNA2830	小螺丝刀	Small screwdriver	1
31	PFNA2831	中螺丝刀	Medium screwdriver	1
32	PFNA1762	梭芯	Bobbin	3
33	PFNA0442	机针 DPX5#14 (for591-M)	Needle DPX5 90/14 (for591-M)	4
34	PFNA0443	机针 DPX5#19 (for591-H)	Needle DPX5 120/19 (for591-H)	4
35	PFNB0444	机针 DPX5#14 (for 592-M)	Needle DPX5 90/14 (for 592-M)	4
36	PFNB0445	机针 DPX5#19 (for 592-H)	Needle DPX5 120/19 (for 592-H)	4
37	PFNA2837	油壶标签	Oil pot label	1
40	PFNA2840	马叉螺钉 M6	Fork screw M6	2
41	PF8420M-D31523	垫片 M6	Gasket M6	4


29. 步进款专用件

Stepper motor parts

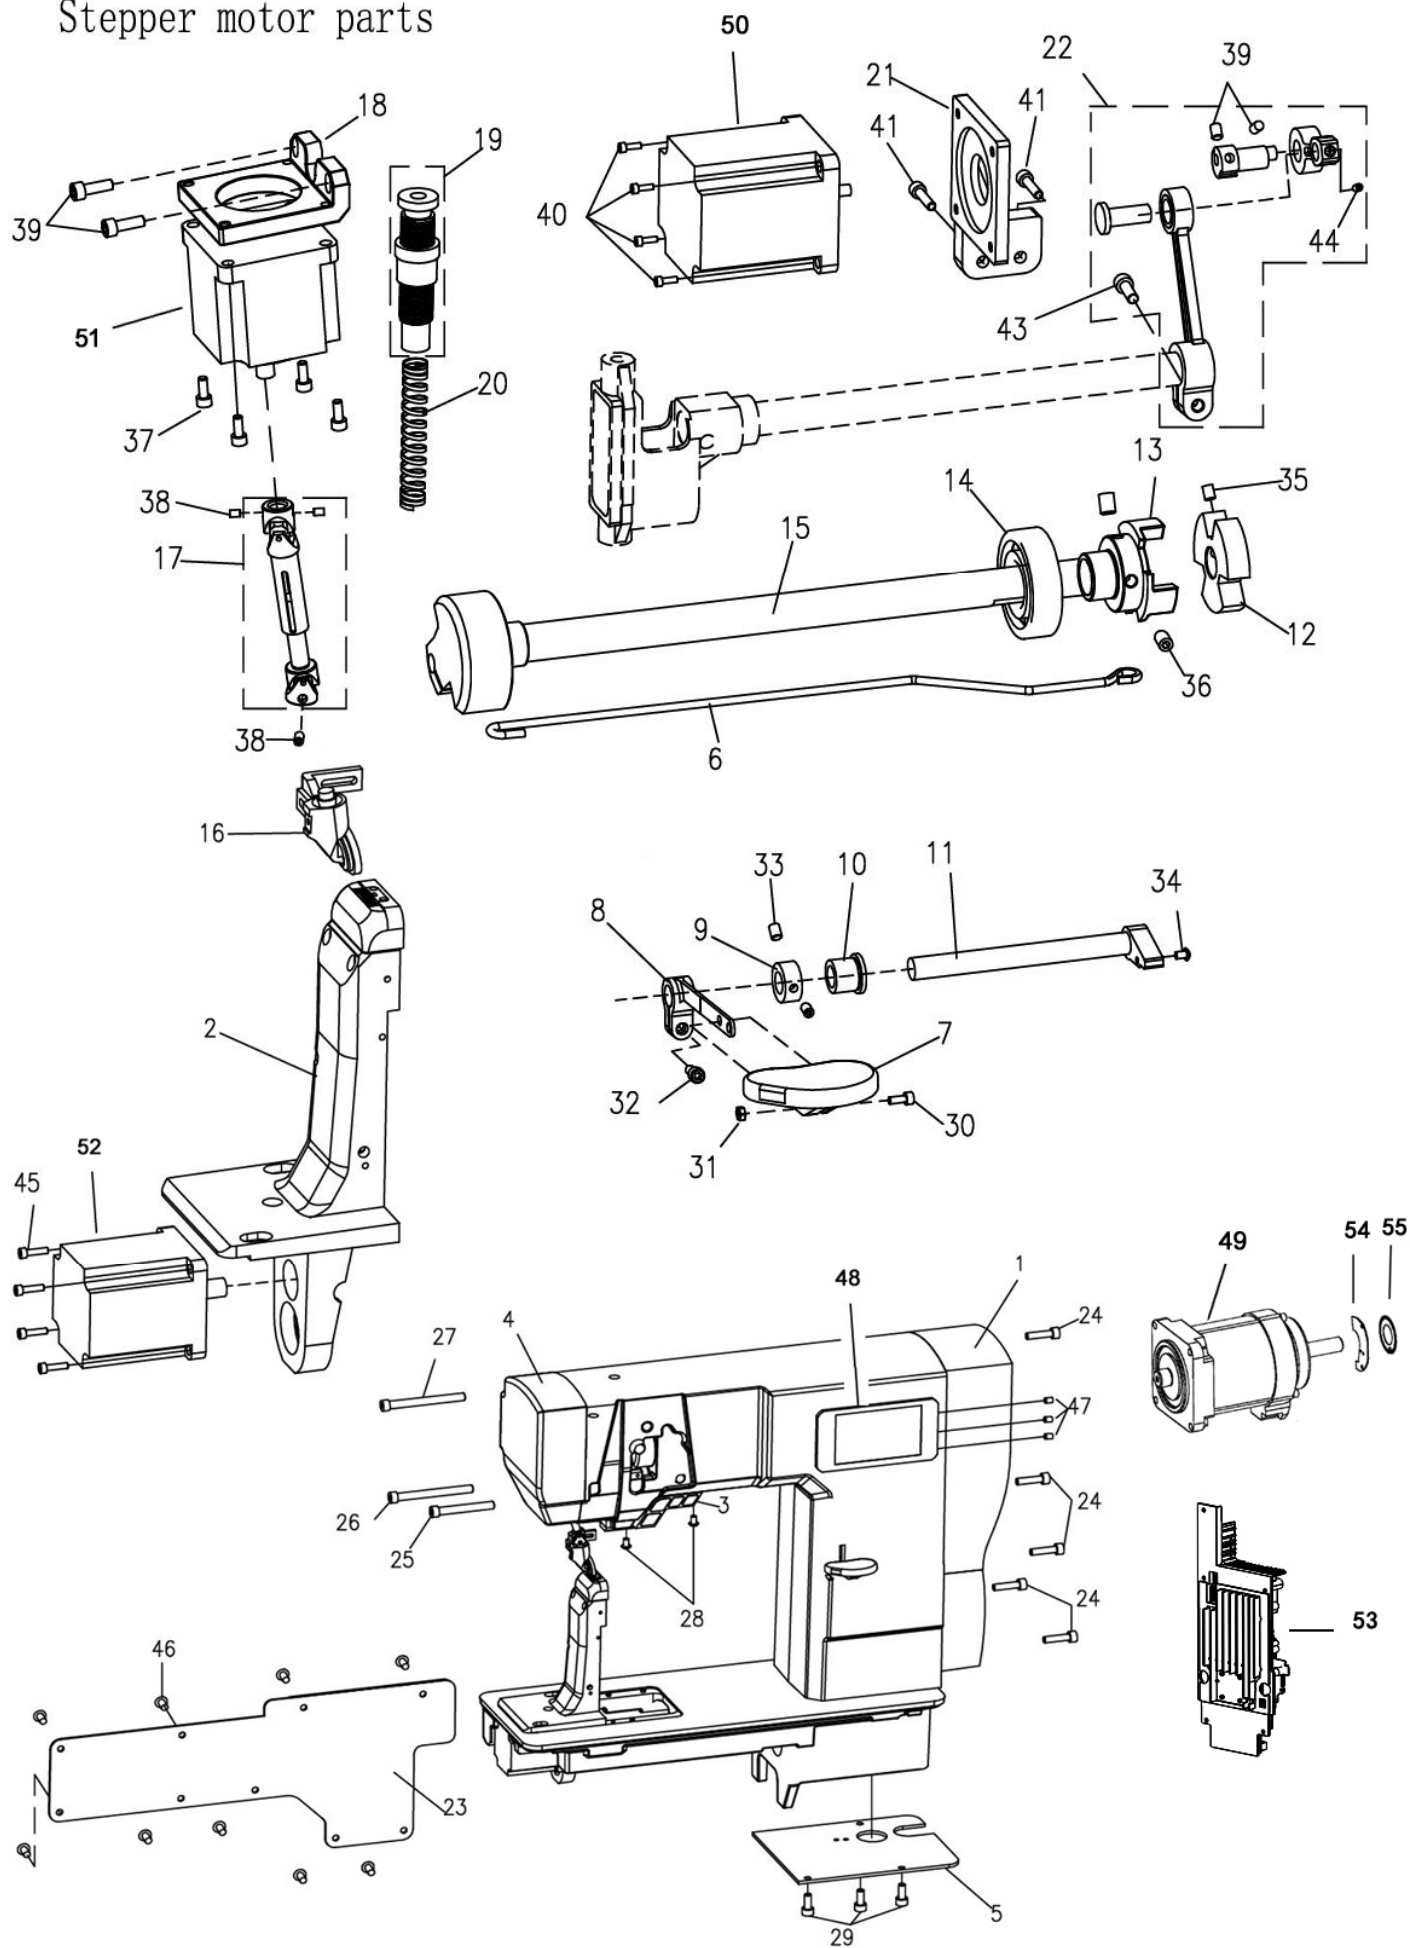

Per.No	Part No	名称	Description	Qty
01	PFNC0126SF02	NA35DUT 电控箱	NA35DUT electric control box	1
02	PFNC0102	1591 左立柱	Feed support	1
03	PFNC010301		Dichromatic light	1
04	PFNC010401	1591 面罩	Panel	1
05	PFNC0105	1591 底板	Bottom plate	1
06	PFNC0106	1591 压脚拉杆	Connecting rod	1
07	PFNC0107	塑料倒缝扳手	Spanner of reversal stitch	1
08	PFNC0108	扳手挡圈	handle bushing	1
09	PFNC0109	倒缝轴挡圈	Link	1
10	PFNC0110	倒缝轴套	bushing	1
11	PFNC0111	倒缝轴	Actuating switch shaft	1
12	PFNC0112	联轴器	Coupling rubber	1
13	PFNC0113	主轴后套	Bearing sleeve	1
14	PFNC0114	60/22-Z 主轴后轴承	Bearing60/22-Z	1
15	PFNC0115	1591 曲柄主轴	Counter weight assy	1
16	PFNC0116	1591 压脚轮组件	Idler wheel foot asm	1
17	PFNC0117	万向节组件	Universal Joint Assembly	1
18	PFNC0118	压脚滚轮电机安装板	Motor mounting platel	1
19	PFNC0119	调压螺柱	PRESSER ADJUSTING SCREW	1
20	PFNC0120	压紧杆弹簧	PRESSER BAR SPRING	1
21	PFNC0121	摆针电机固定板	Motor mounting plate2	1
22	PFNC0122	长短铝连杆组件	Connecting Rod Assembly	1
23	PFNC0123	1591 后盖板	Back cover board	1
24	PFNA0718	螺钉 M5x20	Screw M5x20	5
25	PFNA0112	螺钉 M5x35	Screw M5x35	1
26	PFNA0111	螺钉 M5x60	Screw M5x60	1
27	PFNA0111	螺钉 M5x60	Screw M5x60	1
28	PFNA0120	圆头螺钉 M4x6	Screw M4x6	2
29	PFNA0131	螺钉 M5x10	Screw M5x10	3
30	PFNA0325	螺钉 M4x10	Screw M4x10	1
31	PFNA0116	螺母 M4	NutM4	1
32	PFNA0131	螺钉 M5x10	Screw M5x10	1
33	PFNA1810	紧定螺钉 M4x6	Screw M4x6	2
34	PFNA0120	圆头螺钉 M4x6	Screw M4x6	1
35	PFNA0713	紧定螺钉 M6x8	Screw M6x8	2
36	PFNA0713	紧定螺钉 M6x6	Screw M6x8	2
37	PFNA0724	螺钉 M5x12	Screw M5x12	4
38	PFNA1810	紧定螺钉 M4x6	Screw M4x6	4
39	PFNA0801	螺钉 M6x16	Screw M6x16	2
40	PF1790S0326	螺钉 M4x12	Screw M4x12	4

29. 步进款专用件 Stepper motor parts

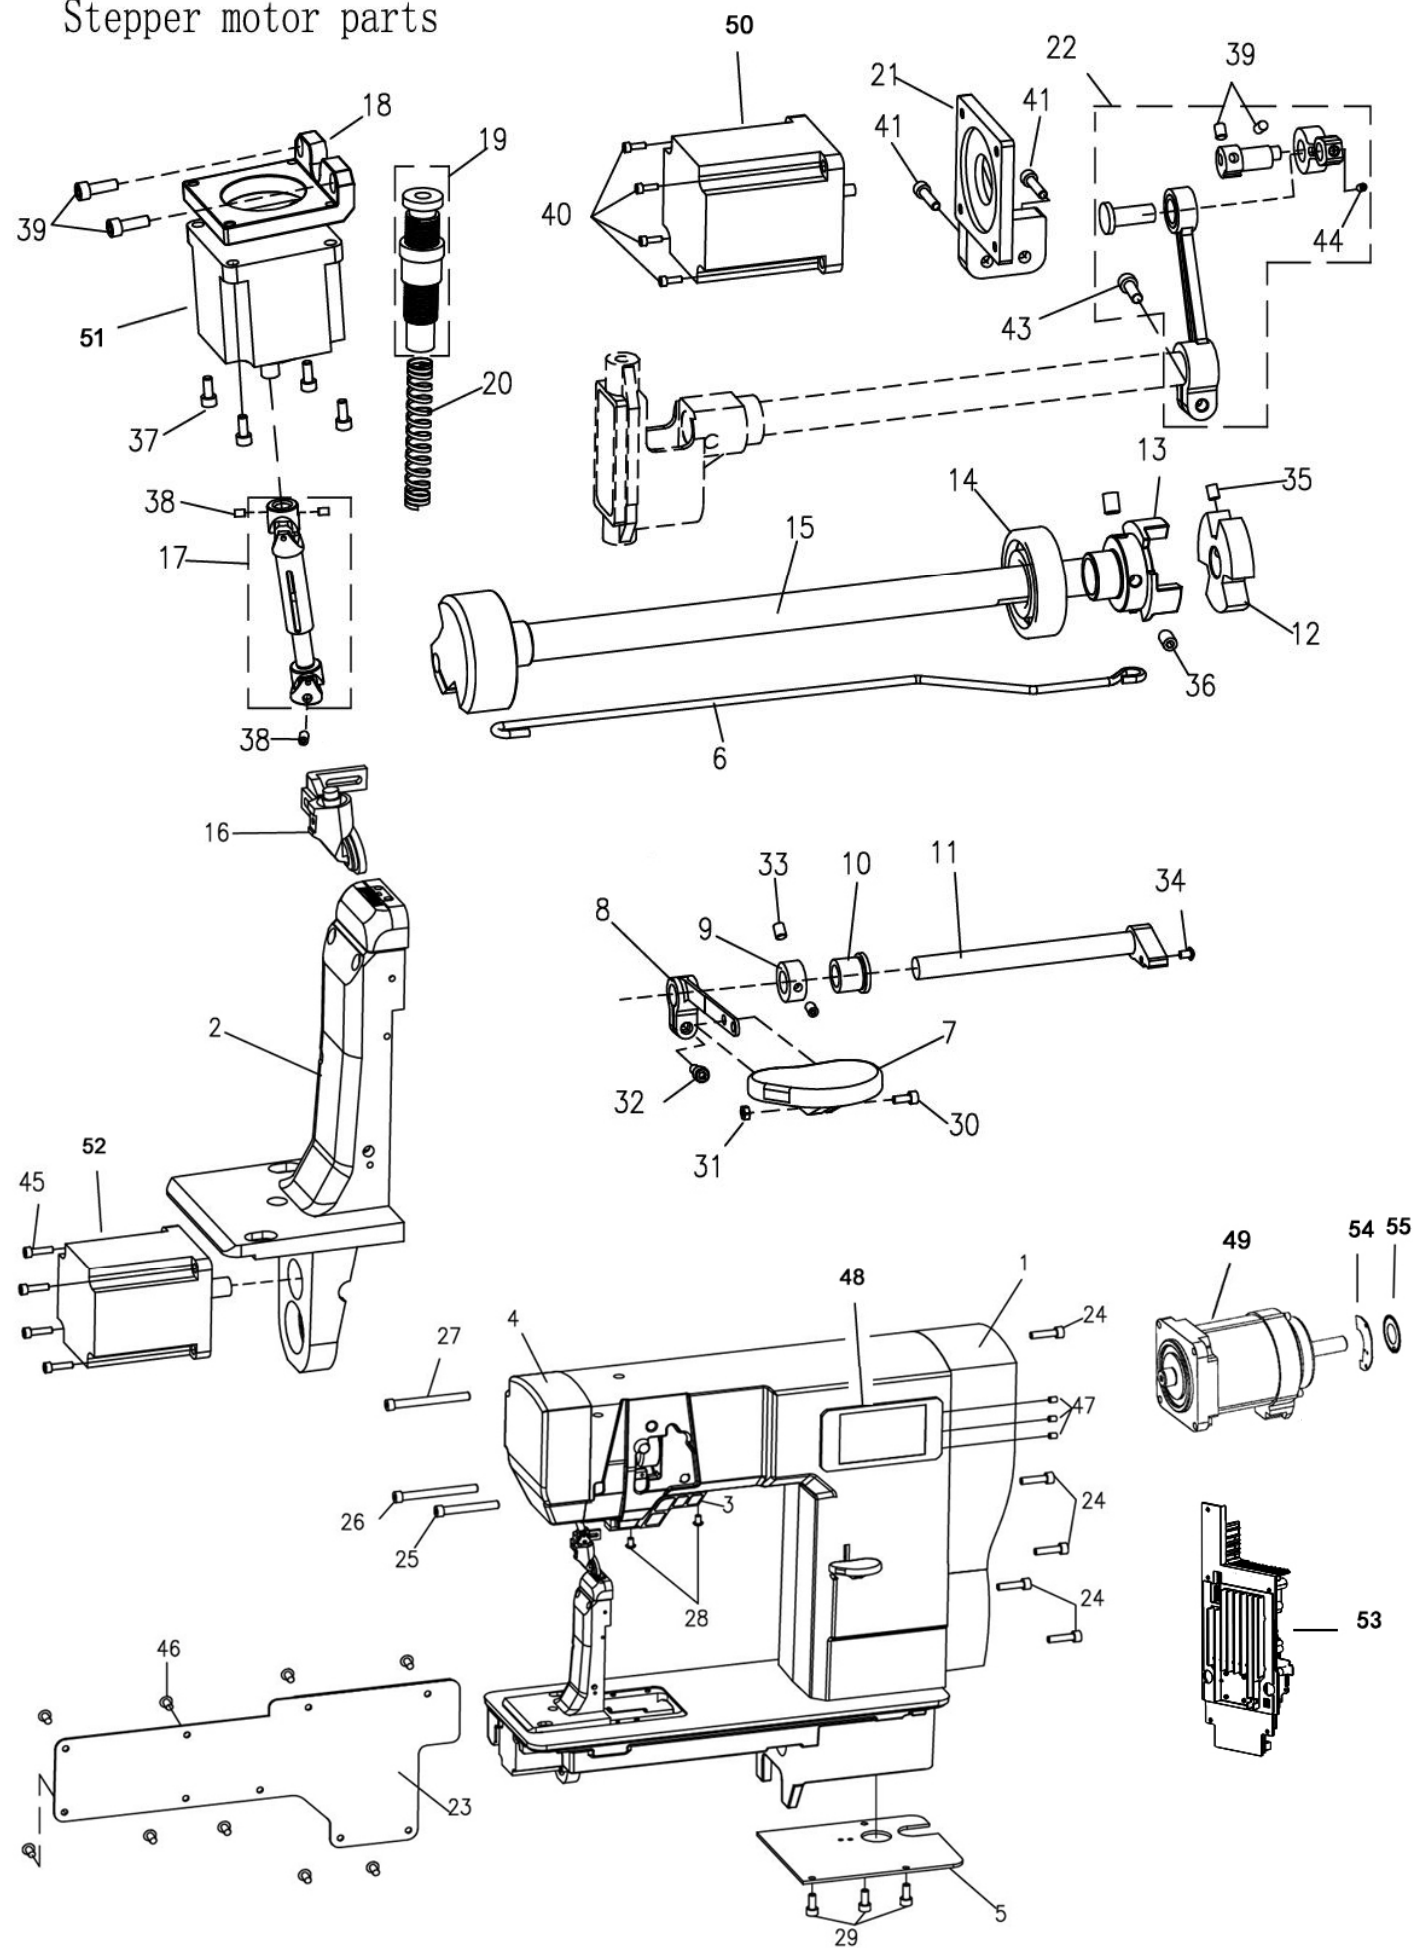

Per. No	Part No	名称	Description	Qty
41	PFNA0718	螺钉 M5x20	Screw M5x20	2
43	PFNA0801	螺钉 M6x16	Screw M6x16	1
44	PFNA1810	紧定螺钉 M4x6	Screw M4x6	1
45	PFNA0718	螺钉 M5x20	Screw M5x20	4
46	PFNA0102	圆头螺钉 M5x10	Screw M5x10	9
47	PFNA1810	紧定螺钉 M4x6	Screw M4x6	3
48	PFNC0126SF05	电控显示屏	Electronic control display	1
49	PFNC0126SF01	步进款主马达	Stepper main motor	1
50	PFNC0126SF10	摆针电机	Pendulum motor	1
51	PFNC0126SF08	上送料电机	Upper feeding motor	1
52	PFNC0126SF09	下送料电机	Lower feeding motor	1
53	PFNC0126SF03	NA35DUT 电控主板	NA35DUT motherboard	1
54	PFNC0126SF06	主电机编码器	Main motor encoder	1
55	PFNC0126SF07	主电机光栅片	Main motor grating	1